



BS-020

Kaen Stove Sakan

Instruction Manual: Ver 1.10



DANGER



Ventilation Required

Once or twice an hour

Do Not Cook Indoors

Do Not Move While Lit

Thank you very much for purchasing this Snow Peak product. This product is an alcohol stove. Please be sure to read this instruction manual for safe long-term use. Also, please keep it in a safe place after reading it. If you have any questions or cannot understand the text in the manual, please be sure to contact Snow Peak Customer Service before use.

Contents

Part names

Specifications

Material	Stainless steel, Heat resistant glass
External dimensions	When used: dia 205 x 170 (h) mm/8" x 6.7" (h) (stove only), Storage case: dia 235 x 210 (h) mm/9.3" x 8.3" (h) When stored: dia 235 x 120 (h) mm/9.3" x 4.7" (h) (including the storage case)
Weight	Stove/1000 g (35.3 oz), Hook bar/30 g (1.1 oz), Storage case/50 g (1.8 oz)
Diameter of pan used	A pan with a maximum bottom diameter of 11 cm to 23 cm/4.3" to 9.1" can be used. * Even if the pan diameter is within the range of use, do not use an unstable one when it is placed on this product.
Allowable fuel	BS-001 Bioethanol Fuel 1L * Do not use other fuels as safety cannot be guaranteed.
Stove body capacity	200 ml/6.7 fl oz
Burning time	Burning up to about 70 minutes with 200 ml/6.7 fl oz (The burning time and boiling time vary depending on the usage conditions.)
Country of origin	China

• From the viewpoint of assuring safety, use the optional BS-001 Bioethanol Fuel 1L when using this product. When the cooker is active and burning bioethanol fuel, soot will be generated due to the characteristics of the fuel, and the flame will tend to turn red. Please use bioethanol fuel specified by us to increase visibility and for the product concept of enjoying viewing the flame.

Important precautions to note when using this product are provided as follows. Please read them carefully to avoid accidents and use this product safely. Then, please be sure to keep this manual in a safe place.

Before use



DANGER

Misuse could easily result in a serious accident or death.

Ventilation Required

Once or twice an hour

When using the trivet, use the product outdoors

Do Not Use this product in a closed space such as a car, tent, shelter, etc. There is a risk of carbon monoxide poisoning death or suffocation due to oxygen deficiency. Also, please be careful about ventilation in small spaces, even when outdoors.

When ventilating, use a ventilation fan or provide openings in two or more rooms where the wind enters and exits to help ensure sufficient ventilation.
*When a ventilation fan is used, there may not be sufficient ventilation unless a window at a remote location is opened.
Do not use this product in places where the windows are frozen closed or where there is insufficient ventilation such as in a basement.

When using the trivet, use the product outdoors

If placing the cooker on the trivet, be sure to only use the product outdoors. Please be careful.

When using this product, prepare a fire extinguishing spray and place it near the product to use if necessary.

Do not refuel the stove body during use. It is very dangerous because it may ignite the fuel being replenished and cause a fire. Make sure that the flame is extinguished before refueling, and make sure that the stove body is completely cold.

Use the dedicated fuel specified by Snow Peak.

Approved fuel

BS-001 Bioethanol Fuel 1L

Other manufacture

[Reason] It may cause an unexpected accident. Please note that if you use a fuel other than the type specified, the product will not be covered by the product warranty.

Please read the instructions on the fuel before use.
[Reason] There are guidelines you must follow when using fuel. Please check before use.

If you ingest fuel, do not induce vomiting and seek medical attention immediately.

If you accidentally get fuel in your eyes, wash your eyes and behind your eyelids thoroughly with clean water. If you can easily remove contact lenses, remove them and wash your eyes thoroughly. Seek medical attention after washing.

If fuel gets on your skin, wash it off thoroughly with water and soap.

If you feel sick while using the equipment or adding fuel, stop immediately and rest in a well-ventilated place. If you feel any abnormalities, seek medical attention.

Do not roast ingredients using this product. Roasted ingredients can be harmful to your health. In addition, the oil of the ingredients may enter inside the product and prevent correct combustion.

Never repair or modify yourself.
[Reason] This product is made with precision. Modifications not only reduce performance, but can also cause incomplete combustion and fuel leaks. If repairs are necessary, please contact the dealer where you purchased the product or Snow Peak Customer Service.

Before igniting the stove body, be sure to check that the bioethanol fuel is not leaking and that there are no holes open other than the combustion port.
[Reason] If you ignite with the bioethanol fuel leaking, you may get burned or fire due to abnormal combustion. If you feel any abnormalities, stop using the product immediately and contact the dealer where you purchased the product or Snow Peak Customer Service.

Do not intentionally inhale the vaporized gas of bioethanol fuel.
[Reason] If you intentionally inhale this gas, you may experience a shortage of oxygen, which is extremely dangerous. Be sure to never do this under any circumstances.

Do not tip, shake, or carry while the flame is alight.
[Reason] There is a danger that you will be burnt if the wind fans the flame in a different direction or the flame suddenly becomes bigger. There is a risk of fire due to spillage of lit fuel.

Be sure to use this product as a complete set, and do not use the stove body by itself. Otherwise, it may cause the product to tip over and lead to fire.

How to use

1. Take out the stove and hook bar from the storage case. And then remove the trivet and windscreen. * At this time, remove all packing materials that cover the parts.

2. Remove the regulator and the cap from the liquid pan, and turn the lid counterclockwise to remove it. * At this time, remove the lid while holding down the stove body so that the stove body does not rotate.

3. Put 200 ml/6.7 fl oz of BS-001 bioethanol fuel into the stove body. Do not add more than 200 ml/6.7 fl oz of fuel as doing so is dangerous.

4. Put the cap on the stove body, attach it so that the cap is aligned with the dents of the liquid pan, and then put the windscreen on the stand.

5. Ignite the upper part of the stove body using a long-tipped lighter. At first, a flashing flame will rise from the liquid in the center of the stove. After a while, the flame moves to the vaporized bioethanol fuel coming from the fuel injection port on the circumference of the upper part, and it becomes a stable flame.

6. To extinguish the flame, insert the flame extinguisher lid attached to the hook bar inside through the gap between the liquid pan and the windscreen, cover the entire upper part of the stove body, and make sure that the flame is extinguished completely. (Leave the lid on the cap for about 20 seconds to extinguish the flame.)

To shut off the air and extinguish the flame, put the flame extinguishing lid in the center of the stove body at this time. Please note that the flame will not be extinguished unless it is completely covered.

How to adjust the flame strength

[The flame strength can be adjusted by using the regulator.]

1. Ignite the upper part of the stove body using a long-tipped lighter, and check that the flame is stable.
2. Insert the hook attached to the tip of the hook bar into the hole of the regulator handle as shown below, and lift the regulator. Then, put it on the cap.

① The flame strength can be reduced by covering it with the regulator.
② The flame strength can be adjusted by adjusting the size of the air intake port.

CAUTION Use the regulator after the combustion becomes stable. If you use the regulator when igniting the flame, the flame may go out or ignition may fail.

3. Insert the hook of the hook bar inside though the gap between the liquid pan and the windscreen, attach it to the regulator handle, and rotate the regulator. The size of the air intake port changes, enabling you to adjust the flame strength.

CAUTION It may take a few seconds for the flame strength to change, so rotate the regulator little by little.

CAUTION At this time, insert the hook bar so that the hook bar does not hit the windscreen and cause it to come off.

When rotating the regulator, apply the hook of the hook bar to the handle and rotate. If the hook gets caught in the handle, do not panic, just pull forward, and place the regulator on the inside of the windscreen to remove it.

4. To extinguish the flame, use the hook of the hook bar to remove the regulator from the top of the windscreen, and cover the cap by using the flame extinguisher lid attached to the hook bar in the same manner as the usage procedure. At this time, the regulator is extremely hot. Be careful of burns and where you place the regulator.

How to use the trivet

1. Rotate the liquid pan, and align three holes on the circumference of the liquid pan with the dents on the circumference of the top of the stove base.

2. Insert the edge of the trivet into the hole on the circumference of the liquid pan.

Troubleshooting

When igniting, do not place your hands or body close to the top of the fuel injection port or look into the fuel injection port.
[Reason] There is danger that a large flame may cause burns.

Do not set up multiple stoves under one cooking utensil.
[Reason] The cooking utensil and this product may fall over, which is very dangerous.

Do not use this product in a place where there are other sources of heat, such as near a heater or a bonfire.
[Reason] The other heat source may heat up this product, which may increase the risk of ignition.

Do not use a griddle, gridiron, or smoker with this stove.
[Reason] A griddle has a large amount of radiant heat and there is a risk of abnormal combustion. If you use a griddle or a smoker, the oil or moisture from the food may enter the stove and cause a malfunction.

Store the stove or bioethanol fuel in an area away from children.
[Reason] Store the stove or bioethanol fuel in an area out of reach of children so that they are not put in danger.

Do not drop or subject the stove to impact in any other way.
[Reason] This may alter the shape or damage the stove, and can cause a malfunction.

CAUTION


Misuse could result in injury to the user and/or damage to property.

- Do not touch the stove body or trivet unnecessarily as they are very hot during and after use. Firmly grasp the body with heat-resistant gloves. [Reason] There is a risk of burns.
- To help ensure safety, ignite this product using a long-tipped lighter. Also, be sure to carry matches or a lighter (non-electronic) with you when traveling in the mountains or camping. Do not ignite using a fire starter as this product may tip over.
- When storing the bioethanol fuel, remove the nozzle and be sure to cover it. Please check the inside periodically. [Reason] There is a risk that liquid may leak if there are scratches or rust on the exterior.
- After use, perform inspection and cleaning. Then, disassemble the trivet and store it in the storage case, and close the lid tightly on the stove body. [Reason] Moisture, dirt, and dust adhering to this product may cause clogging and rust, resulting in malfunction. Carry out an inspection and cleaning to prevent any problems occurring next time.
- Bioethanol fuel cannot be carried on an aircraft. [Reason] By law, bioethanol cannot be carried on an aircraft.
- The stove body and each part become very hot during use and for a while after use. When putting this product away, check in advance that it has cooled down.
- If the lid is attached or removed with excessive force, the O-ring will be damaged. Exercise care when tightening the lid.
- Do not use when there is strong wind. [Reason] This product may tip over and cause a fire. Also, due to the structure, the flame may be blown out by the wind.
- Make sure that there is no foreign matter such as dust inside the body before using. If there is a foreign matter inside the body, it may lead to a malfunction of the body. If foreign matter is inside the body, remove it before use.
- Do not lay flammable or heat-sensitive materials (corrugated cardboard, vinyl cloth, table cloth, etc.) under this product, or position any objects that obstruct ventilation.
- When using this product with a cooking utensil, pay attention not to let the liquid being cooked spill over. [Reason] If the spilled liquid gets inside this product, it may stop functioning.
- Do not use auxiliary tools or optional parts that have not been confirmed to be compatible. [Reason] The combined use of auxiliary tools and optional parts that have not been confirmed to be compatible with this product may cause an unexpected accident.



DANGER

During use, do not insert the ends of the trivet into the holes of the liquid pan. Doing so will lower the trivet and increase carbon monoxide during cooking, which is dangerous.

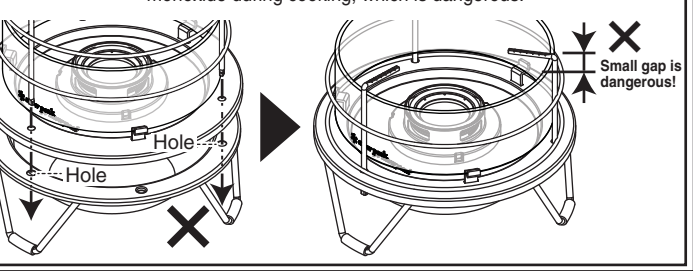

How to store

Before storing, make sure that the stove body is cold. Please note that the storage case may melt if the stove body is stored while hot.

Do not store the fuel inside the stove body for a long period of time. For long-term storage, completely evaporate the bioethanol fuel in a location where there are no other flames, completely remove the bioethanol fuel, and securely close the lid before storing. [Reason] Leakage may occur, causing ignition, fire, or abnormal combustion.

Troubleshooting

Symptoms	Points to check	Corrective action
Alcohol leaks out while it is being carried	-Is the lid loose? -Is the lid or body deformed? -Is the O-ring worn, deteriorated, or damaged?	-Tighten until the lid completely locks. -If the lid or body is deformed, stop using this product immediately and contact the dealer. -Immediately discontinue use and replace the O-ring with a new one.
Does not ignite	-Is the correct fuel being used? -Is there any rainwater or foreign matter mixed in?	-Use genuine bioethanol fuel. -Remove rainwater and foreign matter, and dry the inside of the body sufficiently.
Small flame	-Is the correct fuel being used?	-Use genuine bioethanol fuel.
The flames are uneven	-Are there any foreign substances in the body? -Is the correct fuel being used? -Is there any foreign matter in the fuel injection port, or is it clogged?	-Clean the inside of the body and remove foreign matter. -Use genuine bioethanol fuel. -Clean the fuel injection port and remove foreign matter.
The flame goes out during use	-Is the wind strong? -Are you using the trivet?	-Stop using the product when the wind is strong or when it rains. -Use the trivet.
Burnt color appears on the body and trivet	-Is the burner completely covered with a lid without any gaps?	-It is due to the structural characteristics of the product and is not a malfunction. -Adjust the position of the lid.

If these measures do not solve the problems, stop using the product immediately and contact the dealer you purchased the product from or Snow Peak Customer Service.

Please check through the above symptoms and causes, and if malfunctions persist or the cause is not clear, contact the dealer where you purchased the product, or us.

Precautions for use

Do not use a product that has a leak, has been subjected to impact, or that has stopped working.
1. Do not use the product for any purpose other than cooking.
2. Pots that can be used should have a diameter of 23 cm/9.1" or less (however, the outer diameter of 1 cm/0.4" from the bottom of the pot is 19 cm/7.5" or less) and a capacity of 4 liters/4.2 qt or less. A pot that is too large is dangerous because it utilizes radiant heat to heat up ethanol and because the weight balance may become unstable and cause it to tip over.
3. The combustion state (flame condition, power, etc.) changes depending on the air temperature and the ethanol temperature.
4. The flame may be extinguished due to strong wind or ingredients spilling onto it. Keep an eye on it during use.
5. If ingredients are spilled, be sure to clean the stove using a cloth.
6. The metal burns and discolors the parts that are exposed to flames and those that are close to flames.

Inspection and care

1. Perform regular inspections and maintenance.
2. Make sure that the product works correctly before use.
3. If ingredients are spilled, be sure to clean the stove using a cloth.
4. Do not use this product if it is deemed broken or damaged.
5. If the customer carries out repairs, the end result could be dangerous. Should you find any abnormalities, please contact the dealer where you purchased the product, or us.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:
1. Material deterioration caused by age / 2. Damage caused by modifications or rough handling / 3. Damage caused by dust or not mentioned in the instruction manual / 4. Damage caused by unexpected accidents / 5. Any damage other than defects in the manufacturing process / 6. Damage caused by dust or rust / 7. Damage and defects caused by dismantling the product / 8. Damage and defects caused by dropping, jolting or other shocks / 9. Deterioration or failure of parts due to friction / 10. Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.
1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

If you have any questions or concerns, please contact your retailer or Snow Peak customer service.

Snow Peak Customer Service
+1 503-697-3330 (9:00-17:00)
Email: info@snowpeak.com

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

MADE IN CHINA