 


N-004 TAKIBIDAI 30th Anniversary Takibi Tool Set

Thank you for purchasing a Snow Peak product. This product is a set of fire tongs for handling firewood and charcoal, and a connectable fire blaster for fire starting and flame adjustment. For safety, read the following instruction manual before use. Please keep it safe for future reference. If you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

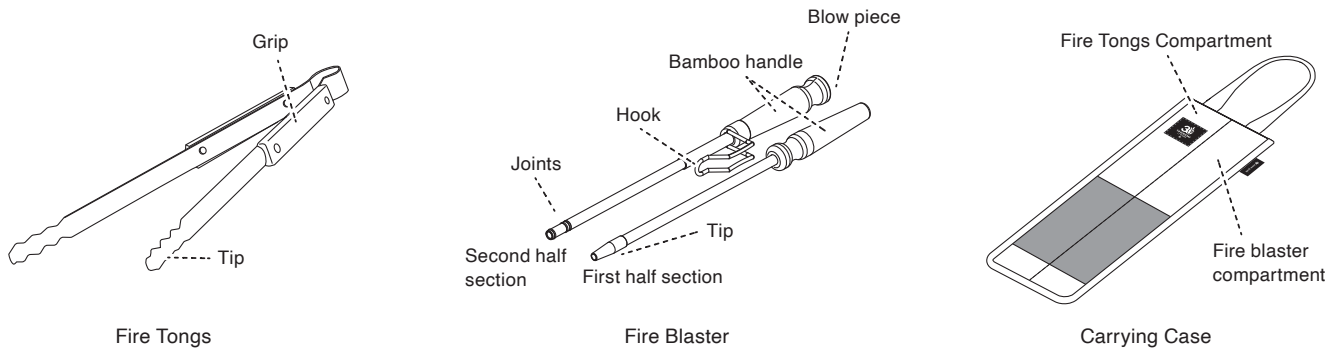

Specifications

[Fire Tongs]

- Material: Main Body / Stainless Steel, Grip / Beech Wood
- Size: 40×405×25(h)mm / 1.6"×15.9"×1.0"(h)
- Weight: 200g / 7.1oz

[Fire Blaster]

- Material: Main Body / Stainless Steel, Heat-resistant Silicone Rubber, Polypropylene, Nitrile Rubber, Handle / Laminated Bamboo
- Size: 30×875×58(h) mm / 1.2"×34.4"×2.3"(h)
- Storage Size: 30×450×62(h) mm / 1.2"×17.7"×2.4"(h)
- Weight: 310g / 10.9oz

[Carrying Case]

- Material: Main Body / 900D Polyester, Handle / Polypropylene, Mesh / Polyester
- Size: 215×480×5(h) mm / 8.5"×18.9"×0.2"(h)
- Weight: 115g / 4.1oz

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

DANGER / Misuse could easily result in a serious accident or death.

- This product is intended for use only as fire tongs and a fire blaster. Do not use it for any other purpose or in any manner other than as instructed. Failure to do so may result in accidents or product damage.
- Children should use this product only under adult supervision. Failure to do so may result in unexpected accidents or injuries.

WARNING / Misuse could result in serious injury or death.

- Before using this product, make sure that there are no loose connections, damaged parts, or deformities. If you find a defect with the product, stop using it immediately and contact the dealers where the product was purchased or Snow Peak Customer Service.
- Do not expose this product to an open flame or higher temperatures than necessary.
- Do not use fire starters while adjusting the fire. Doing so may cause the flames to spread and ignite clothing or cause burns.
- Do not point the tips of the fire tongs at anyone or carry burning charcoal or firewood with the fire tongs.
- Keep this product out of the reach of children.
- Before using this product, make sure that no one is in front of you or nearby.
- Do not modify this product. Doing so may cause reduced functionality or product damage. Modified products are not covered by after-sales service.
- This product becomes hot during use. To avoid burns, always wear thick gloves.
- Always assemble the fire blaster before use. Do not use either section separately. Doing so may result in injury or burns.
- The fire blaster is equipped with a check valve that helps prevent the reverse flow of flames and smoke. Do not inhale through the fire blaster during use. Doing so may result in injury or burns.
- When hanging the fire blaster using its hook, do not hang anything from it. Doing so may cause accidents or product damage.

CAUTION / Misuse could result in injury to the user and / or damage to property.


- Do not leave this product in direct sunlight or in high-temperature locations. The metal parts may become hot and cause low-temperature burns.
 - Do not leave the grip or handle near heat sources or expose them to flames. Doing so may cause scorching or discoloration.
 - The stainless steel parts may discolor due to heat. Rust may also occur depending on usage conditions.
 - Do not soak this product in water or store it in humid locations. Doing so may cause warping, cracking, mold, or rust.
 - Do not leave this product wet. After use, wipe off any moisture and allow it to dry completely before storing.
 - Do not subject this product to impacts or excessive loads. Doing so may cause damage or cracking of the grip or handle.
 - Do not use the fire blaster as a fire poker. Doing so may cause deformation or damage.
 - The handle and grip are made of natural materials. Variations in color and grain are natural characteristics of the material. Due to the laser engraving, variations in the color and the position of the engraving may occur.
- [Carrying Case]**
- The color of the carrying case may transfer to other items when exposed to water or sweat.
 - Exposure to ultraviolet light, friction, or moisture may cause fading. Leaving the carrying case in direct sunlight or outdoors for extended periods may also cause fading or deterioration.
 - Storing sharp objects in the carrying case may puncture or damage the fabric.
 - The carrying case is not made of flame-resistant materials. Keep it away from open flames.
 - The carrying case is not waterproof.
 - Do not pull forcefully outward on the stitched area between the handle and the main body. Doing so may cause damage.
 - Store the fire tongs and fire blaster only after they have completely cooled. Storing them while they are still hot may scorch or ignite the fabric.

Instructions for Use

[Fire Tongs]

Use the fire tongs to handle charcoal or firewood.


 **WARNING / Always wear thick gloves when using this product.**

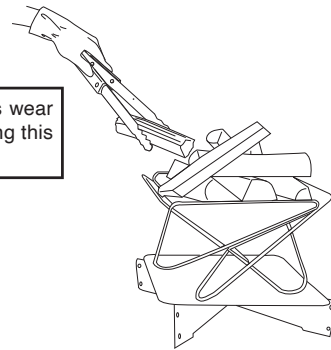


[Fire Blaster]

(1)Remove the product from the hook, as shown in the figure.

 (2)Align the second half joint with the hole on the first half and connect them by rotating slightly.




 **CAUTION / Push firmly to ensure that the two parts are secure before using.**

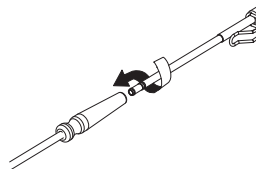


(3)To use, hold the bamboo handle with both hands, put your mouth on the blow piece, and strongly blow for several seconds. When blowing, keep the tip of the product about 10-20 cm away from the fire.

 **WARNING / Some parts of this product may become hot during use. Please be careful to avoid burns. After use, allow the product to cool down before disassembling or storing it. Storing the product while it is still hot may cause burns, or may scorch or ignite the fabric.**

  **CAUTION / If you use the product without placing your lips on the nozzle, there is a possibility of air leakage. For efficient burning, place your lips firmly against the nozzle.**

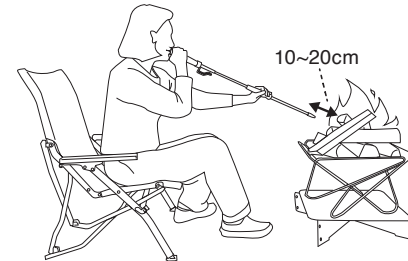


(Example: Using while sitting)

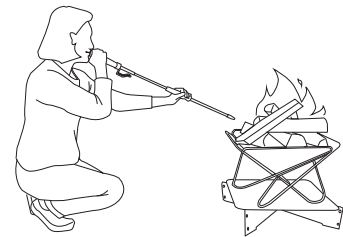

(Example: Using while crouching)

(4)After use, hold the bamboo handle with both hands and pull out the second half part by rotating slightly. Fit the pipe section of the first half into the hook for storage.

 **CAUTION / After use, clean the blow piece with a tightly squeezed cloth.**

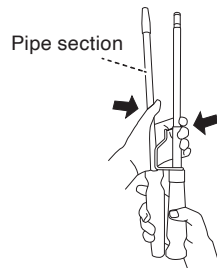

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- Wipe off any dirt or moisture with a dry cloth and dry thoroughly in a well-ventilated, shaded area.
- If stubborn dirt such as soot sticks to the product, wipe it off with a damp cloth. Remove any dirt and dry it completely before storing it in a well-ventilated area.
- Using an abrasive scrub brush may cause scratches.
- Store in a well-ventilated place, away from direct sunlight.

[About the fire blaster]

- If the inside of the pipe gets wet, air-dry it in the shade. Do not use high-temperature drying methods such as a hair dryer.
- Do not leave this product wet. Particularly the joint part may become loose after use. Please wipe off any moisture and allow it to dry completely before use and storing.

[Carrying Case]

- Storing the product in a humid place or leaving it wet may cause mold, odor, color transfer, or deterioration. After use, lightly wipe off any dirt with a soft brush before storing.
- If the product is dirty, wipe it with a cloth dampened with a solution of water and mild detergent. Do not use thinners or benzene.
- Do not use a washing machine or dryer to clean the product as this may cause fading or shrinkage.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:

1. Material deterioration caused by age
2. Damage caused by modifications or rough handling
3. Damage caused by inappropriate use not mentioned in the instruction manual
4. Damage caused by unexpected accidents
5. Any damage other than defects in the manufacturing process
6. Damage caused by dust or rust
7. Damage and defects caused by dismantling the product
8. Damage and defects caused by dropping, jolting or other shocks
9. Deterioration or failure of parts due to friction
10. Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
 - When you request repairs, please make sure that the product is dry and clean.
 - Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
 - Transportation and repair costs are determined as follows.
1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.