


CS-250-BK 野宴鍋30 ブラック

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、調理用の鍋です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容(各部の名称)

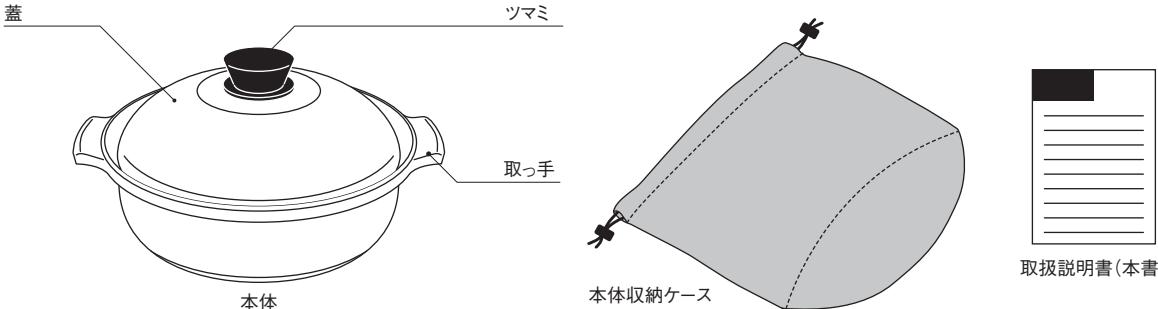

スペック

- 材質:本体・蓋／アルミニウム合金、ツマミ／フェノール樹脂、収納ケース／ナイロン
- 表面加工:本体／ふつ素樹脂塗装加工(内側)、セラミック焼付け塗装(外側)、蓋／セラミック焼付け塗装(内側・外側)
- サイズ:最大内径28cm(底の厚さ3.5mm)
- 収納サイズ:365×310×105(h)mm
- 満水容量:6.1L
- 重量:本体／1.9kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

△警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 空焚きは絶対にしないでください。火災やヤケド・本製品の破損につながるおそれがあります。なお、予熱をする場合は加熱時間を30秒程度にしてください。長時間の予熱は空炊きとなり、大変危険です。
- 使用中及び使用後しばらくは本体が大変熱くなっています。十分に注意し、特に幼児が触れて大事故にならないようにしてください。
- 転倒により火災やヤケドにつながるおそれがあります。
- ストーブ(暖房機器)の上では絶対に使用しないでください。ストーブの上で使用されますと、調理物の入った本体の転倒、異常過熱などによるヤケドにつながるおそれがあります。また、長時間の連続使用となる傾向が

- あり、空焚きにつながりやすく本体や部品の破損、腐食などの製品の品質低下につながるおそれがあります。
- 本体サイズに合ったコンロをご使用ください。使用する際は必ずコンロの取扱説明書をよくお読みの上ご使用ください。
- ご使用時にはコンロの中央に置いて、炎が底面より大きくなないように火力を調節してください。炎が底面よりはみ出たままで使用すると、ヤケドにつながるおそれがあります。
- 2口以上のコンロで使用する場合は、隣接するコンロの炎が取っ手に当たらないよう、取っ手の向きにご注意ください。
- カセットこんろで使用する場合は、鍋でボンベ容器カバーを覆わないようご注意ください。カセットボンベが異常過熱され、カセットボンベの内圧が急激に上昇し、爆発の危険があります。

△注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- 焚火や炭火で使用する場合は、炭火の熱や薪の炎が遠火になるように火力を調節してご使用ください。ヤケドにつながるおそれがあります。
- 急激な温度変化や強い衝撃を与えないでください。本製品の破損・変形につながるおそれがあります。
- 調理中はそばを離れないでください。火災につながるおそれがあります。
- 取っ手は金属製であるため熱くなります。鍋つかみなどを使用して取扱いください。また、調理中及び調理後はツマミが熱くなっている場合がありますので、ご注意ください。
- 調理物の吹きこぼれによりガスの火を消す場合がありますので火加減にはご注意ください。また縁まで水などを満たした状態で使用しないでください。
- コンロに載せる際、載せ方や載せる位置、ゴトクの形状により転倒することがありますので、安定した状態でご使用ください。
- 電磁調理器(IH クッキングヒーター)では使用できません。
- 電子レンジやオーブンなどで使用しないでください。本製品の破損・変形につながるおそれがあります。
- 本製品に変形や破損が生じた場合は使用しないでください。また、ご自身で修理、改造して使用しないでください。思わぬ事故につながるおそれがあります。
- 調理物を入れたまま持ち運ぶ場合は、調理物の量を半分以下にし、かたよらないようご注意ください。鍋から内容物がこぼれるなどし、ヤケドにつながるおそれがあります。
- 本製品の中に食材を入れて運搬する際は、一昼夜を超えないようご注意ください。長時間の食材の接触は、ふつ素樹脂の剥離や腐食の原因となります。
- ご使用によりツマミが劣化し、変色や膨れ、焼け焦げ、ひび割れが生じることがあります。これらの状態が生じた場合は使用しないでください。ツマミの脱落などによりヤケドなどの事故につながるおそれがあります。

- 金属製の鋭利な調理機器などで、本製品を傷つけないようご注意ください。本製品の腐食につながるおそれがあります。
- 本製品で料理を保存しないでください。
- 焼き・炒め調理には使用しないでください。
- 天ぷらなどの揚げ調理をする際は、以下の点にご注意ください。
 - ・縁まで油を満たした状態で使用しないでください。油に引火するおそれがあります。
 - ・油温を200°C以上に上昇させないでください。
 - ・揚げ調理に際しては、蓋をしないでください。油温が高まり発火するおそれがあります。
- 味噌汁などの調理物によっては、温め直す際や加熱中に、突沸現象により内容物が噴き出すことや、場合により鍋が転倒することがあります。以下の事項をお守りください。
 - ・温め直す際は、火にかける前によくかき混ぜてください。
 - ・強火で一気に加熱しないでください。
 - ・調理中もよくかき混ぜながら温めてください。
- 本製品を長くお使いいただくために、以下のことを守ってください。
 - ・本製品の中で材料を刻まないでください。ふつ素樹脂に傷をつけます。
 - ・酢などの強酸性のものや、こんにゃくなどの強アルカリ性のものをご使用した場合は、変色や腐食の原因になりますので使用後速やかに中性洗剤で洗ってください。また、弱酸性・弱アルカリ性のものを長時間使用した場合も同様に変色や腐食の原因になりますので、使用後、速やかに中性洗剤で洗ってください。
 - ・ヘラやお玉などをご使用になる場合、木や竹、プラスチック製のものを使用していただくと、ふつ素樹脂塗膜が一層長持ちします。

ご使用の前に

- お使いになる前に、製品にガタツキやひび割れなどの不具合がないことを確認してください。
- お使いになる前に、中性洗剤と柔らかいスポンジなどを使用してよく洗ってください。

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- ご使用後は、柔らかいスポンジで中性洗剤をつけてよく洗ってください。洗った後は水気を拭き取りよく乾燥させ、風通しの良い日陰で保管してください。
- 洗う際は金属たわしや磨き粉を含む洗剤、漂白剤などを使用しないでください。腐食や塗膜剥離の原因となります。
- 洗う際は、アルカリ性洗剤(漂白剤や食器洗い機用洗剤など)や酸性洗剤を使用しないでください。腐食につながるおそれがあります。
- こげついた場合、金属製などの固いものでこすらないでください。水やお湯に充分浸してこげを柔らかくした後

で、中性洗剤を含ませた柔らかいスポンジで丁寧にお取りください。

- 食器洗い機・食器乾燥機は使用しないでください。腐食や変色の原因になります。

○ ふつ素樹脂の再コーティングサービス(有料)

- 繰り返しの使用でふつ素樹脂の性能が低下した場合、ふつ素樹脂の再コーティングが可能です(有料)。
- ※強い熱が加わる加工の為、一つの鍋に対して一度だけの加工となります。※変形や破損など、鍋の状態により、再コーティングができない場合があります。鍋の状態を確認してからの作業となりますので、ご了承ください。※蓋部分は再コーティングの対象外となりますので、ご了承ください。※料金や加工時間など、詳しくは、販売店様、または弊社ユーザーサービスまでお問い合わせください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

- 1.素材の経年劣化による損害など商品の寿命
- 2.改造および粗雑な取扱いによる故障
- 3.取扱説明書で禁止されている取扱いによる故障
- 4.不測の事故による商品の故障
- 5.その他製造上の欠陥以外による製品の故障
- 6.ゴミやさびによる故障
- 7.分解したことによる不具合の発生または破損
- 8.落下やその他の衝撃による部品の変形や破損による不具合

- 9.摩擦によるバーツの変化及びそれによる故障
- 10.他社製品との組み合わせによる故障

修理について


●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。

- 1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。
- 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

CS-250-BK Aluminum Caldero 30 in Black

Thank you for purchasing a Snow Peak product. This product is a cooking pot for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

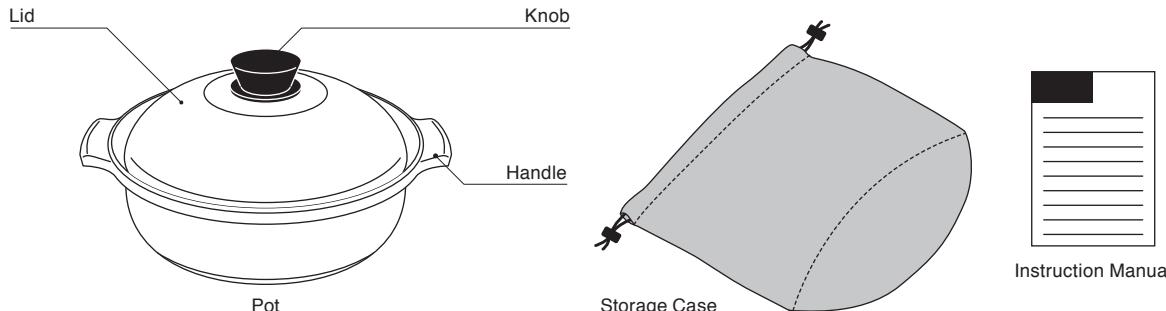

Specifications

- Materials: Body and Lid / Aluminum Alloy, Knob / Phenol Resin, Storage Case / Nylon
- Surface finish: Main unit - fluororesin non-stick coating (inside), porcelain enamel coating (outside) / Lid - porcelain enamel coating (inside/outside)
- Size: Max. Inner diameter 28cm / 11.0" (3.5mm / 0.1"bottom thickness)
- Storage size: 365x310x105(h)mm / 14.4" x 12.2" x 4.1"(h)
- Full water capacity: 6.1L / 206.3 fl oz
- Weight: Main Body / 1.9kg / 4.2 lbs

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not use the product without water. Using the pot without water may cause fire, burns, or damage to the product. When preheating, the heating time should be limited to about 30 seconds. Prolonged preheating is very dangerous.
- Please be careful not to burn yourself, as the pot will become extremely hot during use. Please avoid serious accidents, and keep a close eye on young children.
- Tipping the pot over may result in fire or burns.
- Never use this product on a heater (or any other heating apparatus). It may result in burns from tipping over or abnormal overheating. In addition, if the product is used continuously for long periods of time, it may lead to damage to the main unit or the parts.

- Use a stove that matches the size of the product. Please read the instruction manual of the stove carefully before use.
- When using a gas stove or burner, place the pot in the center of the trivet and adjust the heat so that the flame does not become larger than the bottom of the product. If the product is used with the flame protruding from the bottom, it may result in burns.
- When using two or more stoves or burners, please be careful not to let the adjacent flame touch the handle.
- When using this product with a canister stove, be careful not to cover the canister with the pot. The pot will radiate heat towards the canister, causing its internal pressure to raise sharply, risking an explosion.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- When using the product over a campfire or charcoal fire, adjust the heat so that the pot is not sitting directly over the flame. Failure to do so may result in burns.
- Do not subject the product to sudden temperature changes or strong shocks. Doing so may result in damage or deformation of the product.
- Do not leave the cooking area while cooking. Leaving the pot unattended may result in a fire.
- The handle is made of metal and gets hot. Please use a glove to handle it. Also, please note that the knobs may be hot during and after cooking.
- Be careful not to overcook, as spills may extinguish the gas flame. Do not use the pot when it's full of water or other liquids.
- When placing the pot on the stove, it may tip over depending on how it is placed, its position, and the shape of the pot.
- Cannot be used with electromagnetic cookers (such as IH cooking heater).
- Do not use this product in a microwave oven or oven. Doing so may damage or deform the product.
- Do not use this product if it is deformed or damaged. Also, do not use the product after repairing or modifying it yourself. Doing so may result in an unexpected accident.
- When carrying a pot with food in it, reduce the amount of food in it by half or less. Failure to do so may cause the contents to spill out of the pot, resulting in burns.
- When transporting or storing food in this product, please do not exceed one day and night. Prolonged food contact with the pot's surface may cause the fluoroplastic to peel or corrode.
- The knobs may deteriorate with use and become discolored, swollen, burnt, or cracked. Do not use the product if these conditions occur. Using it in a damaged condition may result in burns or other accidents due to the knob falling off.

- Be careful not to damage this product with sharp metal cooking utensils. Doing so may lead to corrosion of the product.
- Do not store food in this product.
- Do not use it for grilling or stir-fry cooking.
- Please note the following points when cooking tempura and other deep-fried foods.
- Do not use with oil filled to the rim. Doing so may cause the oil to ignite.
- Do not raise the oil temperature above 200°C.
- Do not cover the lid when frying. Failure to do so may increase oil temperature and cause ignition.
- When reheating or heating certain foods, such as miso soup, the contents of the pot may spurt out due to the phenomenon of sudden boiling, or the pot may topple over in some cases. Please observe the following precautions.
- When reheating, stir well before placing over heat.
- Do not heat over high heat immediately.
- Keep warm while cooking, stirring frequently.
- To ensure the long life of this product, please observe the following
- Do not chop foods inside this product. It will scratch the fluoroplastic.
- Use of strongly acidic materials such as vinegar or strongly alkaline food may cause discoloration or corrosion, so please wash with a neutral detergent immediately after use. Similarly, prolonged use of weakly acidic or weakly alkaline materials may cause discoloration or corrosion, so please wash with a neutral detergent as soon as possible after use.
- When using a spatula, ladle, etc., use wooden, bamboo, or plastic items to further prolong the life of the fluoropolymer coating.

Before Use

- Before using the product, make sure that there are no rattles, cracks, or other defects in the product.
- Before use, wash well with a mild detergent and a soft sponge.

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- After use, wash well with a soft sponge and mild detergent. After washing, wipe it dry and store it in a well-ventilated shady place.
- When washing, do not use metal scrubbers, detergents containing polishing powder, or bleach. Doing so may cause corrosion or peeling of the paint film.
- When washing, do not use alkaline detergents (bleach, dishwasher detergent, etc.) or acid detergents. It may lead to corrosion.
- If the surface gets scorched, do not rub it with a hard object such as a metal object. After soaking the surface thoroughly in water or hot water to soften the stain, carefully remove the stain with a soft

- sponge moistened with neutral detergent.
 - Do not use a dishwasher or dish dryer. It may cause corrosion or discoloration.
 - Fluoropolymer recoating service (charged)
 - If the fluoroplastic performance deteriorates after repeated use, it can be recoated with fluoroplastic (for a fee).
- *Because of the strong heat applied to the pot, it can only be recoated once. *Recoating may not be performed if the pot is deformed or damaged. Please note that we will check the pot's condition before proceeding. *Note that the lid is not eligible for re-coating. *For more information on fees and processing time, please contact the dealer or Snow Peak Customer Service.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following.

- Material deterioration caused by age
- Damage caused by modifications or rough handling
- Damage caused by inappropriate use not mentioned in the instruction manual
- Damage caused by unexpected accidents
- Any damage other than defects in the manufacturing process
- Damage caused by dust or rust
- Damage and defects caused by dismantling the product
- Damage and defects caused by dropping, jolting or other shocks
- Deterioration or failure of parts due to friction
- Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
 - Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
 - Transportation and repair costs are determined as follows.
- Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 - Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.