



Deep Backpacker's Cup with Lid

深型チタンシェラカップ 蓋付き

Lightweight and designed with a rounded shape, the Deep Backpacker's Cup is best for cooking, drinking, or scooping ingredients. Use the included lid to cover the cup or as a small dish.

蓋付きのチタンシェラカップです。軽量で、丸みを帯びた形状は具材をすくいやすく、カップとしてだけでなく取皿としても使用できます。

E-314R

Dirt and oil may remain from the manufacturing process, so please wash the product with a mild detergent before use.

製品の表面に製造上の汚れや油分が付着している場合がありますので、必ず中性洗剤で洗ってからご使用ください。

Specifications / スペック

- Materials : Titanium
- Size: φ109×77mm (Excluding handle, with lid) / dia. 4.3"×3.0"
- Weight : 65g / 2.3 oz
- Capacity: 360ml / 12.2 fl oz
- 材質:チタニウム
- 本体サイズ:φ109×77mm (取手除く、蓋付き)
- 重量:65g
- 容量:360ml

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピーク **0120-010-660** (9:00~17:00)
ユーザーサービス Email:userservice@snowpeak.co.jp


株式会社スノーピーク

〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp


Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland,
Oregon 97210, USA / Tel. +1 (888) 424-4916
Instagram. @snowpeakusa
Email. info@snowpeak.com
www.snowpeak.com

E-314R 深型チタンシェラカップ 蓋付き

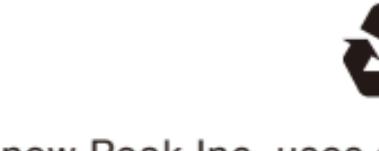

4 960589 867844 MADE IN JAPAN



Snow Peak Inc. uses sustainable packaging with less ink.

スノーピークは、インク量とプラスチックを削減した環境に配慮したパッケージを使用しています。

⚠ 注意

ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

●加熱中は本体、取手及び蓋が非常に高温になりますのでやけどにご注意ください。加熱後はしばらく本体、中身を冷ましてから取り扱ってください。●加熱する際は、バーナーを水平で安定した場所に設置し、必ずゴトクに本製品が乗って安定していることを確認してからご使用ください。●加熱する際はバーナーの炎が底面より大きくならないように火力を調整してください。●製品の変形・変色の原因となりますので空焚き及び、空焚きに近い調理等はしないでください。●初めてご使用する際及び使用後は柔らかいスポンジに中性洗剤に付け、丁寧に洗浄してください。また、洗浄に硬い素材のたわしなどを使用するとキズの原因になります。●洗った後は乾いた布等でよく拭き取り、乾燥させてください。●満水まで熱いものを入れないでください。蓋を持ち上げる時などにやけど

するおそれがあります。●本体の変色または傷が付くおそれがありますので、食器用洗浄機、食器用乾燥機の使用は控えてください。●本製品を電子レンジ・オーブンで使用しないでください。火災・爆発のおそれがあります。●食品を長時間カップに入れておくと色が変わることがあります。●蓋は燃焼器などで直接加熱しないでください。変形、破損するおそれがあります。●蓋は蓋や小皿以外の用途で使用しないでください。

⚠ CAUTION

Misuse could result in injury to the user and/or damage to property.

●Please be careful not to burn yourself while heating this product, as the body, handle, and lid will become extremely hot. After heating, please allow some time for the main body and contents to cool down before handling. ●When heating, please ensure that the burner is placed horizontally in a stable location and that the product is securely positioned on the grid before use. ●When heating, please adjust the heat to ensure that the flame of the burner does not exceed the bottom surface. ●Do not heat the cup when empty or near empty, as it may cause deformation or discoloration. ●Before using this product for the first time, please wash it with the soft side of the sponge with a neutral detergent. Do not use a scrub brush or abrasive surface of a sponge. These items may cause scratches. ●After washing, wipe off thoroughly with a dry cloth and dry. ●Please do not pour hot liquids up to the brim. Overfilling increases the risk of burning when lifting the lid. ●Do not use a dishwasher or dish dryer as it may cause discoloration or scratches on the main body. ●Do not use this product in a microwave oven or oven. There is a risk of fire or explosion. ●Please do not leave food in the cup for more a long time. Prolonged food storage may cause discoloration. ●Do not directly heat the lid with a burner or similar device. Heating the lid on its own may cause deformation or damage. ●Do not use the lid for any purpose other than covering the cup or as a small dish.