


ES-150
つぶほおずき

セット内容 (各部の名称)

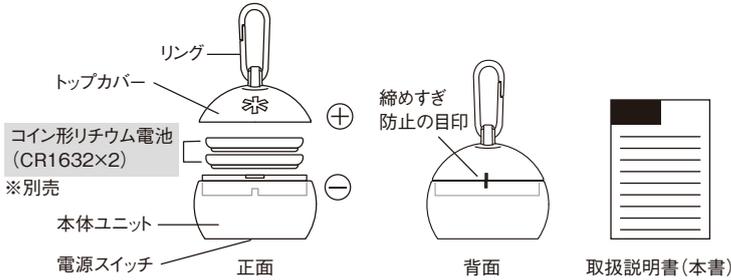

スペック

- 材質:本体/ABS樹脂・ポリカーボネート樹脂・シリコンゴム、リング/ステンレス
- サイズ:本体/φ23×22.5(h)mm、リング/W8×20(h)mm
- 重量:5g(電池を除く)
- 使用電源:コイン形リチウム電池(CR1632×2)
- 連続点灯時間*1:Hi/2時間、Low/31時間
- 使用温度条件:動作時/-20℃~50℃、保管時/-20℃~45℃
- 明るさ(最大時)*2:Hi/27lm、Low/2.8lm
- 防水規格:IPX5
- モード:Hi/Low/Flash
- 使用光源:白色LED(色温度4000K)

本製品には電池は付属しておりません

- *1:周囲の温度や電池の使用期間などの使用状況によって変動する可能性があります。
- *2:連続点灯時には、時間の経過にともない電池が消耗し徐々に明るさが低下します。

安全上の注意事項 ご使用前によく読んで予測される事故を回避し安全にご使用ください。

⚠️ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●電池(特にコイン電池)を飲み込むと、重大な傷害や死亡に至るおそれがあります。小さなお子様の手の届かない場所で使用・保管してください。誤って飲み込んだ場合は、ただちに医師の診察を受けてください。絶対に吐かせようとしないでください。●本製品には誤飲防止のためのコーティングが施されています。本コーティングは誤飲するリスクを低減する目的のものであり、絶対的な安全を保証するものではありません。小さなお子様の手の届かない場所で保管し、お子様の使用時は保護者が付き添ってください。単独使用は誤飲やケガ、感電のおそれがあります。●分解や改造は絶対にしないでください。故障や感電の原因になります。●接点部やコネクタの端部に金属類を差し込まないでください。発熱や発火、感電の原因になります。●濡れた手で電池交換をしたり、端子部を触らないでください。発熱や発火、感電の原因になります。●本製品を火中に投入したり、加熱したりしないでください。破裂や爆発の原因になります。●ペットに噛ませたり、ペットの触れるところに放置しないでください。誤飲の原因になります。●指定以外の電池や充電式電池の使用、または電池の逆挿入はしないでください。故障や発熱、発火のおそれがあります。

⚠️ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

●ご使用前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。●本製品は防水仕様(IPX5)ですが、水が多量にかかるとの環境での使用や、水没はさせないでください。故障の原因になります。●使用温度範囲を超える条件(熱源の近く、炎天下の車内など)では使用または保管しないでください。電池の液漏れや発熱、発火の原因になります。●思わぬ引っかかりによる転倒やけがを防ぐため、取り付け場所には十分ご注意ください。

⚠️ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

●使用後や電池を使い切った場合は、必ず電池を本製品から取り出してください。電池を入れたままにすると、ガスの発生や液漏れにより、製品の破損や故障の原因になります。●本製品には指定の電池以外は使用しないでください。また、種類の違う電池や残量の異なる電池を混ぜて使用しないでください。(発熱や液漏れの原因になります。)●本体やリングに過度な力や衝撃を加えないでください。振り回しや無理な取り付け、落下などにより事故・破損・故障の原因となります。●強い圧力や衝撃は破損や変形の原因になります。ポケットやかばんに入れたまま座ったり、荷重がかかる状況は避けてください。●光源部を直視しないでください。目を痛めることがあります。●金属製の鍵などと一緒に携帯すると、本体に傷がつくことがありますのでご注意ください。●電池について:高温環境(50℃以上)では、電解液の劣化や外装の変形が起こる可能性があります。低温環境(-20℃以下)では、瞬間的な高負荷放電に対して電圧が急落しやすく、機器が誤動作することがあります。●リングは本体をつなぎやすくするために取り付けられています。開閉する構造ではありませんので、無理に開閉しないでください。破損やケガの原因となるおそれがあります。

電池の入れ替え方法


- コイン形リチウム電池(CR1632)2個使用
- ①トップカバーを反時計回りに回します。
 - ②指定の電池2個を本体ユニットにいれます。(本体側が「-」極になるように、「各部の名称」イラスト参照)
 - ③トップカバーを爪がはまる位置にセットし、時計回りに閉め込みます。
- ※本体横にある目印が合うように締め込んでください。締め込みすぎると破損の原因になります。



電池の入れ替え方法


- モード:点灯方法は3種類のモードが選べます。Hi / Low / Flash

●モードの選択方法

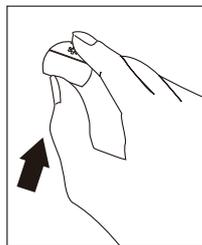

●ロックモード

持ち歩き時の誤点灯防止のため、ロックをかけることをお勧めします。

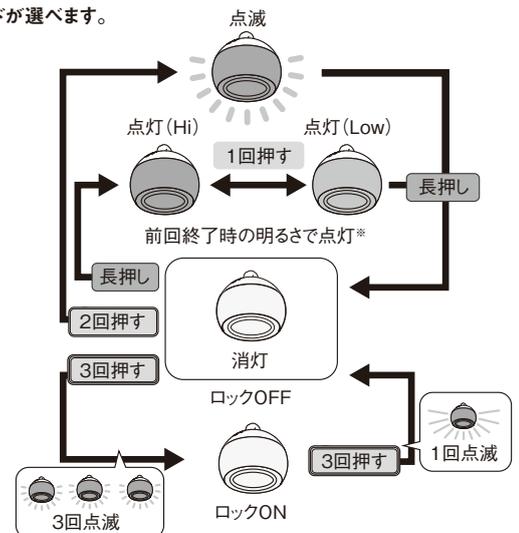


※前回消灯したときの明るさ(Hi/Low)を記憶し、次回は同じ明るさで点灯します。例:Lowで消灯した場合、次回もLowで点灯します。なお、電池を交換するとリセットされ、Hiで点灯します。

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。●本体が濡れた時は乾いた柔らかい布で完全に拭き取ってから保管してください。●トップカバー内部に水滴が入り込んだ時は、すぐに使用を中止してトップカバーを外し、乾いた布で拭き取り、十分に乾燥させてください。

ES-150
Micro Hozuki

Contents (Name of the Parts)

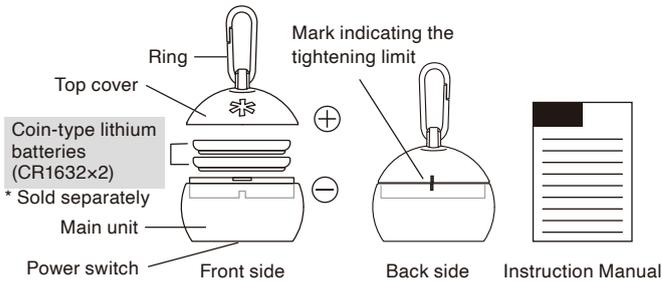

Specifications

- Materials: Main unit/ ABS resin, Polycarbonate resin, Silicone rubber, Ring/ Stainless steel
- Size: Main unit/ $\phi 23 \times 22.5$ (h)mm(dia.0.9"×0.9"(h)), Ring/ 8×20(h)mm(0.3"×0.8")
- Weight: 5g / 0.2oz (excluding batteries)
- Power source: Coin-type lithium batteries (CR1632×2)
- Continuous lighting time*1: High/ 2 hours, Low/ 31 hours
- Operating temperature conditions: During operation/ -20°C to 50°C, During storage/ -20°C to 45°C
- Brightness (maximum)*2: High/ 27 lm, Low/ 2.8 lm
- Waterproof rating: IPX5
- Modes: High / Low / Flash
- Light source: White LED (color temperature 4000K)

The product does not come with batteries.

- * 1: Values may vary depending on ambient temperature and battery usage conditions.
- * 2: When the light is used continuously, the batteries will gradually deplete over time, causing the brightness to decrease.

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

•Ingestion of a battery (especially a coin-type battery) may cause serious injury or death. Use and keep batteries out of the reach of small children. If a battery is accidentally swallowed, seek medical attention immediately. Never attempt to make the person vomit the battery under any circumstances. •This product has a coating designed to help prevent accidental ingestion. This coating reduces the risk of accidental ingestion, however, it does not guarantee complete safety. Keep the product out of the reach of small children. When used by children, a parent or guardian must supervise them. Using the product unsupervised may result in accidental ingestion, injury, or an electric shock. •Never disassemble or modify the product. Doing so may cause a malfunction or an electric shock. •Do not insert metal objects into the contact points or connector ends. Doing so may result in overheating or fire, or cause an electric shock. •Do not replace the battery or touch the terminals with wet hands. Doing so may result in overheating or fire, or cause an electric shock. •Do not throw this product into a fire or heat it. Doing so may cause it to rupture or explode. •Do not allow pets to bite the product or leave it where they can reach it. Doing so may result in accidental ingestion. •Do not use any batteries or rechargeable batteries other than those specified, and do not insert batteries in the wrong orientation. Doing so may result in a malfunction, overheating, or fire.

⚠ WARNING / Misuse could result in serious injury or death.

•Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. •Although this product is waterproof (IPX5), do not use it in environments where it may be exposed to excessive water or allow it to be submerged. Doing so may cause a malfunction. •Do not use or store the product in conditions that exceed the operating temperature range (near heat sources, inside a car in direct sunlight, etc.). Doing so may cause battery leakage, overheating, or fire. •Be careful where you install the product in order to prevent accidental snagging that could cause falls or injury.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.


•After using the product or when the batteries are depleted, be sure to remove them from the product. Leaving the batteries inside may cause gas generation or battery leakage, which can lead to damage or product malfunctions. •Do not use any batteries other than those specified. Also, do not mix different types of batteries or batteries with different amounts of remaining charge. (Doing so may result in overheating or battery leakage.) •Do not apply excessive force or impact to the main unit or the ring. Swinging the product, forcible installation, or dropping it may cause accidents, damage, or product malfunctions. •Applying strong pressure or impact to the product may cause it to be damaged or deformed. Avoid sitting on the product while it is in a pocket or bag, or placing heavy loads on it. •Do not look directly at the light source. Doing so may cause eye injury. •Be careful when carrying the product with metal items such as keys, as this may scratch the unit. •Regarding the batteries: In high-temperature environments (50°C or higher), the electrolyte may deteriorate and the battery casing may deform. In low-temperature environments (-20°C or lower), the voltage may drop sharply during momentary high-load discharge, which may cause the device to malfunction. •The ring is attached to facilitate attachment of the main unit. It is not designed to be opened or closed, so do not attempt to force it open or closed. Doing so may result in damage to the product or personal injury.

How to replace the batteries

This product uses two coin-type lithium batteries (CR1632).

- ① Turn the top cover counterclockwise.
- ② Insert two specified batteries into the main unit. (Refer to the "Names of Parts" illustration and make sure the negative (-) side faces the main unit.)
- ③ Set the top cover so that the tabs fit, then turn it clockwise to close.

* Turn it until the marks on the side of the main unit align. Do not overtighten, as this may cause damage.

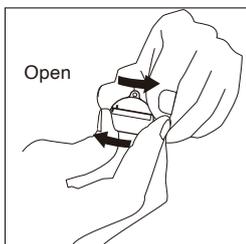


Maintenance


•Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. •Use a damp, tightly wrung cloth to gently wipe off any dirt from the product. •When the body is wet, wipe it completely using a soft, dry cloth before storing. •If water droplets get inside the top cover, stop using the product immediately. Remove the top cover, wipe off any moisture using a dry cloth, and let it dry thoroughly.

Changing modes

- Modes: You can choose from three lighting modes. High / Low / Flash
- How to choose modes

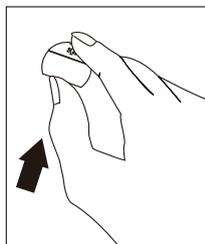

- Lock mode
We recommend activating the lock mode when carrying the product to prevent accidental activation.

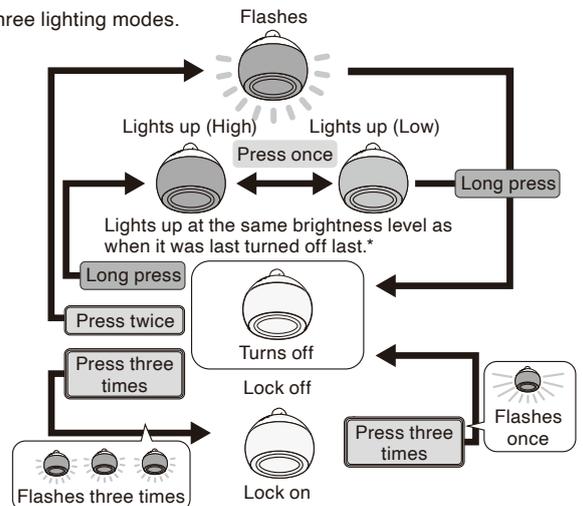

* The product remembers the brightness setting (High/ Low) used before it was turned off, and will light up at the same brightness level the next time it is switched on.
Example: If you turn it off in "Low" mode, it will turn on in "Low" mode the next time. Note that when the batteries are replaced, the setting will be reset, and the light will turn on in High mode.