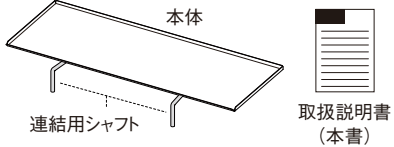


FES-043-BK IGTサイドトレイ ブラック

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、アイアングリルテーブル（以下IGT）及びステンレスキッチンテーブルの機能を拡張させるトレイです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)	スペック	対応品番
 本体 連結用シャフト 取扱説明書 (本書)	●材 質:ステンレス(耐熱塗装) ●サイズ:500×191×58(h)mm ●重 量:830g	本製品は以下の品番に取り付けることができます。 CK-080R、CK-149、CK-150、CK-902、CK-903、CK-904、CK-116T、CK-117T、CK-116TL、CK-117TL、LV-310(※製品の上フレーム外側のみでご使用ください。)、ST-050、LV-381 ※そのほかの製品には対応していませんのでご注意ください。

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●本製品に対応する製品に取り付ける際は、使用する製品の取扱説明書をよく読んでからご使用ください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

●本製品に座る、もたれる、ぶら下がるなどの体重をかける行為をしないでください。本製品の破損・転倒により、思わぬ事故につながるおそれがあります。●トレイには2kg以上のものを載せないでください。本製品及び併用する製品の転倒や破損の原因になります。●本製品の上に燃焼器やランタンを置かないでください。火災やヤケドのおそれがあります。●ステンレスキッチンテーブル(LV-310)上で燃焼器を使用する際は、燃焼機のセット箇所によっては上フレームや本製品が熱くなることがあります。ヤケドにご注意ください。●炎天下での使用や、直射日光・夏場の車内での保管は避けてください。高温になりヤケドの危険があります。


⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

●本製品に無理な力を加えないでください。変形、破損の原因になります。●火気を使用する際はトレイの上に可燃物を置かないでください。火災の原因となります。●連結部は完全に固定する機能はありません。連結部のシャフトが接続先商品(対応品番)の奥まで挿入されていることを確認してお使いください。確実にセッティングされていない状態での使用は、トレイの抜け、脱落の発生につながり、転倒、火災、ヤケドの原因となるおそれがあります。●使用中にもシャフトの抜けがないか確認をしてください。●金属製のヘラや固いもの、尖ったものなどで擦らないでください。傷の原因になります。●本製品は傷がつくことにより、金属の素地が露出します。運搬や取扱いにご注意ください。●熱した鍋などを天板に置くと、熱により天板の塗膜が変色・融解する可能性があります。●レールジョイントに取り付けてのご使用は、絶対にしないでください。取り付ける製品の転倒や破損の原因となるおそれがあります。●IGTやステンレスキッチンテーブルに接続したまま移動させないでください。周囲にぶついたり、無理な力がかかることにより破損するおそれがあります。

使用方法


※レールジョイントに取り付けてのご使用は、転倒や破損につながるおそれがありますので絶対にしないでください。また、ご使用前に対応品番をご確認ください。

[横から見た図] IGT サイドトレイ

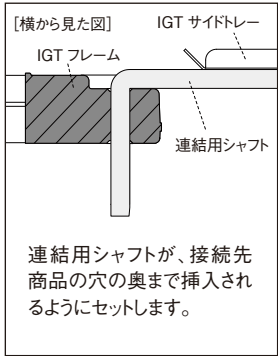


連結用シャフトが、接続先商品の穴の奥まで挿入されるようにセットします。


① サイドトレイ下部にある2本の連結用シャフトを押し広げる。 ② 接続先商品の穴に連結。

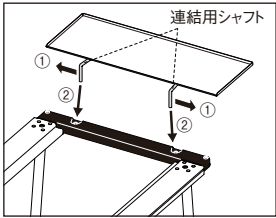


IGT (CK-149、CK-150、CK-902、CK-903、CK-904)、エントリー-IGT (CK-080R)、コネクショントーブル (LV-381)

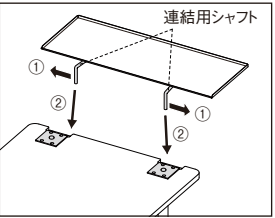


マルチファンクションテーブル (CK-116T、CK-117T)

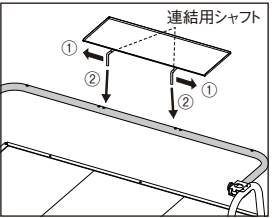

ステンレスキッチンテーブル (LV-310)

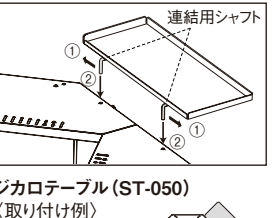

ジカロテーブル (ST-050) <取り付け例>



メンテナンス方法

●軽い汚れや水分が付着した場合は、速やかに乾いた布で拭き取ってください。●塩分(調味料など)やその他の薬品が付着した場合は、中性洗剤で洗い十分に乾燥させてください。●本製品を洗う際はたわしやスポンジのスコッチ面の使用はお控えください。傷の原因となります。●洗浄する際に塗装部は中性洗剤で洗浄していただき、酸性やアルカリ性の洗浄剤を含んだもので洗浄しないでください。塗装剥がれやシミの原因となります。●保管する場合は、直射日光の当たらない、風通しの良く湿気の少ない場所に保管してください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1. 素材の経年劣化による損害など商品の寿命 / 2. 改造および粗雑な取扱いによる故障 / 3. 取扱説明書で禁止されている取扱いによる故障 / 4. 不測の事故による商品の故障 / 5. その他製造上の欠陥以外による製品の故障 / 6. ゴミやさびによる故障 / 7. 分解したことによる不具合の発生または破損 / 8. 落下やその他の衝撃による部品の変形や破損による不具合 / 9. 摩擦によるパーツの変化及びそれによる故障 / 10. 他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。 / 2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。


不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**
販売店様または弊社ユーザーサービスまで
お問い合わせください。
0120-010-660 (9:00~17:00)
Email: userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN KOREA

FES-043-BK IGT Side Tray in Black

Thank you for purchasing a Snow Peak product. This product is a tray that expands the functionality of an iron grill table (IGT) and stainless steel kitchen table. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

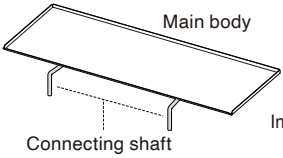Set Contents (item names)	Specifications	Product numbers of compatible products
 Main body Connecting shaft Instruction Manual (this manual)	•Material: Stainless Steel (Heat Resistant Coating) •Size : 500×191×58 (h) mm / 19.7"× 7.5"× 2.3" (h) •Weight : 830g / 29.3oz	This product can be attached to the following models: CK-080R, CK-149, CK-150, CK-902, CK-903, CK-904, CK-116T, CK-117T, CK-116TL, CK-117TL, LV-310 (* Only attach to the outer side of the top frame.), ST-050, and LV-381 *Please note that this product is not compatible with models other than those listed above.

Safety Precautions: Before use, please read thoroughly to ensure safety and prevent accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

•Before use, carefully read the instruction manuals of the products to which this item will be attached.

⚠ WARNING / Misuse could result in serious injury or death.


•Do not apply force to this product by sitting, leaning, or hanging on it. Doing so may cause this product to break or tip over and lead to an unexpected accident.
 •Do not place objects weighing 2 kg or heavier on the tray. Doing so may cause this product and the products it is attached to tip over or be damaged. •Do not place a burner or lantern on this product. Doing so may cause a fire or burn injuries. •When using a burner on the stainless steel kitchen table (LV-310), the upper frame or this product may become hot depending on where the burner is placed. Exercise care to avoid burn injuries. •Do not use this product under the blazing sun, in direct sunlight, or leave it inside a car during summer. The product may become very hot and cause burn injuries.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.


•Do not apply excessive force to this product. Doing so may cause deformation or damage. •When using an open flame, do not place any combustible materials on the tray. Doing so may cause a fire. •The connecting parts are not designed to lock securely in place. Before use, make sure that the connecting shafts are fully inserted into the connected compatible table. Using the tray without proper installation may cause it to come loose or fall off, which may result in tipping, fire, or burn injuries. •Check periodically during use to make sure the shafts are not coming loose. •Do not scrape or scratch the product with metal spatulas or hard or sharp objects. Doing so may cause scratches. •If this product is scratched, the underlying material may be exposed. Handle with care when moving and using. •Placing a hot pan or other utensils on the top plate may cause the coating to become discolored or melt. •Do not use this product by attaching it to rail joints. Doing so may cause the connected table to tip over or be damaged. •Do not move an IGT or stainless steel kitchen table with this product attached. Collisions or excessive force may cause damage.

Instructions for Use


***Do not use this product by attaching it to rail joints, as this may cause it to tip over or be damaged. In addition, check the product numbers of compatible products before use.**

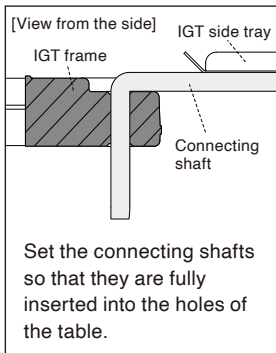


- ① Press and spread the two connecting shafts located beneath the side tray.
- ② Insert the shafts of the product into the holes of the table.

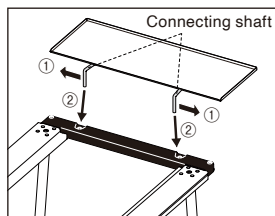


IGT (CK-149, CK-150, CK-902, CK-903, CK-904), Entry IGT (CK-080R), Connection Table (LV-381)

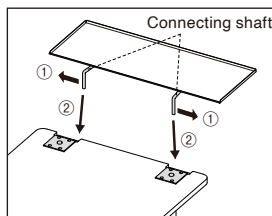


Bamboo Table Extension (CK-116T, CK-117T)

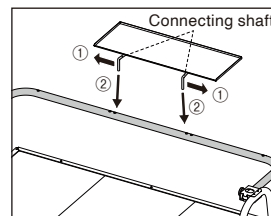

Stainless Kitchen Table (LV-310)

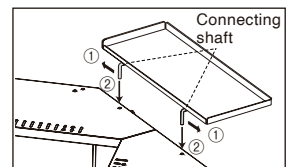

Jikaro Fire Ring Table (ST-050)
<Installation example>



Maintenance instructions

•Wipe off light dirt or moisture immediately using a dry cloth. •If salt (from seasonings, etc.) or other chemicals have fallen onto the product, wash them off using a mild detergent and dry thoroughly. •Do not use the abrasive side of scrubbing brushes or sponges when washing this product. Doing so may cause scratches. •When cleaning the painted surfaces, use a mild detergent only. Do not use acidic or alkaline cleaners. Doing so may cause paint to peel or stains. •Store out of direct sunlight in a well-ventilated area with little humidity.

Warranty

The specifications of Snow Peak products are based on field testing and quality control to ensure the correct function and longevity of every product. If apparent defects in the manufacturing of the product are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty. 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by improper use not following the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Damage not caused by defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage or defects caused when dismantling the product. / 8. Damage and defects caused by dropping or other shocks to the product. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with other maker's products.

Repair

•For repairs, please contact the retailer where you purchased the product or Snow Peak user service. •When you ask for repair, please make sure that the product is dry and clean. •Please attach a memo or some kind of tag indicating the needed repair, and please write details of when and how the damage occurred. •Shipping cost and repair fee for the repair as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak USA, Inc.
 404 NW 23rd Avenue, Portland, Oregon 97210, USA
 Tel. +1(888)424-4916 / Instagram. @snowpeakusa
 Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
 456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
 Tel. +81 256-46-5858 / Fax. +81 256-46-5860
 www.snowpeak.co.jp

MADE IN KOREA