

取扱説明書：Ver 1.01

SD-460

シェルインナーDuo



この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、シェルター用インナーテントです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 ※ご使用の前にセット内容、付属品が全て揃っているかを確認してください。



本体



グランドシート



リペアパイプ




フレーム収納ケース



取扱説明書(本書)




フレーム



本体収納ケース

本製品にはジュラルミンベグが付属されていません。
お手持ちのベグ(×4)を別途ご用意ください。

各部の名称

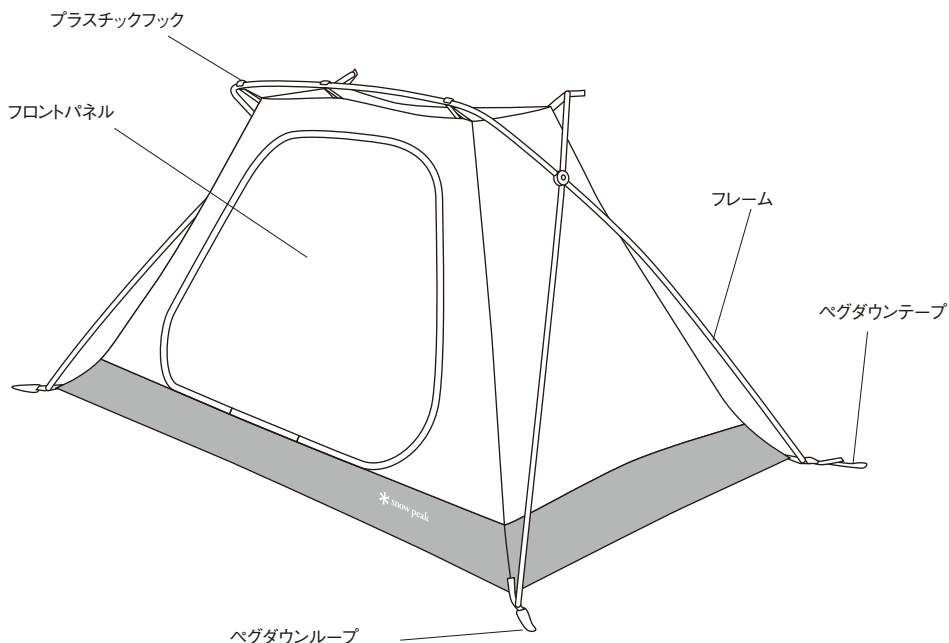

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- このテントの素材は難燃性ではありません。テント内では燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなどの裸火や炎は絶対に使用しないでください。限られた空間での火気の使用は火災の恐れがあり大変危険です。
- テント内で燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。



⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 気象条件には常に細心の注意を払い、悪天候(大雨、降雪、強風、雷等)が予想されるときは速やかにキャンプを中止して安全な場所へ避難してください。
- 高温に加熱されたものや発熱性のあるものを持ち込まないでください。天候によりテント内が高温になり、熱中症などの危険があります。お子様の昼寝の際になど、細心の注意を払ってください。
- スノーピーク製のシェルターおよび側面付きのタープの室内でインナーテントとしてご使用ください。本製品単体で室外での使用はしないでください。



⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。


- 本製品は常設用ではありません。テントの素材は長時間日光にさらされた場合、退色や生地劣化などの強度不足を起こしますので、常設用として使用しないでください。
- 日差しにより本体表面は低温やけどに発展するほどの高温になります。十分ご注意ください。
- 焚火や花火などのそばで組み立てたり、使用しないでください。火の粉を被り、生地に穴をあけてしまう場合があります。
- テントの設営・撤収の際は、風に飛ばされないようフレームをしっかりと支えて作業してください。フレーム先端のハネ返しなどで思わぬ事故に繋がる恐れがありますので必ず周囲の安全を確認してください。

設営の手順

設営・撤収は以下の説明に従い、繰り返し練習し、実際のキャンプに備えてください。

また、付属品が全て揃っているか、前もってご確認ください。無理な設営・撤収は本体やフレームの破損や事故の原因になります。本書をよくお読みになりご使用ください。


- ① 本体を平らな場所に広げます。
このとき、ロゴがある方が正面になります。

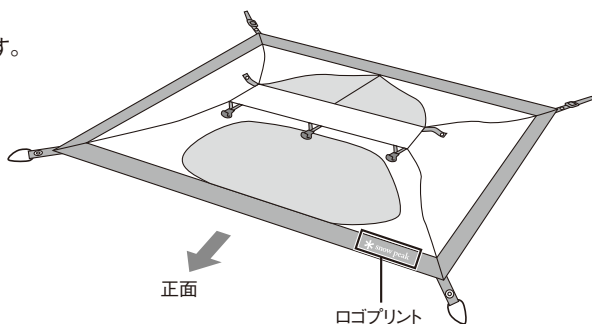


- ② フレームを連結し、フレームの先端のピンをテント四隅のグロメットに差し込みます。
シルバーのフレーム節のピンを灰色のテープのグロメットに差し込んでください。
次に黒色のフレーム節のピンを黒色のテープのグロメットに差し込んでください。

△注意

フレームがしっかり連結できているかご確認ください。
連結部に隙間があるとフレームが破損しやすくなります。

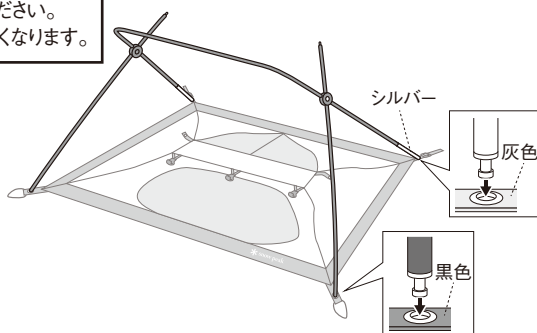


- ③ テント後方上部のグロメットをフレームのピンに取り付けます。(2箇所)

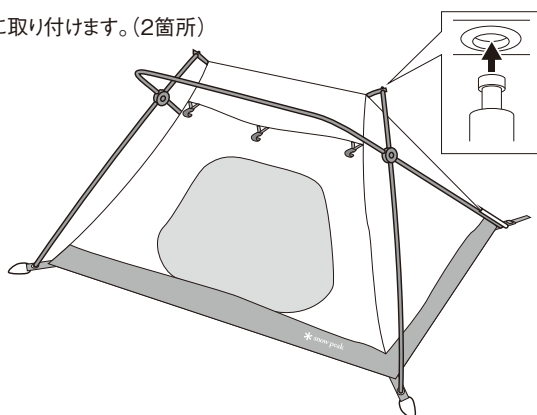

- ④ 本体前方のプラスチックフックをフレームに取り付けます。(3箇所)



×

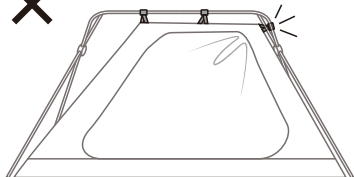

※プラスチックフックをフレーム側部に取り付けしないでください。




- ⑤ グランドシートを下図ロゴプリントが前方上面になるように広げてください。グランドシートの各コーナーにあるトグルをテント本体のOリングに取り付けます。

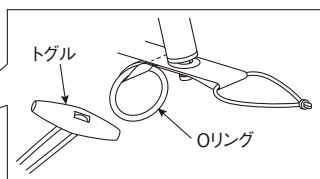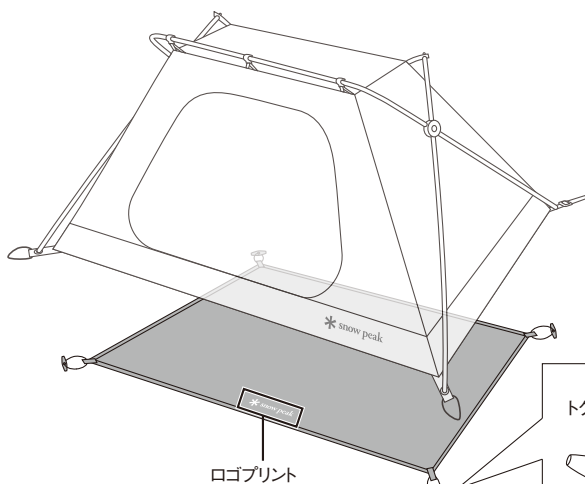

△注意

側面付タープの中でテント本体にポールを通して使用する場合、ポール先端の圧力によってグランドシートが破損する恐れがあります。ポールを通してご使用する場合、グランドシートの使用は推奨しません。

⑥ ボトムの各コーナーをベグで固定してください。

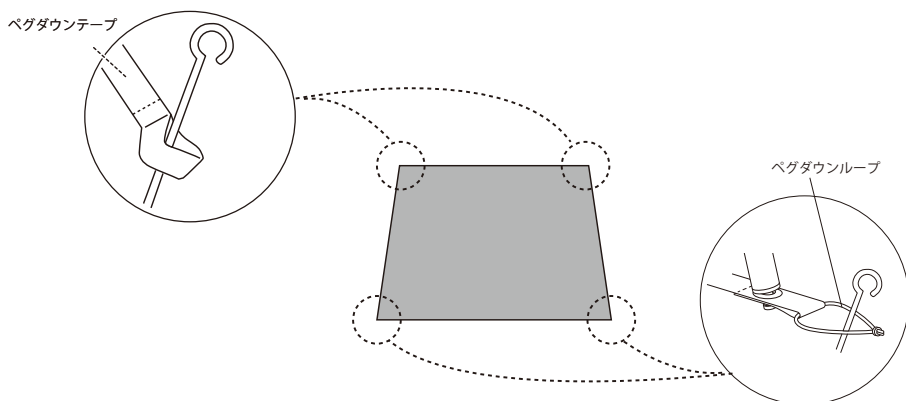

撤収・収納時の注意事項

- 十分に乾燥してから収納してください。
- テントの中に何も入っていないこと、すべてのパネルや窓部のファスナーが閉まっていることを確認してから撤収をはじめてください。
- フレームをグロメットから外す時はフレームがハネ返り危険です。フレームが真っすぐになるまで手を離さないでください。
- フレームは必ず毎回中央付近から折りたたんでください。端から折りたたむとフレーム内部のショックコードの伸びや切れ、フレームの曲がりや折れの原因になります。

結露について

空気中に含まれている水分が急激に冷やされて霧状になったものが結露として現れます。特にテントやシェルター等の限られた空間では、中にいる人間の水分が呼吸や汗などにより空気中に放出され水蒸気となり、通常の室内よりも水蒸気の濃度が高くなり、結露の発生する確率が高くなります。結露は優れた透湿防水素材でも使用状況により完全に防ぐことは不可能です。ご使用中は結露軽減のため、こまめに適時換気を行ってください。

撥水・防水性能について

- 本体の生地には撥水加工を施していますが、生地特性上、撥水性能(撥水の仕方や耐久性)に若干の差が見られる場合があります。また、ご使用を重ねますと撥水性能が低下する場合があります。性能が低下した場合は市販の撥水スプレー等を、それらの説明書をよくお読みの上ご使用ください。
- ボトム部、グランドシートには防水性の高い生地を使用しておりますが、地面の水溜りなどへ長時間接触していると雨水が浸み込む場合があります。
- 農薬などでPUコーティングが破壊され耐水圧が著しく低下してしまう場合があります。この症状と判断された場合、製品の保証が出来なくなりますのでご注意ください。
- 撥水剤の影響によりロゴマークが剥離する場合があります。
- シェルター内での使用を前提としている設計のため、ウォール部にはPUコーティングを施しておりません。

メンテナンス・保管

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 本製品はポリエステル生地を組み合わせで使用しています。生地の特性を考慮し、できる限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。また、濡れたままの保管は避けてください。
- 濡れたまま保管すると、カビや悪臭、生地の色移り、生地の劣化などのトラブルの原因になりますので、使用後は風通しの良い日陰で十分に乾燥し、柔らかいブラシなどで泥汚れを落としてから保管してください。
- フレームは表面の汚れを落とし、十分に乾燥させてから保管してください。濡れたまま保管すると腐食し、強度が低下します。ジョイント部分はつねに清潔にし、少量のシリコン系潤滑剤を薄く塗布してください。塗布し過ぎると生地に油シミができますのでご注意ください。また、ボール内部のショックコードは不必要に引っ張らないでください。
- 高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。
- ファスナーに泥や砂、ホコリなどが付着したまま使用すると摩耗し破損の原因になりますので、ブラシなどを使いつねに清潔にしてください。また、スライダーの動きを滑らかにするために、少量のシリコン系樹脂剤を定期的に塗布してください。塗布し過ぎると生地に油シミができますのでご注意ください。
- 小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。
- ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。
- シームテープはPUコーティングが痛まない程度の温度設定で圧着されていますが、使用を重ねるにしたがい剥離してしまふ場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみを再度圧着してください。熱を掛け過ぎた場合、生地が変色したり劣化が促進されますのでご注意ください。シームテープは無理やり剥離させないでください。PUコーティングと一緒に剥離された場合、修理できなくなる可能性があります。
- 樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の下を避けて設置してください。溶剤などにより無理に除去すると生地やコーティングを傷めます。
- 次回のキャンプに備え、上記の通り十分に保守、点検をしてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。


1. 素材の経年劣化による損害など商品の寿命
2. 改造および粗雑な取扱いによる故障
3. 取扱説明書で禁止されている取扱いによる故障
4. 不測の事故による商品の故障
5. その他製造上の欠陥以外による製品の故障
6. ゴミやさびによる故障
7. 分解したことによる不具合の発生または破損
8. 落下やその他の衝撃による部品の変形や破損による不具合
9. 摩擦によるパーツの変化及びそれによる故障
10. 他社製品との組み合わせによる故障

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。
 1. 保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。
 2. 保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

スペック

- セット内容:テント本体、フレーム、グランドシート、リペアパイプ、本体ケース、フレームケース
- 材質:本体／20Dナイロンリップストップ(ウォール部)、40Dナイロンリップストップ、PUコーティング耐水圧1,500mmミニマム(ボトム部)、フレーム／A7001、グランドシート／210Dポリエステルオックス、PUコーティング耐水圧1,800mmミニマム
- 収納サイズ:58×25×15(h)cm
- 重量:2.7kg
- 対応人数:2名

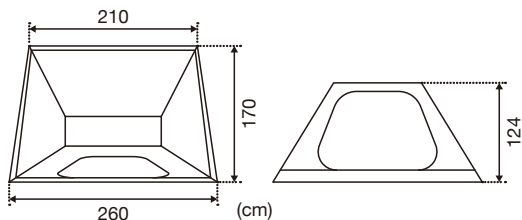

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピーク ☎ **0120-010-660** (9:00~17:00)
ユーザーサービス Email: userservice@snowpeak.co.jp

株式会社スノーピーク

〒955-0147 新潟県三条市中野原456
 Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

Product Manual : Ver 1.01

SD-460

Shell Inner Duo



Thank you for purchasing a Snow Peak product. This product is a shelter inner tent for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents * Make sure that all accessories are supplied before use.



Main body



Ground Sheet



Repair Pipe




Frame Carry case



Instruction manual




Frame



Tent Carry case

This product does not come with any duralumin pegs. Use your own pegs (× 4) with this product.

Name of the Parts

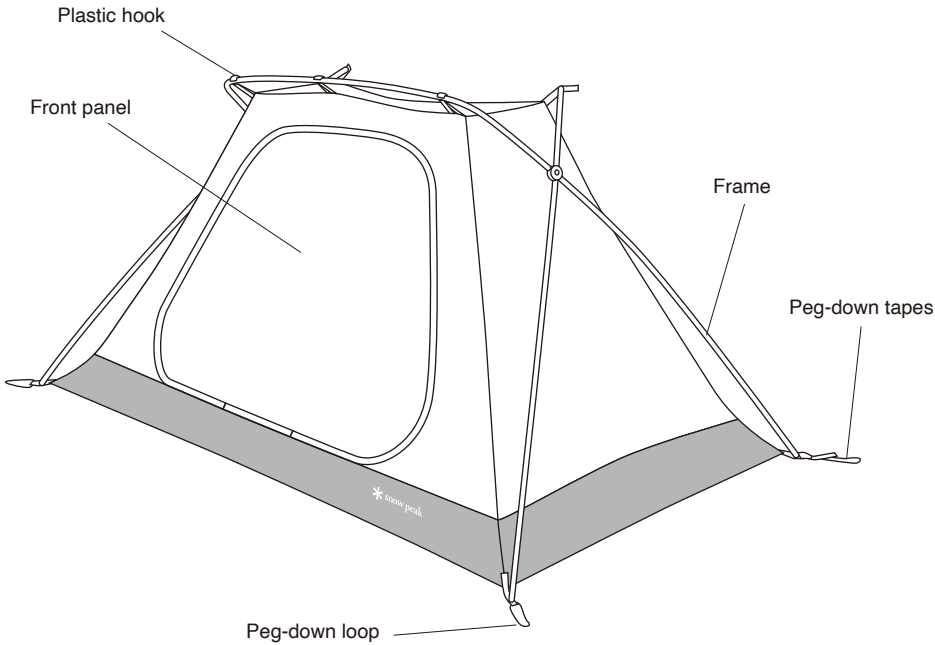

⚠ DANGER Misuse could easily result in a serious accident or death.

- The tent material is not flame-proof. Do not use combustion-based heat sources (such as lanterns, stoves, or heaters) or open flames (such as matches, candles, lighters or cigarettes) inside the tent. The use of such heat or light sources inside a small enclosed space is very dangerous and may result in fire.
- Do not keep fuel inside the tent or bring in flammable items for replenishing fuel, etc.



⚠ WARNING Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Pay close attention to the weather. If bad weather conditions (e.g. heavy rain, snow, strong wind, or thunder) are forecast, pack up camp immediately and evacuate to a safe place.
- Do not bring hot items or items that generate heat into the tent. The temperature inside the tent will be elevated in warm weather, and excess heat could cause heatstroke. Pay close attention to the temperature, particularly when children are asleep.
- Use this product as an inner tent inside a Snow Peak shelter or under a tarp with sides. Do not use this product outdoors on its own.



⚠ CAUTION Misuse could result in injury to the user and/or damage to property.


- This product is not for permanent setup. If the tent is left in the sun for long periods, materials may fade in color or deteriorate and lose strength. Do not leave the tent set up permanently.
- Sunlight can cause the surface of this product to heat up, potentially causing low-temperature burns. Be especially cautious when handling.
- Do not assemble or use this product near a campfire, fireworks, etc. Sparks can create holes in the material.
- Firmly hold the frame so that it won't be blown away by the wind when assembling and disassembling the tent. Unexpected accidents may occur due to the pole ends recoiling. Ensure that the surrounding area is safe.

Setup procedure


Follow the instructions below to practice setting up and packing up this product several times in order to prepare yourself for the actual camping.

Check in advance that all accessories are supplied. Inadequate setup and packing up may result in damage to the main unit or the frames and further lead to accidents. Carefully read this document to ensure correct use.

- 1 Spread the main unit on a flat surface.
The side with the logo is the front side.

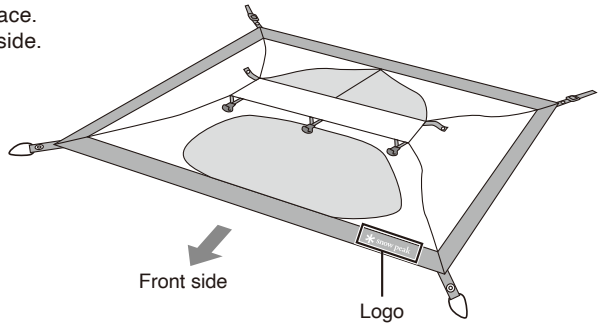


- 2 Connect the frame and insert the pins at the ends of the frame into the grommets at the four corners of the tent.
Insert the pins of the silver frame segment into the grommets with a gray tape.
Next, insert the pins of the black frame segment into the grommets with a black tape.

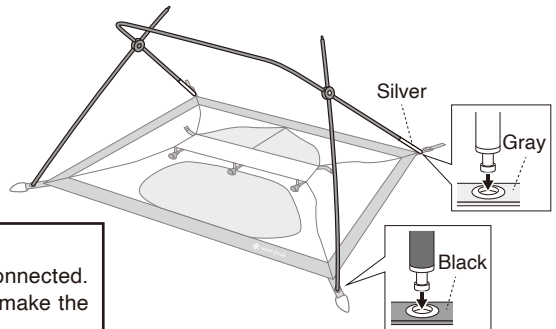


⚠ Caution

Make sure that the frame is securely connected. Any gap in the connection points can make the frame susceptible to damage.


- 3 Attach the grommets at the top of the back side of the tent to the pins on the frame. (2 locations)

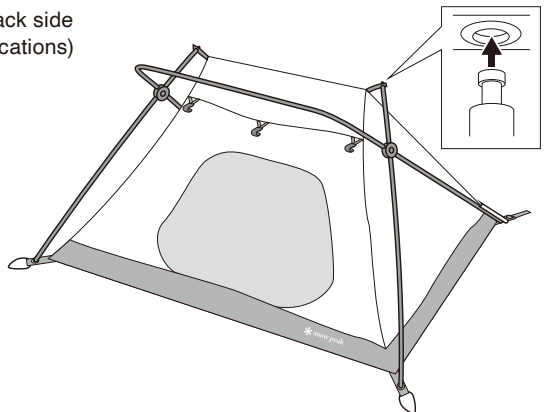



- ④ Attach the plastic hooks on the front side of this product to the frame. (3 locations)

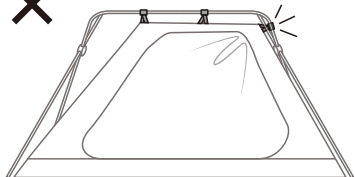

* Do not attach the plastic hooks to the side of the frame.

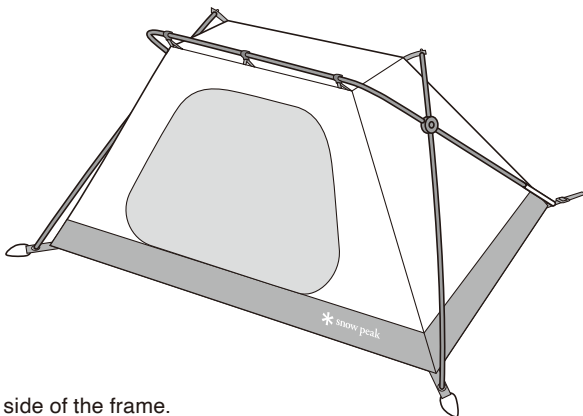


- ⑤ Spread the ground sheet with the printed logo facing up at the front side, as shown in the picture below. Attach the toggle at each corner of the ground sheet to its corresponding O-ring on the tent.

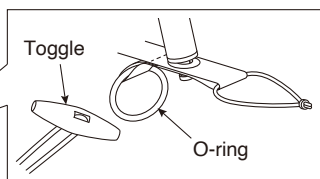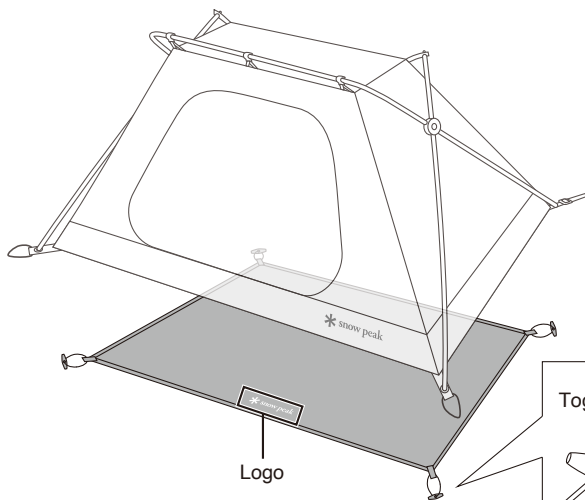

⚠ Caution

When using this product inside a tarp with sides, the end of the pole erect through the tent may apply excessive pressure on the ground sheet, which can result in damage. The use of the ground sheet is not recommended when using the tent with a pole through it.

- ⑥ Secure each corner of the tent floor with pegs.

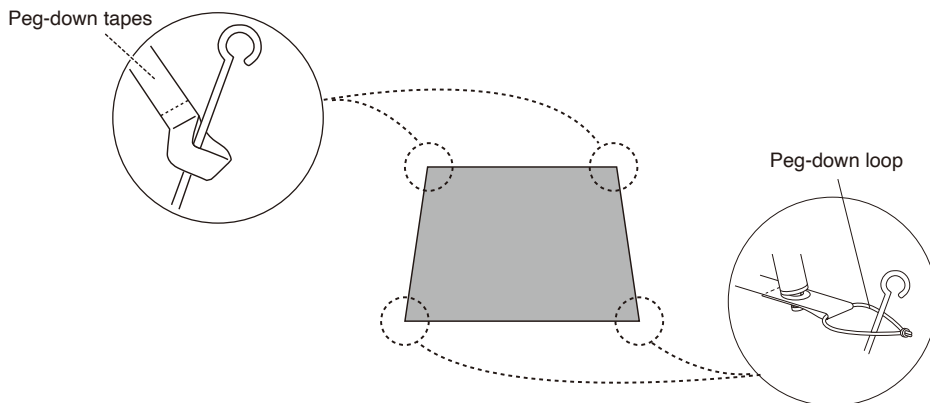

Precautions for Disassembly and Storing

- Please make sure that the product is sufficiently dry before storing it.
- Start packing up after confirming that there is nothing left inside the tent and that the zippers of all panels and windows are closed.
- The frame may spring back as it is being removed from the grommets. Do not let go until the frame is straight.
- Please fold frames & poles from the center each time. If you fold the frame & pole from the edges, the shock cord inside the frame & pole may stretch or break, causing the frame & pole to bend or break.

Regarding Condensation

Mist is a collection of water droplets suspended in the air that turns into condensation in rapidly falling temperatures. In smaller spaces such as the inside of a tent or shelter, water vapor concentration is higher than in an ordinary room and frequently results in more condensation. Depending on the surrounding conditions, it may be impossible to avoid condensation completely, even with waterproof materials. To reduce condensation, allow steady ventilation while the shelter is in use.

Water-Repellent and Waterproof Functions

- The fabric of the shelter is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.
- This product uses materials with high waterproof performance in the bottom part and the ground sheet. However, if the materials make contact with pools of water on the ground for long periods, water may soak into the material.
- The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product cannot be subject to warranty if damaged by agricultural chemicals.
- The logo may peel off due to the effect of the water repellent agent.
- This product is designed to be used inside a shelter, so the walls are not PU-coated.

Maintenance & Storage

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing.
- Clean and dry the surface of the frame before storing. Storing them while they are still wet can result in corrosion, which will weaken them. Keep the joints clean and apply a small layer of silicone lubricant. Applying too much lubricant can stain the material. Do not pull the shock cords inside the poles unnecessarily.
- Please store in a well-ventilated area away from direct sunlight, high temperatures, and humidity.
- Using the zipper when it is covered with mud, sand or dust may cause wear or damage. Clean the zipper with a brush before use. Apply small amounts of silicone lubricant to the zipper regularly to ensure smooth movement. Do not apply excessive amounts of lubricant as it will leave stains on the cloth.
- Small areas of fabric damage can be fixed with repair tape. Please read the repair tape manual carefully before applying.
- Depending on the conditions during use, the shelter material may deteriorate over a wide area, losing its durability and becoming irreparable.
- Seam tape is pressure-capped at a temperature setting that prevents damage to the PU coating. However, it may peel off as it is used repeatedly. If peeling is found, set an iron at a low temperature and reattach only the peeling sections. Be aware that excessive heat will discolor or accelerate the deterioration of the fabric. If the PU coating peels off completely, it may be impossible to repair.
- Do not allow sap to stick to the product, as sap cannot be completely cleaned off. Avoid placing the product under trees that may drip sap. Using solvent or other substances in an attempt to remove sap will damage the material and coating.
- To maximize the longevity of this product, regularly check and maintain the product (including all accessories such as the pegs).

Warranty


Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.
 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Specifications

- Contents: Main Body, Frame, Ground Sheet, Repair Pipe, Tent Carry Case, Frame Carry Case
- Material: Main Body / 20D Nylon Ripstop (Wall), 40D Nylon Ripstop, PU Coating Waterproof Rating: 1,500mm minimum (Bottom), Frame / A7001, Ground Sheet / 210D Polyester OX, PU Coating Waterproof Rating: 1,800mm minimum
- Storage Size: 58×25×15(h)cm (22.8"×9.8"×5.9")
- Weight: 2.7kg / 6 lbs
- Capacity: 2 persons

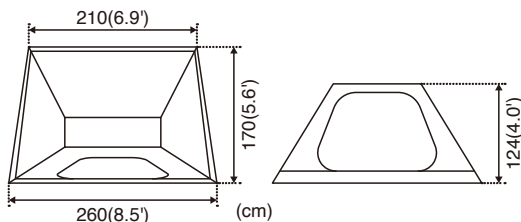

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA