

SSD-730-IV-US ラゴ 1 アイボリー

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、キャンプ用テントです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)



スペック

- 材質:フライシート／75D難燃性ポリエステルタフタ・PUコーティング耐水圧1,800mmミニマム・撥水加工・UVカット加工、インナーウォール／68D難燃性ポリエステルタフタ、ボトム／75D難燃性ポリエステルオックス・PUコーティング耐水圧1,800mmミニマム、フレーム／ジュラルミンA7001 (φ9.5mm)
- 収納サイズ:13×13×37(h)cm
- 重量:本体／1.4kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●テント内では燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなど裸火や炎は絶対に使用しないでください。限られた空間での火気の使用は火災や酸欠、一酸化炭素中毒などの恐れがあり大変危険です。●テント内で燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。

●テント内では燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなど裸火や炎は絶対に使用しないでください。限られた空間での火気の使用は火災や酸欠、一酸化炭素中毒などの恐れがあり大変危険です。●テント内で燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。



⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

●ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●気象状況には常に細心の注意を払い、風の強い時や悪天候が予想されるときは速やかにテント泊を中止して安全な場所へ避難してください。●高温に加熱されたものや発熱性のあるものを持ち

込まないでください。天候によりテント内は高温になり、熱中症などの危険があります。●風の吹き抜けるような場所や、雪崩、がけ崩れ、急な出水などの恐れのない地盤のしっかりとした、水はけの良い平坦な場所を選んで設営してください。




⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

●日差しによりフライシート表面は低温やけどに発展するほどの高温になります。十分にご注意ください。●焚火や花火などのそばで組み立てたり、使用しないでください。火の粉を被り、生地穴をあけてしまう場合があります。●テントの設営・撤収の際は、フレームをしっかりと掴んで作業してください。フレームの先端がハネ返るな


どして思わぬ事故になりますので、近くに人がいないかなど、周囲の安全を確認してください。●張り綱でしっかりとテントを固定してください。●テントの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。

設営の手順

- ①インナーテントを平らな場所に広げます。
- ②メインフレーム、サブフレームを組み立てます。フレームの接続部分にすき間ができないよう、しっかりと差し込んでください。
- ③サブフレームをスリーブに差し入れ、両端をグロメットに差し込みます。
- ④メインフレームを出入口から室内に入れてセットします。両端はコーナー補強部に当ててください。
- ⑤⑥の順にベグダウンします。⑤⑥を引っ張り合うようにテンションをかけるとフレームが立ち上がります。
- ⑦⑧⑨⑩の順にベグダウンすれば、インナーのセッティングが完了です。
- ⑪サブフレームスリーブ上部にフライシートのベルクロを巻き付け固定します。

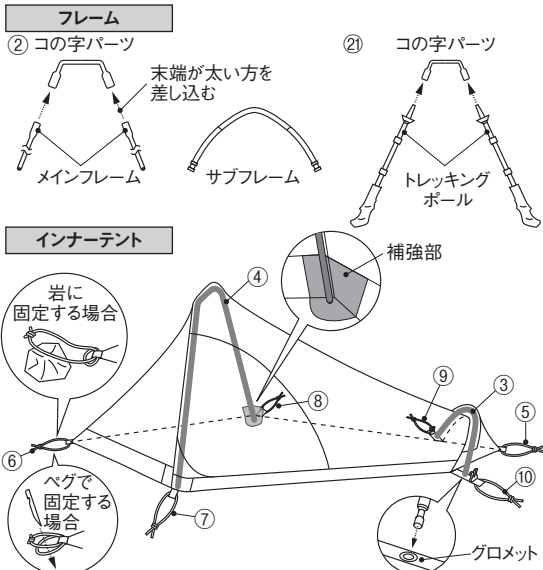

- ⑫メインフレーム上部にフライシートのベルクロを固定します。
- ⑬⑭プラスチックジョイントを接続します。
- ⑮⑯⑰インナーテントを固定したベグに3コーナーのループを引っ掛けます。
- ⑰前室部コーナーをベグダウンします。
- ⑱⑲張綱2か所をベグダウンし、完成です。
- ⑳メインフレームはお手持ちのトレッキングポールで代用可能です。荷物を軽減させたい場合にご利用ください。※ご利用できるトレッキングポールは、バスケットが小さく、全長が110cmに調整可能な物に限ります。

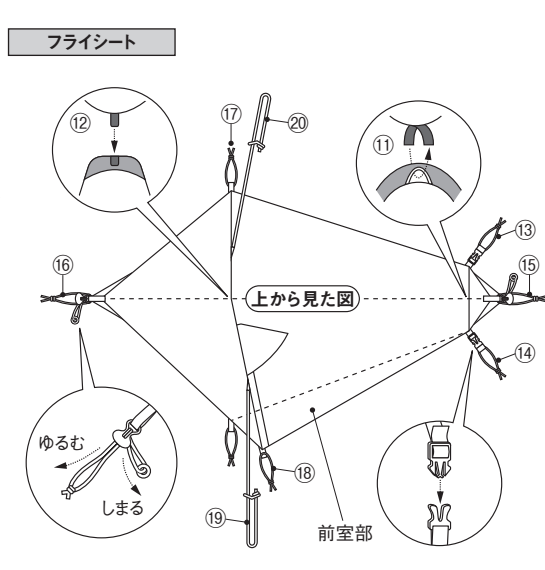

撥水・防水性能について

●本製品はいずれの生地にも撥水加工を施していますが、生地の特性上、撥水性能(撥水の仕方や耐久性)に若干の差が見られる場合があります。また、ご使用を重ねますと撥水性能が低下する場合があります。性能が低下した場合は市販の撥水スプレー等を、それらの説明書をよくお読みの上ご使用ください。●ボトムにはPUコーティ

ングを施してありますが、地面の水溜りなどへ長時間接触していると雨水が浸み込む場合があります。●農薬などでPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と判断された場合、製品の保証が出来なくなりますのでご注意ください。●撥水剤の影響によりロゴマークが剥離する場合がございます。

メンテナンスについて

●長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●本製品はポリエステル生地を組み合わせて使用しています。生地の特性を考慮し、できる限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。また、濡れたままの保管は避けてください。●フレームを通した状態のままで逆さまにしないでください。フレーム折損や生地損傷の原因になります。●フレームは表面の汚れを落とし、十分に乾燥させてから保管してください。濡れたまま保管すると腐食、強度が低下します。ジョイント部分は常に清潔にし、少量のシリコン系潤滑剤を薄く塗布してください。塗布し過ぎると生地に油ジミができますのでご注意ください。また、フレーム内部のショックコードは不要に引っ張らないでください。●フレームの経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

イダーの動きを滑らかにするために、少量のシリコン系樹脂剤を定期的に塗布してください。塗布し過ぎると生地に油ジミができますのでご注意ください。●小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。●ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。●次の使用に備え、張り綱などの付属品も含め、十分に保守、点検をしてください。●シームテープはPUコーティングが痛まない程度の温度設定で圧着されていますが、使用を重ねるにしがたい剥離してしまう場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみを再度圧着してください。熱を掛け過ぎた場合生地が変色したり劣化が促進されますのでご注意ください。シームテープは無理やり剥離させないでください。PUコーティングと一緒に剥離された場合、修理できなくなる可能性があります。●樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の根を避けて設営してください。溶剤などにより生地に除去すると生地やコーティングを傷めます。●使用する際にフレームが折れてしまった場合は、応急処置として速やかに付属のリペアパイプや添え木をあて、ビニールテープなどで固定するか、撤収をしてください。(図B)



品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
☎0120-010-660(9:00~17:00)
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN VIETNAM


SSD-730-IV-US Lago 1 Ivory

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC
This tent is made with flame resistant fabric which meets CPAI-84 specifications. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.
The application of any foreign substances to the tent fabric may render the flame resistant properties ineffective.

Thank you for purchasing a Snow Peak product. This product is a tent for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

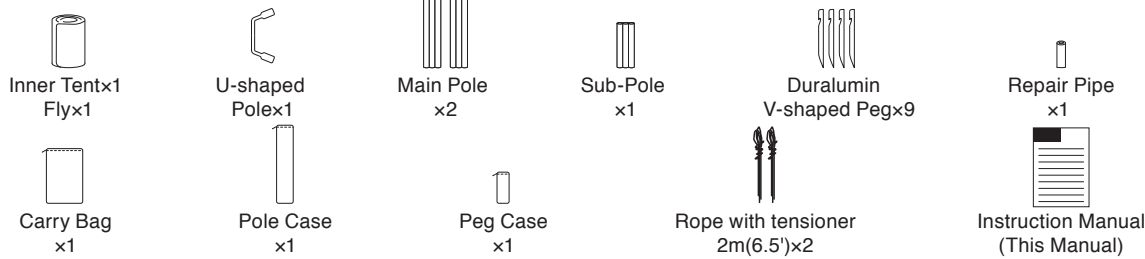

Specifications

- Material: Fly / 75D Fire-resistant Polyester Taffeta, PU coating Waterproof rating 1,800mm minimum, Water repellent finish, UV protection treatment; Inner wall / 68D Fire-resistant Polyester Taffeta; Bottom / 75D Fire-resistant Polyester Oxford, PU coating Waterproof rating 1,800 mm minimum; Pole / Duralumin A7001(9.5mm(0.37"))
- Carry Bag size: 13x13x37(h)cm (5.1"x5.1"x14.5")
- Weight: 1.4 kg (3 lbs)

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

●Do not use combustion-based heat sources such as lanterns, stoves or heaters, or open flames such as matches, candles, lighters or cigarettes, inside the tent. The use of such heat or light sources inside a small enclosed space is very dangerous and may result in fire,

oxygen deficiency, or carbon monoxide poisoning. ●Do not keep fuel, or flammable items for replenishing the fuel, inside the tent.



⚠ WARNING / Misuse could result in serious injury or death.

●Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. ●Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place. ●Do not bring heated items into the tent when they are at high temperatures. Inside

the tent, very high temperatures may cause heatstroke. Pay close attention to the temperature, particularly when children are asleep inside the tent. ●Choose a flat, well-drained area with firm ground to pitch the tent. Choose an area where there is no chance of avalanches, landslides, wind gusts or sudden flooding.




⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

●Sunlight can cause the surface of the Fly to heat up, potentially causing low-temperature burns. ●Do not assemble or use the tent close to a bonfire, fireworks, etc. Flying sparks can create holes in the tent fabric. ●Firmly hold the tent pole when assembling and disassembling the tent. Unexpected accidents may occur due to the Pole ends recoiling, etc, so ensure that the


surroundings are safe, with no other people in the vicinity. ●Firmly secure the Pegs, Guy Lines, etc. ●If the tent is left in the sun for long periods, the materials may fade in color or the fabric may deteriorate and lose strength. Do not leave the tent set up permanently.

Setup Procedure

- ① Spread the Inner Tent on a flat area.
- ② Assemble the Main Poles and Sub-Poles. Make sure to insert each pole firmly and avoid leaving a gap at the connection points.
- ③ Insert the Sub-Poles into the sleeves and insert both ends into the grommets.
- ④ Insert the Main Poles into the room from the doorway and set it down. Align both ends against the corner reinforcement.
- ⑤ ⑥ Peg down from ⑤ to ⑥. The pole will rise when tension is applied by pulling ⑤ and ⑥ together.
- ⑦ ⑧ ⑨ ⑩ Peg down in the following order ⑦, ⑧, ⑨, ⑩ to complete the setup of the inner tent.

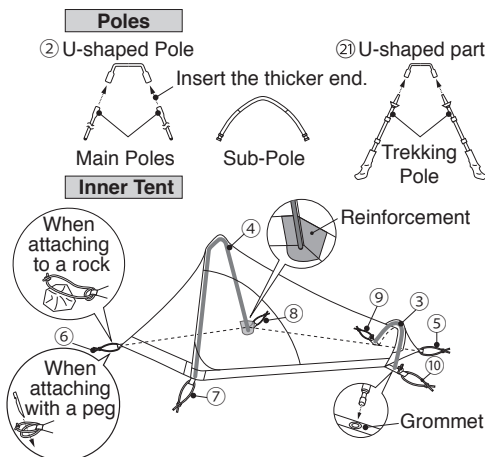

- ⑪ Wrap the Velcro on the Fly around the top of the Sub-Pole sleeve and secure it.
- ⑫ Attach the Velcro on the Fly to the upper part of the Main Pole.
- ⑬ ⑭ Connect the plastic joint.
- ⑮ ⑯ ⑰ Hook the loops at the 3 corners onto the pegs that secure the Inner Tent.
- ⑱ Peg down the corner of the front room.
- ⑲ ⑳ Peg down the 2 sections of Rope with Tensioner to complete the setup.
- ㉑ You can substitute your Trekking Pole for the Main Pole. Please use it when you want to reduce the weight of your pack. *The Trekking Poles that can be used are limited to those with a small basket and an adjustable length of 110 cm (3'6").

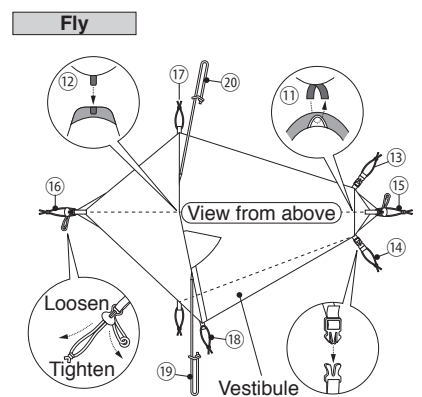

Water-repellent and waterproof functions


●The fabrics of this product are treated with a water-repellent finish. However, the level of water-repellent ability and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose its effectiveness after repeated use. When the water-repellent ability decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product instructions. ●Although the bottom part of this product has

been PU coated, rainwater may soak into it if it is in contact with pools of water on the ground for long periods of time. ●The PU coating may be damaged by agricultural or other chemicals, which may cause the water pressure resistance to drop by an abnormal degree. Please note that the product will not be covered by the warranty if it is damaged by agricultural chemicals. ●The logo may peel off due to the effect of the water repellent agent.

Maintenance

●Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. ●A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, please note that depending on storage conditions, slight color migration may occur. Do not store the product while it is wet. ●Do not turn the product upside down while the poles are inserted. Doing so may damage the poles and the fabric. ●Clean and dry the surface of the poles before storing. If they are stored when wet, they may start to corrode, which may lead to a deterioration in strength. Keep the joints clean and apply a small amount of silicone lubricant. Applying an excessive amount of lubricant will stain the fabric. Ensure that the shock cords inside the poles are not pulled unnecessarily. ●When storing the poles, please fold them from the center outwards. (Fig. A) ●Please store in a well-ventilated area away from direct sunlight, high temperatures, and high humidity. ●Using the zipper when it is covered with mud, sand, or dust may cause wear or damage. Use a brush to make sure it is always kept clean. Regularly apply small amounts of silicone lubricant to the zipper to ensure smooth

movement. Applying an excessive amount of lubricant will stain the fabric. ●Small areas of fabric damage can be fixed using repair tape. Please read the repair tape manual carefully before applying. ●Depending on the conditions during use, a large area of the product material may deteriorate, lose its durability, and become irreparable. ●In preparation for the next use, regularly check and maintain the product, including accessories such as tension ropes. ●Seam tape is pressure-bonded at a temperature setting that prevents the PU coating from being damaged. However, as it is used repeatedly, it may peel off. If you discover peeling, use an iron at a low temperature and reattach the peeled sections. Be aware that excessive heat will cause discoloring and/or accelerate the deterioration of the fabric. Do not forcibly peel off the seam tape. If the PU coating comes off completely, it may not be possible to repair it. ●Sap cannot be easily removed once it has adhered. Do not set up this product under trees that frequently drop sap. If the sap is forcibly removed using a solvent, etc., the fabric or coating may be damaged. ●If a pole breaks during use, immediately apply the repair pipe provided with the product or a brace as a temporary measure, and secure it in place using vinyl tape, or remove the pole. (Fig. B)

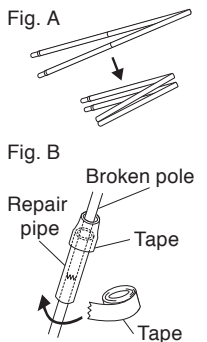

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

●If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. ●When you request repairs, please make sure that the product is dry and clean. ●Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. ●Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp