

ST-013 焚火台30周年 2WAY難燃シート

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、焚火台の下に敷く難燃シートとして、また薪の運搬用キャリーバッグとして使用できる2WAY仕様の製品です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

スペック

- 材質:シート本体／グラスファイバー（ポリウレタン樹脂コーティング）、ハンドル／ポリエステル、スナップボタン／銅、バックシン／ポリプロピレン
- サイズ:難燃シート時／900×900mm、キャリーバッグ時／450×620×300(h)mm
- 収納サイズ:320×520×50(h)mm
- 重量:600g

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- 本製品を使用する際は、本製品とあわせて使用する製品の取扱説明書を必ずお読みください。特に「安全上の注意」を十分に理解したうえで使用してください。
- 本製品の上で焚火をしたり、火のついた薪や炭を直接置いたりするなど、火気に直接触れるような使用はし

- ないでください。
- 本製品は焚火台の下に敷いて使用する製品です。焚火台以外の熱源機器には使用しないでください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用の前に本製品を点検し、各部に異常がないことを確認してください。穴あき、破れ、縫製のほつれ、スナップボタンの外れなどの異常が発見された場合は、直ちに使用を中止し、お買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 小さなお子様やペットが本製品の中に入らないようにしてください。思わぬ事故が起きる可能性があります。
- 小さなお子様の手の届かない場所に保管し、お子様だけで使用させないでください。
- 本製品からはみ出すサイズの焚火台を使用しないでください。

- 焚火台使用中に火のついた薪や炭が本製品に落下した場合は、速やかに取り除いてください。製品破損の原因となります。
- 使用後は消し炭や火種が完全に消火していることを確認してください。火種が残っていると再燃による火災の原因となります。製品をたたむ際には十分に冷めたことを確認してください。ヤケドなどのケガをするおそれがあります。

⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

- 本製品は防水仕様ではありません。
- 本製品は断熱シートではありません。地面への熱の影響を軽減するための製品であり、熱を完全に遮断するものではありません。
- 設置場所や使用環境によっては、地面が変色または変形する場合があります。
- 火の粉や飛び火により、生地が焦げたり穴があいたりする場合があります。
- 本製品を改造したり、本来の用途以外で使用しないでください。破損や事故の原因となります。
- 角や先端が鋭利なものを本製品の上に載せたり、収納したりしないでください。生地破れや穴あきの原因となります。
- キャリーバッグとして使用する際は、過度に重いものを収納せず、ハンドルをしっかりと持って運搬してください。また、本製品を地面の上で引きずらないでください。破損やケガの原因となります。
- キャリーバッグとして使用する場合は、1人で持ち運んでください。2人で左右のハンドルをそれぞれ持つと、生

- 地や縫製部に無理な力がかかり、破損やケガの原因となる場合があります。
- 難燃シートとして使用する場合は、焚火台を載せたまま本製品を持ち上げたり、移動したりしないでください。破損や火災、ヤケドの原因となります。
- スナップボタンは無理な力を加えず、ゆっくりと開閉してください。勢いよく開閉すると、スナップボタンや生地破損・劣化の原因となります。
- 水濡れや摩擦により、色移りや退色が発生する場合があります。
- 素材の特性上、強く折り曲げると白い折り跡が残る場合があります。
- 生地破損・劣化の原因となります。
- 生地の特性上、ガラス繊維が露出する場合があります。皮膚への刺激を防ぐため、露出したガラス繊維には直接触れず、使用時はできるだけ手袋を着用してください。
- ガラス繊維が皮膚に付着した場合は、こすらずに石けんと流水で洗い流してください。皮膚への刺激が続く場合は、医師の診察を受けてください。

使用方法


【難燃シートとして使用する場合】

焚火台の下へ敷き、火の粉や熱による地面へのダメージ軽減用として使用してください。

※本製品は地面への熱による影響を完全に防ぐものではありません。ベースプレート、ベースプレートスタンドなどを併用し、本製品はその下に敷いて使用してください。

●セッティング方法

ロゴが付いている面を下(地面側)にして広げ、ハンドルを難燃シートの下に入れ込んでください。
※ハンドルは難燃性ではありません。火の粉や熱にさらされないよう、必ず難燃シートの下に入れて使用してください。

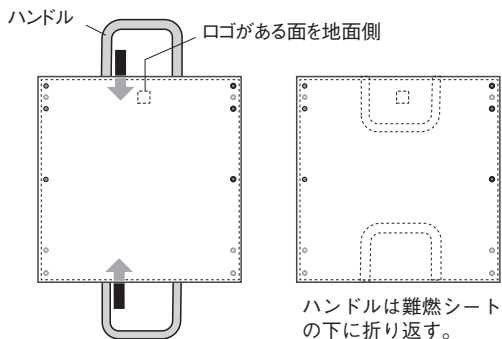

焚火台・ベースプレート・ベースプレートスタンド (別売)




難燃シート

【キャリーバッグとして使用する場合】

目安として薪を二束まで同時に収納し、運ぶことができます。
※火のついた薪や炭は運搬しないでください。
※過度に重量のあるものは収納しないでください。

●セッティング方法

本製品をロゴが付いている面を下にして広げ、左右のスナップボタンを取り付けて、折り込みます。袋の形状になったら、2本のハンドルを合わせてしっかり持って運んでください。
※スナップボタンは、ゆっくりと丁寧に開閉してください。勢いよく開閉すると、スナップボタンや生地に負荷がかかり、破損や劣化の原因となります。

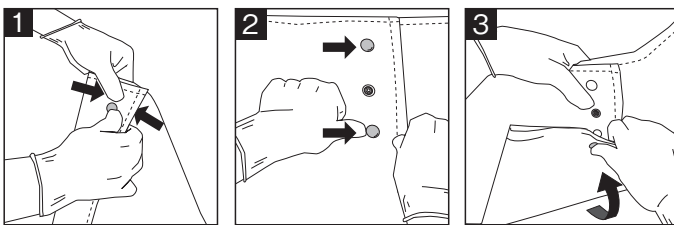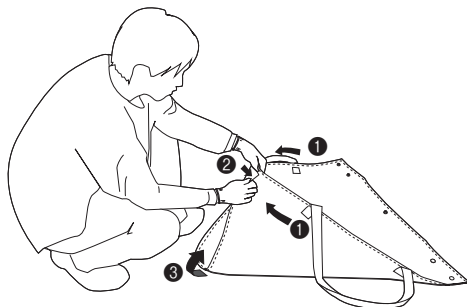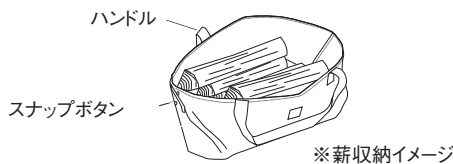

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 使用後は灰や汚れを取り除いてください。
- 汚れた場合は、水または薄めた中性洗剤を含ませた柔らかい布で軽く拭き取り、その後、水で濡らして固く絞った布で洗剤を拭き取ってください。
- アルコール、シンナー、ベンジンなどの溶剤は使用しないでください。変色や劣化の原因となります。
- 洗濯機や乾燥機は使用しないでください。生地破損や劣化の原因となります。
- 濡れた場合は、十分に乾燥させてから保管してください。濡れたまま保管すると、カビや異臭、生地劣化の原因となります。
- 直射日光や高温多湿を避け、風通しの良い場所で保管してください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1. 素材の経年劣化による損傷など商品の寿命 / 2. 改造および粗雑な取扱いによる故障 / 3. 取扱説明書で禁止されている取扱いによる故障 / 4. 不測の事故による商品の故障 / 5. その他製造上の欠陥以外による製品の故障 / 6. ゴミやさびによる故障 / 7. 分解したことによる不具合の発生または破損 / 8. 落下やその他の衝撃による部品の変形や破損による不具合 / 9. 摩擦によるパーツの変化及びそれによる故障 / 10. 他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。 / 2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
☎0120-010-660 (9:00~17:00)
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel.0256-46-5858 / Fax.0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

Thank you for purchasing a Snow Peak product. This product is a 2-in-1 accessory for camping, functioning both as a fire-resistant sheet under a fire pit and as a carry bag for firewood. For safety, read the following instruction manual before use. Please keep it safe for future reference. If you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Specifications

- Materials : Sheet: Fiberglass (Polyurethane Coating) / Handles: Polyester / Snap buttons: Copper / Washers: Polypropylene
- Size : Flame-Resistant Sheet : 900×900mm / 35.4"×35.4", Carry Bag : 450×620×300(h) mm / 17.7" × 24.4" × 11.8"(h)
- Storage size : 320×520×50(h) mm / 12.6"×20.5"×2.0"(h)
- Weight : 600g / 21.2oz

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

- Read the instruction manual for the product used together with this product before use. Be sure to fully understand the "Safety Precautions" section before use.
- Do not use this product in direct contact with fire, such as by building a fire on it or placing burning

firewood or charcoal directly on it.

- This product is intended for use underneath a fire pit. Do not use it with any heat-generating appliance other than a fire pit.

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If you find abnormalities such as holes, tears, frayed stitching, or detached snap buttons, stop using the product immediately and take it to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not allow small children or pets to enter this product. Doing so may result in unexpected accidents.
- Keep this product out of the reach of children. Do not allow children to use this product without adult supervision.

- Do not use a fire pit that extends beyond the edges of this product.

- If burning firewood or charcoal falls onto this product while the fire pit is in use, remove it immediately. Failure to do so may result in product damage.

- After use, make sure all embers or hot ashes are completely extinguished. Remaining embers may reignite and cause a fire. Make sure the product has cooled completely before folding it to avoid burns or other injuries.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- This product is not waterproof.
- This product is not a heat-insulating sheet. It is designed to reduce the effects of heat on the ground and does not completely block heat.
- Depending on the installation surface and conditions of use, the ground may become discolored or deformed.
- Sparks or flying embers may scorch the fabric or cause holes.
- Do not modify this product or use it for any purpose other than its intended use. Doing so may cause product damage or accidents.
- Do not place or carry items with sharp edges or points on this product. Doing so may cause tears or holes in the fabric.
- When using this product as a carry bag, do not overload it. Hold the handles securely when carrying it, and do not drag the product on the ground. Failure to do so may result in product damage or injury.
- When using this product as a carry bag, carry it by one person only. Carrying it by two people

using the left and right handles may place excessive stress on the fabric and stitching, resulting in product damage or injury.

- When using this product as a flame-resistant sheet, do not lift or move it with the fire pit placed on it. Doing so may result in product damage, fire, or burns.

- Open and close the snap buttons gently without applying excessive force. Forcing them open or closed may damage or deteriorate the snap buttons or fabric.

- Exposure to water or friction may cause color transfer or fading.

- Due to the characteristics of the material, white crease marks may remain if the product is folded sharply.

- Due to the characteristics of the fabric, glass fibers may become exposed. To avoid skin irritation, do not touch exposed glass fibers directly, and wear gloves whenever possible during use.

- If glass fibers come into contact with your skin, do not rub the affected area. Wash thoroughly with soap and running water. If skin irritation persists, seek medical attention.

Instructions for Use

[Using as a Fire-Resistant Sheet]

Place the sheet under a fire pit to help reduce damage to the ground from sparks and heat.



*This product does not completely prevent heat transfer to the ground. Use it in combination with a base plate and base plate stand, placing this sheet underneath them.

●Setup Instructions

Unfold the sheet with the logo facing down (towards the ground), and tuck the handles underneath the sheet.


*The handles are not fire-resistant. Always tuck them under the sheet during use to avoid exposure to sparks or heat.

Handles Logo side facing the ground

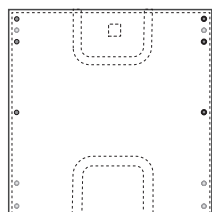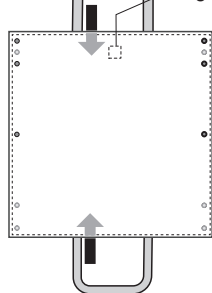

Fold the handles back under the sheet

Pack & Carry Fireplace / Base Plate / Base Plate Stand (Sold separately)

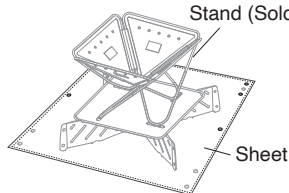

[Using as a Carry Bag]

As a general guide, this bag can hold and carry up to two bundles of firewood at once.

*Do not transport lit firewood or charcoal.

*Do not overload with excessive weight.

●Setup Instructions





Unfold the product with the logo facing down, fasten the left and right snap buttons, and fold the sides inward. Once it forms a bag shape, bring the two handles together and hold them securely to carry.

*Open and close the snap buttons slowly and carefully. Forcing them open or closed puts stress on the snap buttons and fabric, which may cause damage or deterioration.

Handles

Snap buttons

*Reference: Loading firewood

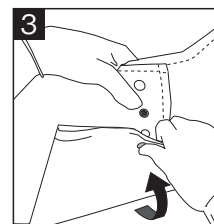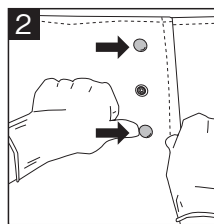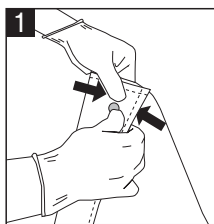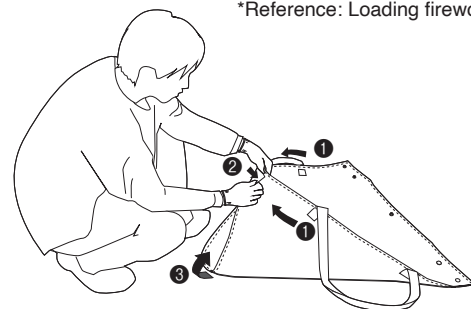

Maintenance

●Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. ●Remove any ash and dirt after use. ●If the product becomes dirty, gently wipe it with a soft cloth dampened with water or a diluted neutral detergent. Then wipe away any detergent residue with a cloth dampened with clean water and wrung out thoroughly. ●Do not use solvents such as alcohol, thinner, or benzene. Doing so may cause discoloration or deterioration. ●Do not use a washing machine or dryer. Doing so may damage or deteriorate the fabric. ●If the product becomes wet, dry it thoroughly before storing it. Storing the product while wet may cause mold, unpleasant odors, or deterioration of the fabric. ●Store the product in a well-ventilated place away from direct sunlight, high temperatures, and high humidity.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

●If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. ●When you request repairs, please make sure that the product is dry and clean. ●Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. ●Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (888) 424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp