snow peak
outdoor lifestyle creator since1958

取扱説明書　Ver 1.00

ST-210
アルマストーブ



お客様へ

●本製品は、アルマスタンド、アイアングリルテーブル（IGT）フレームなどの当社が指定する製品に組み込んで使用する薪ストーブです。本製品だけを地面などに直接置いて使用しないでください。

●幕体内で使用する場合は、本取扱説明書に従って設置するとともに、使用前に必ず当社Webサイトで最新の指定状況および設置方法をご確認ください。指定された組み合わせ以外では絶対に使用しないでください。

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はキャンプ用の薪ストーブです。本製品は取扱いを誤ると、人命にかかわる重大な事故につながるおそれがあります。ご使用の前に、一酸化炭素や薪ストーブの取扱いに関する知識を得るとともに、本取扱説明書を必ずよく読み、内容を十分に理解した上でご使用ください。説明内容が理解できない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。また、今後もスムーズかつ安全に製品をご使用いただくために、取扱説明書は大切に保管してください。

「薪ストーブ指定製品・幕体一覧」のご確認

本製品を使用する前に、本取扱説明書で使用できる製品・幕体、その組み合わせおよび設置方法を確認するとともに、当社Webサイト上の「薪ストーブ指定製品・幕体一覧」で最新の情報をご確認ください。指定されていない製品や幕体、組み合わせでは使用しないでください。火災、一酸化炭素中毒、転倒などの重大な事故につながるおそれがあります。製品の追加・仕様変更などにより、使用できる製品・幕体、その組み合わせおよび設置方法が追加・変更される場合があります。使用前に必ず「薪ストーブ指定製品・幕体一覧」で最新の情報をご確認ください。

右記二次元コードまたはURLから
最新版をご確認いただけます。

［薪ストーブ指定製品・幕体一覧］
URL:
https://www.snowpeak.co.jp/pdf/products/ST-210/ST-210_compatibility.pdf

※キャンプ場など通信環境が不安定な場所で使用する場合は、事前に通信可能な環境で最新版を確認し、必要に応じて印刷または端末へ保存してください。以前に印刷または端末へ保存した「薪ストーブ指定製品・幕体一覧」は、最新の情報でない場合があります。
※インターネットを利用できない場合や、Webサイトでの確認が難しい場合は、使用前に弊社ユーザーサービスへお問い合わせください。

一酸化炭素中毒による危険性について

燃焼している薪からは一酸化炭素と二酸化炭素などが発生しています。酸素が多い状態では二酸化炭素が多く発生し、酸素が不足した状態になりますと一酸化炭素が多く発生します。特に密閉空間では、酸素の少ない状況になりやすいため、一酸化炭素の濃度が高まり、中毒症状が起こりやすくなります。一酸化炭素は毒性があり人体に悪影響を与え、吸引の度合いによっては死亡につながる大変危険な物質です。一酸化炭素は無色透明・無臭で存在が分かりにくいため、薪ストーブを使用する場合には、一酸化炭素が滞留しない環境を確保する必要があります。

●一酸化炭素による人体への影響

空気中における一酸化炭素濃度	吸入時間と中毒症状
0.02% (200 ppm)	2～3時間で前頭部に軽度の頭痛
0.04% (400 ppm)	1～2時間で前頭痛・吐き気、2.5～3.5時間で後頭痛
0.08% (800 ppm)	45分間で頭痛・めまい・吐き気・けいれん、2時間で失神
0.16% (1600 ppm)	20分間で頭痛・めまい・吐き気、2時間で死亡
0.32% (3200 ppm)	5～10分で頭痛・めまい、30分で死亡
0.64% (6400 ppm)	1～2分で頭痛・めまい、15～30分で死亡
1.28% (12800 ppm)	1～3分間で死亡

出典:「令和5(2023)年 経済産業省委託事業「CO中毒事故防止技術」第8版(特別民間法人高圧ガス保安協会編集)」
P10「表1.1　一酸化炭素の吸入時間と中毒症状」

※幼児の場合はより低い濃度で死亡し得るという報告もあります。

安全上の注意事項　ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

免責事項

本製品はキャンプ用薪ストーブです。ご使用になる前に、必ず本取扱説明書を熟読し、内容を理解した上で、安全に十分配慮してご使用ください。
当社は、本製品の使用により発生した損害のうち、次に定める損害その他法令上当社の責任が免除される損害について、一切の責任を負わないものとします。

●不適切な使用・組み立て・指示不遵守による損害
・本製品の不正確、不完全な組み立て、または取扱説明書に記載されている使用方法や警告・指示事項に従わなかったことに起因する、火災、爆発、ヤケド、中毒、その他の人身傷害、物的損害（家屋、テント、キャンプ用品、その他周囲の財産を含むが、これに限定されない）、および逸失利益等のあらゆる損害。
・取扱説明書に記載されていない燃料（市販されている薪以外）を使用したことに起因する一切の損害。

●指定幕体以外での使用および火気管理の不徹底に起因する損害
・本製品を幕体内で使用する場合は、当社がST-210 アルマストーブとの組み合わせを定めた幕体（以下「指定幕体」といいます。）と組み合わせて使用してください。指定幕体以外の幕体と組み合わせて使用することは一切認めません。
※指定幕体および使用条件については、本取扱説明書を確認するとともに、当社Webサイト上の「薪ストーブ指定製品・幕体一覧」で最新の情報をご確認ください。
・指定幕体以外の幕体と組み合わせて使用したことに起因する、火災、延焼、破損、人身傷害、その他のあらゆる損害について、当社は一切の責任を負いません。
・指定幕体と組み合わせた場合であっても、火の不始末、不適切な設置方法（煙突の設置、固定、断熱処理の不備等）、あるいは強風等の気象条件を含む使用者の過失により火災が発生し、使用者および第三者（周囲の方々）の身体、家屋、財産等に被害が生じた場合の、一切の損害。

●指定製品以外の製品または、指定外の組み合わせでの使用に起因する損害
・本製品は、当社がST-210 アルマストーブとの組み合わせを定めた製品（以下「指定製品」といいます。）に、定められた組み合わせで組み込んで使用してください。指定製品以外の製品への組み込み、または定められた組み合わせ以外での使用は一切認めません。
※指定製品および組み合わせについては、本取扱説明書を確認するとともに、当社Webサイト上の「薪ストーブ指定製品・幕体一覧」で最新の情報をご確認ください。
・指定製品以外の製品、または定められた組み合わせ以外で使用したことに起因する、転倒、破損、火災、人身傷害、その他の損害。

●製品の改造および混在使用による損害
・使用者または第三者による本製品の改造、分解、修理、または本来の用途以外に使用したことに起因する一切の損害。
・本製品と他社製の薪ストーブ関連部品（煙突、断熱材、延長パーツ等）を組み合わせて使用することは一切認めません。これら他社製品との混在使用に起因する、性能低下、破損、火災、一酸化炭素中毒、その他のあらゆる損害について、当社は一切の責任を負いません。
・本製品と、当社の仕様変更された新旧製品を混在させて使用したことにより生じた一切の損害。

●運搬・組み立て・保管に伴う損害
・本製品の運搬、組み立て、解体、または保管に伴い、使用者および周囲の第三者の所有する器物、財産等に生じた物理的な損害。

●一酸化炭素中毒等による損害
・一酸化炭素チェッカーの不使用、不適切な換気、不適切な使用環境（指定幕体以外の幕体内での使用、密閉空間での使用等）により発生した一酸化炭素中毒、またはこれに類する有毒ガスによる、人身および財産上のあらゆる損害。

●使用者以外の者による使用、譲渡等および周囲への被害に起因する損害
・使用者以外の者（同伴者、家族等）と本製品を使用する場合に、使用者がその者に本取扱説明書の内容を十分に説明せず、または本取扱説明書の記載事項を遵守させなかったことに起因する一切の損害。
・屋外・幕体内を問わず、火の不始末により火災が発生して周囲に延焼した場合、または火の粉等により周囲に被害が生じた場合の一切の損害。
・本製品を第三者に譲渡、転売、または貸与等を行ったことに起因して、当該第三者その他の者に生じた一切の損害。

●その他
・天災地変、戦争、暴動、法令の制定・改廃その他の不可抗力によって生じた一切の損害。

【重要なお知らせ】製品仕様の変更について
弊社は、品質向上等の理由により、予告なく製品の仕様を変更する場合があります。
仕様が変更された製品と古い製品を混在させて使用しないでください。
仕様変更に起因する事故・損害についても、上記各号の規定を準用するものとします。

■ 安全上の注意

⚠危険　明らかに生命に関わる重大な事故が予測される行為を示します。

●本製品を指定幕体以外の幕体と組み合わせて使用しないでください。指定幕体はP.5、設置方法は本取扱説明書の該当ページを確認するとともに、使用前に当社Webサイト上の「薪ストーブ指定製品・幕体一覧」で最新の情報をご確認ください。
●本製品と併せてご使用になる各アイテムの取扱説明書を必ずお読みください。
●初回使用時は製造時に付着した油分により煙が出ることがあります。幕体内で使用する際は、出入口を全開にし、屋外使用時は風通しの良い場所で、薪を十分に入れて約3時間燃焼させ油分を焼き切ってください。
●本製品を幕体内などの限られた空間で使用する場合は、一酸化炭素中毒の危険があります。絶対に密閉状態で使用しないでください。また、安全のため、必ず一酸化炭素チェッカーを使用してください。一酸化炭素チェッカーは、一酸化炭素チェッカーまたは指定幕体の取扱説明書に従い、指定の取付位置に正しく設置してください。
●天候により危険を感じる場合は速やかに撤収して安全な場所へ避難してください。お出かけの前に気象情報を十分に把握しておき、悪天候が予想される場合や、使用中に風や雨（雪）が強くなってきたら使用を中止してください。
●雪上での設営時は、設置場所の除雪をおこない、本製品を組み込む指定製品の脚部が地面にしっかり接地していること、また煙突が取扱説明書通り組付けができるか確認してください。組付けができない場合は、設置場所を変えてください。
●使用中は近くでガス缶及び他燃料を使用する燃焼機器・ランタンは使用しないでください。※着火用のライター及びマッチはご使用いただけます。
●市販されている天然木の薪以外のものを燃焼させないでください。爆発するおそれがあるものや、有害性ガスが発生するものを燃やすと最悪の場合死亡するおそれがあります。また、紙類など火の粉が飛散する燃料を燃やさないでください。煙突から火の粉が飛び散り、火災やシェルターの損傷の原因になる可能性があります。
●よく乾燥した薪以外を使用しないでください。うまく着火せずに不完全燃焼を起こし一酸化炭素が発生するおそれがあります。
●燃焼時、着火剤の継ぎ足しはしないでください。炎が燃え移り、大変危険です。
●石油系着火剤は使用しないでください。条件によっては一酸化炭素が発生しやすくなります。
●薪ストーブの燃料に石炭、練炭、豆炭等の薪以外の燃料は使用しないでください。一酸化炭素中毒の危険性がある他、製品の損傷、火災につながるおそれがあります。
●着火や燃料としてガソリン、灯油、ガス、アルコールなどを使用しないでください。
●燃焼中、水をかけると水蒸気が発生し危険です。飛散したお湯でヤケドをするおそれがあります。
●薪ストーブの周囲に衣類など可燃性のものを吊るしたり置いたりしないでください。揺れて落下すると火がつき、火災の原因となります。
●子どもやペットが薪ストーブに近づかないように注意してください。ヤケドやその他の危険を避けるため、厳重に監視が必要です。
●薪ストーブを組み立てた状態で移動させないでください。移動する際は本体が冷めていることを確認して、すべて分解して移動してください。
●消火をおこなう際は最後に薪を投入したときから、「最低3時間」経過した後におこなってください。薪ストーブが熱を持っているため大変危険です。

⚠警告　取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

●ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
●公園や河川敷、キャンプ場といった公用地でご使用の際は各自治体や管理者に確認してください。
●地権者（私有、公有の別なく）の許可がない場所で使用しないでください。
●焚火や火器などの使用が禁じられている場所では絶対に使用しないでください。
●傾斜地や不安定な場所での設置は避けてください。薪ストーブが倒れるおそれがあります。
●本製品を組み込んで使用できる指定製品はP.5をご確認ください。製品の追加・仕様変更等により、指定製品や組み合わせが変更される場合があります。使用前に必ず当社Webサイト上の「薪ストーブ指定製品・幕体一覧」で最新版をご確認ください。
●薪ストーブ設営時にはケガに注意し、以下のことを守ってください。
・各パーツは端部処理を施していますが、安全のため、作業用の手袋を着用してください。
・パーツを組み合わせるときは、手を接合部付近に置かないでください。
●アルマスタンドまたはアイアングリルテーブル（以下IGT*）フレームなどの指定製品に本製品を組み込んで使用する際は、以下のことを守ってください。
・本製品を組み込んだ指定製品が安定し、ガタツキがないことを確認してから使用してください。使用中も設置状態を点検し、異常が確認された場合は使用を中止してください。転倒、火災、ヤケドのおそれがあります。
・使用可能な脚の長さはP.5をご確認ください。
・指定された固定部品を取り付け、必ずペグダウンしてください。転倒するおそれがあります。
・本製品を組み込んだ指定製品および薪ストーブ周辺は大変熱くなります。ヤケドのおそれがあります。
●可燃物との安全距離（熱の影響を受けない距離）を確保してください。火の粉が飛び散り火災につながる可能性があります。薪ストーブは熱量が多くポケットに入れたライターなども遠赤外線効果で加熱され爆発、火災を起こすおそれがあります。
●熱の影響を受けやすいものを薪ストーブに近づけないでください。
●指定幕体内が人や荷物で混み合い、移動しにくい状態では使用しないでください。つまずいたり転倒したりして薪ストーブや煙突に触れ、ヤケドをするおそれがあります。

⚠注意　ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

●本製品はステンレス材を使用していますが、ご使用条件や熱の影響によりサビが発生することがあります。あらかじめご了承ください。
●異常燃焼や本体の破損等の異常を感じたら使用しないでください。
●使用中は火や周囲の状況などに細心の注意を払ってください。子どもやペットが薪ストーブや煙突に触れないよう目を離さず十分ご注意ください。
●万一の事態に備えて水の入ったバケツを用意してください。
●薪を投入する際は必ず耐熱性のあるグローブを着用してください。本体、煙突は大変熱くなりますのでヤケドのおそれがあります。
●設置場所に十分なスペースを確保してください。
●アルマスタンドやIGTフレーム、薪ストーブの上に脚を乗せたり、座ったりしないでください。また、アルマスタンドのツール吊り下げ穴以外の箇所や、本製品またはIGTフレームに火ばさみなどを掛けないでください。ストーブを扱う際の妨げとなり、事故につながるおそれがあります。
●薪ストーブ周辺に電子機器、熱の影響を受けやすい物品などを置かないでください。
●熱により変形・変色する可能性がありますが、本体使用に影響はありません。あらかじめご了承ください。
●煙突および薪ストーブに付いた指紋や油汚れは、燃焼すると焼け跡となって浮かび上がることがあります。

※「IGT」は、株式会社スノーピークの登録商標です。

指定製品･指定幕体･組み合わせ

本ページに記載の内容は、本取扱説明書発行時点の情報です。製品の追加･仕様変更等により、指定する製品や組み合わせが変更される場合があります。使用前に必ず当社Webサイト上の「薪ストーブ指定製品･幕体一覧」で最新版をご確認ください。

※最新情報はこちらをご確認ください。

■指定幕体一覧

指定幕体		必ず組み合わせて使用する製品	
TP-672	ランドロック X	**TP-672-2**	ランドロック X フライカバーTC
TP-940	メラク Pro.	**TP-940TCF**	メラク Pro. フライカバーTC

■指定製品一覧

※本製品は、幕体内・幕体外を問わず、必ず下記の指定製品に組み込んで使用してください。

LV-200	アルマスタンド
CK-149	アイアングリルテーブル フレーム
CK-150	アイアングリルテーブル フレームロング

CK-903	セパレートIGT フレーム 3ユニット
CK-904	セパレートIGT フレーム 4ユニット
GF-015	ガーデンユニットテーブル ウッドトップセット ※幕体内では使用できません。

■ 指定マルチファンクションテーブル一覧

注意 ●竹天板製品はストーブの熱により、反り･割れ･変色が起きるおそれがあります。注意してご使用ください。

CK-116TR	マルチファンクションテーブル竹
CK-117TR	マルチファンクションテーブル ロング竹
CK-116TL	マルチファンクションテーブル Light Bamboo
CK-117TL	マルチファンクションテーブルロング Light Bamboo

■ 指定トレー一覧

CK-026	リッドトレーハーフユニット
CK-085	ステンレストレー 1ユニット


CK-125TR	ウッドテーブル S竹
CK-126TR	ウッドテーブル W竹

■ 指定IGT脚一覧


※幕体内では、660 脚および 830 脚を絶対に使用しないでください。
本製品と幕体の天井との距離が近くなり、熱により幕体を損傷するおそれがあります。

品番	品名	幕体内	幕体外（単品使用）
CK-109	300脚セット	○	○
CK-112	400脚セット	○	○
CK-113	660脚セット	×	○
CK-114	830脚セット	×	○


セット内容 ※ご使用の前にセット内容 、付属品がすべて揃っているかを確認してください。

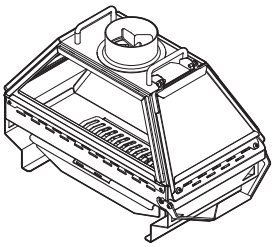

ストーブ本体

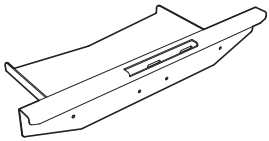

灰受け（セット済み）

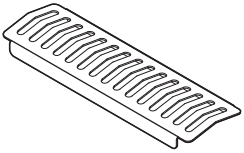


ロストル




カラビナ×8



自在付ロープ（3.7m）×4




IGT脚固定プレート×4



灰かき

煙突

煙突ホルダー




φ10×50cm ×2

φ10×40cm

アダプター


φ9×50cm ×2

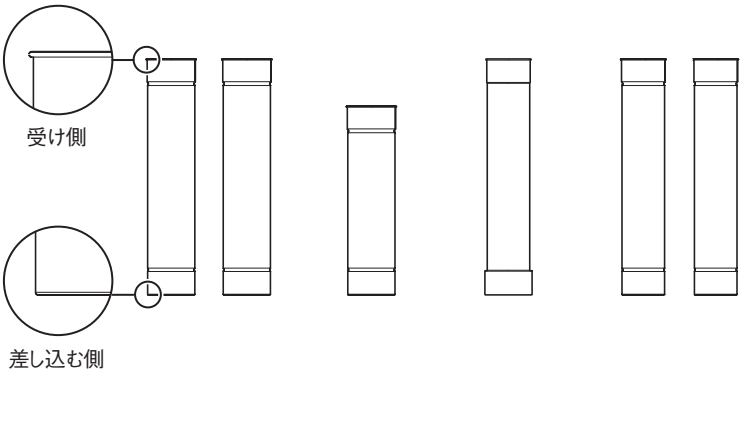

受け側

差し込む側

ウォール



固定用ストッパー




【ご使用前に別途ご用意ください】
本製品を使用するには、別途、指定製品が必要です。必ずご使用前にご用意ください。
※指定製品は、P.5「指定製品一覧」をご確認ください。

●固定用ペグ
本製品を組み込む製品を固定するためのペグは付属していません。30cm 以上の鍛造ペグを 4 本ご用意ください。

●一酸化炭素チェッカー
本製品には付属しておりませんので、別途ご用意ください。幕体内で使用する場合は、一酸化炭素チェッカーの使用が必須です。

各部の名称

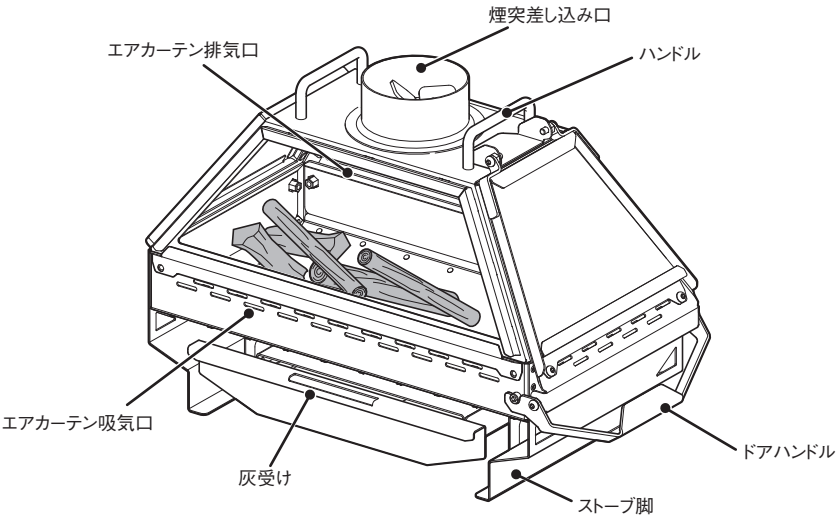

初めてお使いになる前に

●品質には万全を期しておりますが、お使いになる前に必ず指定製品への試し組みをおこない、付属品および組立てに必要な用具がそろっていることを確認してください。万一不具合や付属品の欠品があった場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。

●購入時に本製品の梱包に使用されているケースは、運搬・保管時に保管ケースとして再利用できますので、廃棄せずに保管してください。また、保管ケースの上に重いものを載せないでください。保管ケースや製品本体が変形・破損するおそれがあります。

設営前の準備

■ 関連する取扱説明書および最新情報の確認

本製品は、アルマスタンド、IGTフレームなどの指定製品に組み込んで使用してください。使用前に、下記の取扱説明書および当社Webサイト上の「薪ストーブ指定製品・幕体一覧」を必ず確認してください。

※最新情報はこちらをご確認ください。

●本製品を組み込む指定製品に付属の取扱説明書
●幕体内で使用する場合:使用する指定幕体に付属の取扱説明書

■ 設営場所の確認と準備

●あらかじめ、本製品を組み込む指定製品を組み立て、使用予定の場所に設置してください。
●幕体内でIGTフレームに組み込んで使用する場合は、300脚セットまたは400脚セットをご使用ください。660脚セットおよび830脚セットは絶対に使用しないでください。
●幕体に付属の説明書に従って指定された出入口パネルを全開にしてください。

危険 ●本製品は、地盤がしっかりとした平坦な場所に設置してください。傾いた場所への設置は思わぬ事故の原因となります。
●積雪時に使用する場合は、設置場所の除雪をおこない、本製品を組み込む指定製品の脚部が地面にしっかり接地していること、および煙突が取扱説明書の記載どおりに組み付けられていることを確認してください。適切に設置できない場合は、指定幕体を含めて設置場所を変更してください。

■ 設営前チェックリスト


設営前には以下のチェックリストを使用し、不足品の有無、各製品の不具合、設置前の環境を必ず確認してください。


☑	使用する製品および付属品がすべて揃っているか。幕体内で使用する場合は、指定幕体、指定幕体に取り付けるフライカバーTC、一酸化炭素チェッカーおよび各製品の付属品がすべて揃っているか。(各製品の取扱説明書参照)
☑	アルマスタンドまたはIGTフレームなど、本製品を組み込む指定製品を固定するための30cm以上の鍛造ペグが4本あるか。指定幕体内で使用する場合は、幕体の設営に必要なペグがそろっているか。
☑	併用する製品に含まれるすべての付属品に破損や消耗がないか。
☑	指定幕体内で使用する場合、一酸化炭素チェッカーに電池が入っているか、予備の電池があるか。一酸化炭素チェッカーの電源が入るか。(使用する一酸化炭素チェッカーに付属の取扱説明書)
☑	幕体および本製品の設営予定場所は地盤のしっかりとした平坦な地面であるか。
☑	積雪時に使用する場合、指定幕体の設営予定場所を圧雪し、本製品の設置予定場所を除雪したか。

■ 煙突ホルダーの事前準備

① 自在付ロープ（3.7m）の両端にカラビナを取り付けます。（ロープ4本）

② ループ側のカラビナを煙突ホルダーに取り付けます。（4箇所）

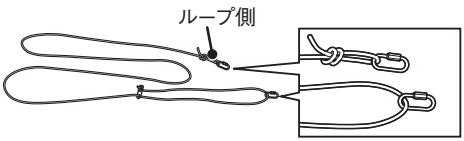


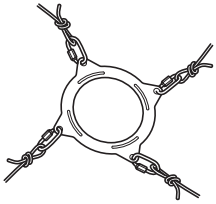

■ ウォールの事前準備

ウォールのネジ受け部分に固定用ストッパーを時計回りに回して取り付けてください。

※固定用ストッパーを締め込みすぎると、煙突を通せなくなります。
脱落しない程度に仮止めしてください。

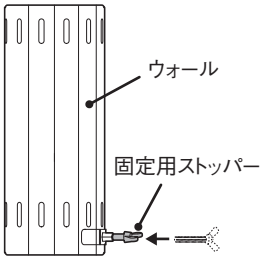

薪ストーブ組立の手順


設営・撤収は以下の説明に従い、繰り返し練習し、実際のキャンプに備えてください。
また、付属品がすべて揃っているか、前もってご確認ください。無理な設営・組立・撤収は製品の破損や事故の原因になります。

警告 ●薪ストーブの設置は必ず2人以上で作業してください。
●薪ストーブを設置する際には必ず作業用の手袋を着用してください。

① ロストルを図の位置に取り付ける


ロストルを図の位置に組み込んでください。

警告 取りはずす際は、最後に薪を投入したときから、「最低3時間」経過し、本製品およびロストルなどの各部が十分に冷えていることを確認してから取りはずしてください。3時間以上経過していても、使用状況によっては各部が熱い場合があります。熱い状態で触れると、ヤケドのおそれがあります。

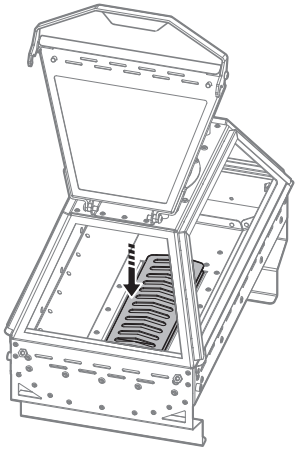


② アルマストーブを設置する

1）アルマスタンドまたはIGTフレームの各脚のアジャスター部分に、IGT脚固定プレートを取り付けます。（4箇所）

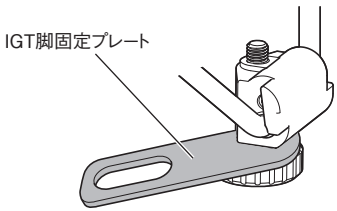


2）脚を取り付けたアルマスタンドまたはIGTフレームを、使用予定の場所に置きます。

3）2人でストーブのハンドルを持ち、使用する指定製品に組み込みます。
※幕体内で使用する場合は、煙突差し込み口がストーブジャック（幕体側の煙突穴）の真下にくるように設置してください。

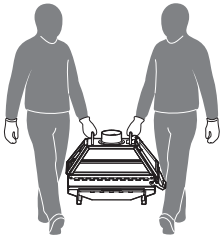


●組み込みの際は、下記のように配置をしてください。
※灰受けを任意の向きにしてください。
※本製品の横ずれを防ぎ、安全に使用するため、トレーを置いて使用してください。

［アルマスタンドの場合］

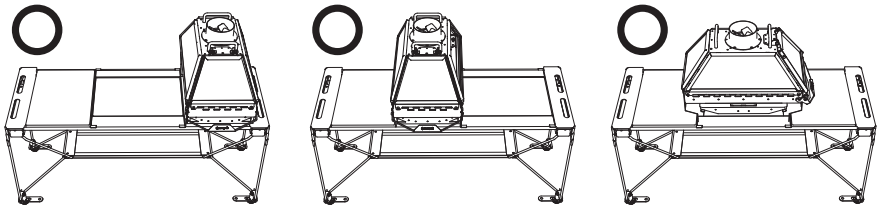

［IGTフレームの場合］

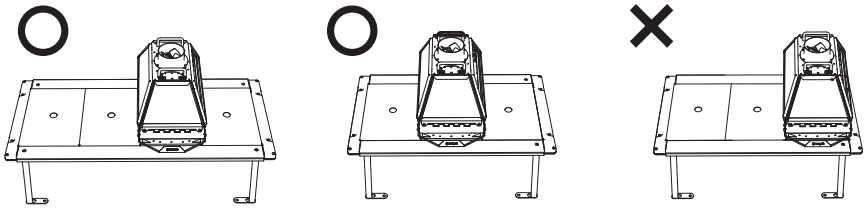

③ 煙突を取り付ける


煙突は2人で持ち、角度を調節しながら取り付けてください。

※以下では、ランドロックXおよびメラクPro.への取付方法を説明します。
指定幕体および設置方法の最新情報は、二次元コードから「薪ストーブ指定製品・幕体一覧」をご確認ください。

※最新情報はこちらをご確認ください。


警告 ●周囲の人やものにぶつけないようにしてください。
ケガや破損のおそれがあります。

注意 ●煙突は奥まで確実に差し込んでください。
●差し込む際は、無理にねじ込んだり、過度な力を加えたりしないでください。
煙突が変形するおそれがあります。
●煙突の差し込み部がわずかに変形して差し込みにくい場合は、手で軽く形を整えてください。

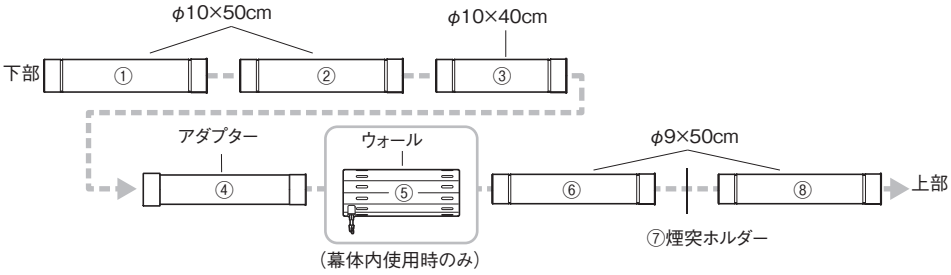

1）上図を参照して、①から④の順に、煙突を差し込んでください。


※煙突の上下方向を下図で確認して差し込んでください。

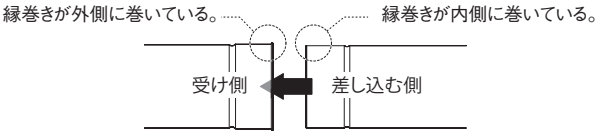

2）幕体内で使用する場合は、④アダプターの先端から⑤ウォールをかぶせるように差し込んでください。

※幕体外で使用する場合は、ウォールの取り付けは不要です。手順3）に進んでください。
※ウォールを差し込む前に、固定用ストッパーが締め込まれていないことを確認してください。締めたまま差し込むと、煙突に傷が付くおそれがあります。

警告 ●幕体内で使用する場合は、ウォールを必ず取り付けてください。
ウォールを取り付けず、幕体と煙突が接触した状態で使用すると、煙突の熱により幕体が溶融・焼損し、火災につながるおそれがあります。

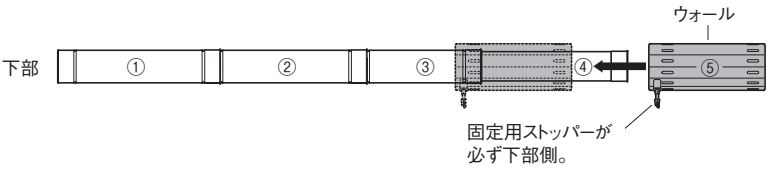

●ウォールの固定方法

本製品を組み込む指定製品および使用する脚の高さによって、ウォールの固定方法が異なります。該当する方法で取り付けてください。

［アルマスタンド／IGTフレーム＋400脚セットの場合］

⑤ウォールを③φ10×40cm煙突の上端の縁に当たるまで落とし込めば設置完了です。
その際固定用ストッパーは締めないでください。


［IGTフレーム＋300脚セットの場合］

⑤ウォールの固定用ストッパーを③φ10×40cm煙突の上部凹部まで移動させて、固定用ストッパーを時計回しで締めて固定してください。
※固定後に上下に動かないか確認してください。


警告 ●固定用ストッパーは確実に締めてください。締め付けが不十分な場合、使用中にウォールがずれたり脱落したりして、幕体の溶融・焼損や火災につながるおそれがあります。

※固定用ストッパーは、必ず煙突上部の凹部に固定してください。煙突の平らな部分に固定すると、煙突が変形するおそれがあります。
※正しい位置で確実に締め付けた場合でも、燃焼による煙突の膨張・収縮などにより固定部が変形する場合がありますが、使用上問題ありません。著しい変形が確認された場合は、使用を中止し、弊社ユーザーサービスまでお問い合わせください。


［アルマスタンド／IGTフレーム＋400脚セットの場合］

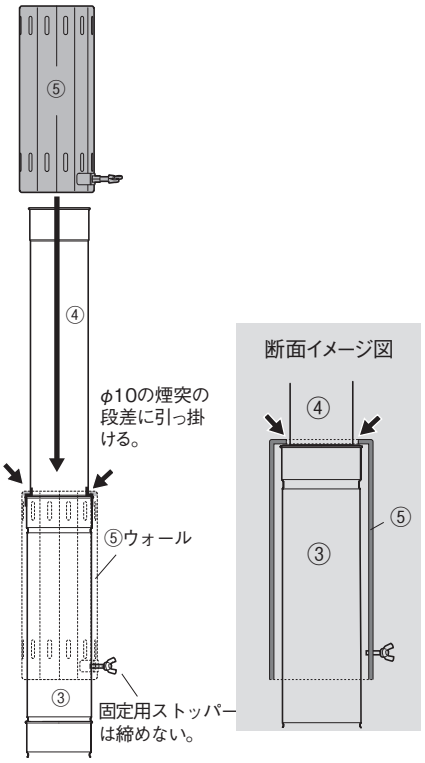

［IGTフレーム＋300脚セットの場合］

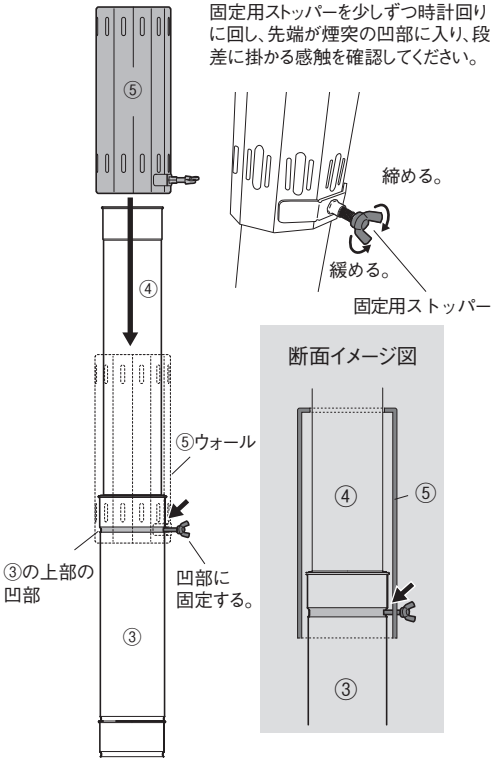


3) ④アダプターの上部に⑥φ9×50cmの煙突を差し込んでください。最上部の⑧φ9×50cmの煙突に⑦煙突ホルダーを通してから、煙突をすべて連結してください。

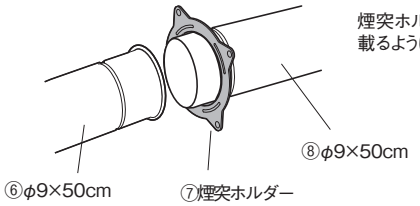

煙突ホルダーは、煙突同士の連結部の上に載るように取り付けてください。

④ 煙突をストーブに差し込む

煙突を垂直にし、煙突が下方向に完全に停止するまでアルマストーブ本体に差し込みます。




[幕体内に設置する場合]

注意　幕体への組付け時は煙突に負荷がかからぬように必ず2人で持ち運んでください。


1)煙突上部をストーブジャックに差し込んでから、煙突下部を薪ストーブに差し込んでください。
※煙突穴側の出入口パネルから煙突を入れることができない幕体もありますので、幕体に付属の説明書をご確認ください。


2)1人が煙突最下部を持ち、煙突を斜めに傾けます。煙突ホルダーがストーブジャックから外に出た後、もう1人がストーブジャックの隙間からロープを外に出します。

3)煙突を垂直にし、煙突が下方向に完全に停止するまで薪ストーブに差し込みます。

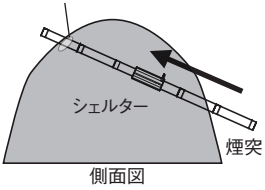

側面図

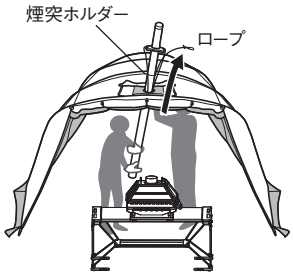

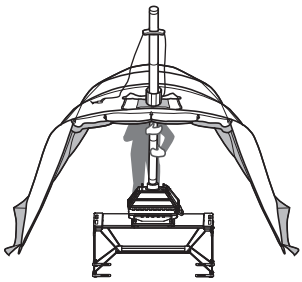


4)煙突が前後左右から直角の角度で薪ストーブに設置できているか確認してください。薪ストーブの位置がずれている場合は微調整する必要があります。

5）ウォールが正しい位置にあることを確認してください。

手順⑤で自在付ロープ（3.7m）にテンションをかけて煙突を固定した後、ウォールがストーブジャックに正しく取り付けられていることを確認してください。ウォール上部の穴が幕体の外側、下部の穴が幕体の内側にあり、煙突がストーブジャックに直接接触していないことを確認してください（下図参照）。

※ウォールの固定位置は、手順③2）から変更しないでください。

※正しい位置にない場合は、フライカバーTC側のストーブジャックを下方向に引いて位置を調整してください。

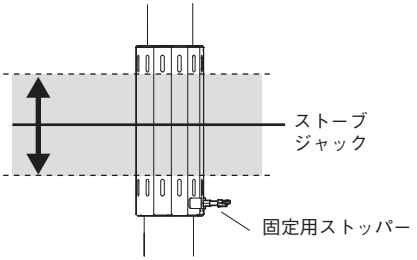

警告 ●ウォールは、必ず図で示す正しい位置に調整してください。煙突がストーブジャックに直接接触した状態で使用すると、煙突の熱により幕体が溶融・焼損し、火災につながるおそれがあります。

●万一、使用中にウォールがずれたり脱落した場合は、直ちに薪ストーブの使用を中止し、ウォールおよび煙突が十分に冷めてから、正しい位置に取り付け直してください。


⑤ 煙突をロープで固定する

それぞれの使い方に応じて固定位置に自在付ロープ（3.7m）で固定してください。固定の際は次のことを確認し、煙突を回転させて位置を調整してください。


・ロープとカラビナの固定箇所がずれていないか
・ロープが直に煙突に触れていないか
・カラビナがずれていないか

●煙突ホルダーの調整をおこなってください。


OK

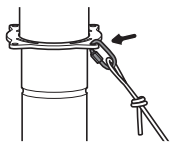

NG

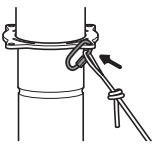


NG

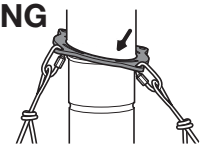


煙突ホルダーが斜めになっている場合は、
地面と平行になるように調整してください。

OK

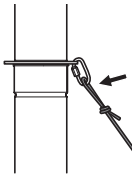

NG

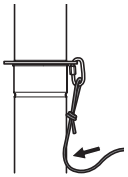


NG



● 屋外でアルマスタンドに組み込んで使用する場合


1）薪ストーブ本体から1m以上離して30cm以上の鍛造ペグで自在付ロープ（3.7m）をペグダウンします。（4箇所）
このとき、地面に打ち込む側のカラビナは不要です。

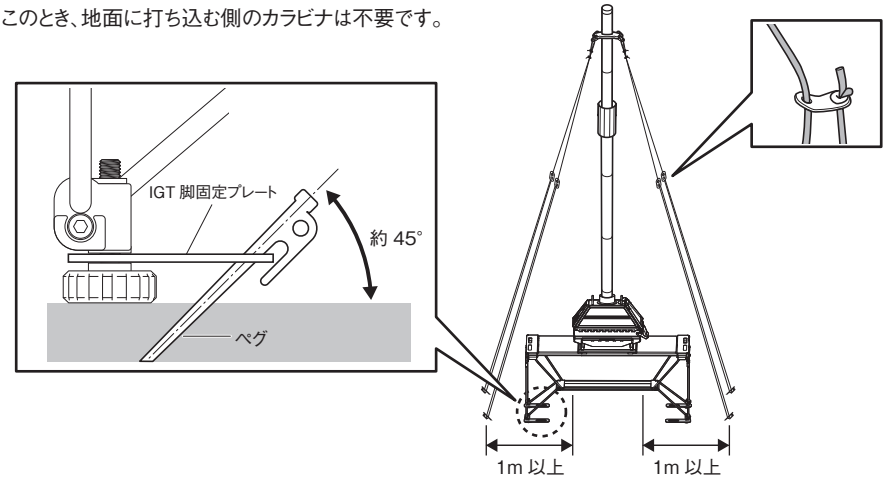

2）ペグダウン後に自在ロープ（3.7m）のテンションを適度にかけます。
※本製品の横ずれを防ぎ、安全に使用するため、トレーを置いてください。

● 屋外でIGTフレームに組み込んで使用する場合

1）IGTフレームの短辺の穴に自在付ロープ（3.7m）を通し、煙突を固定します。（4箇所）

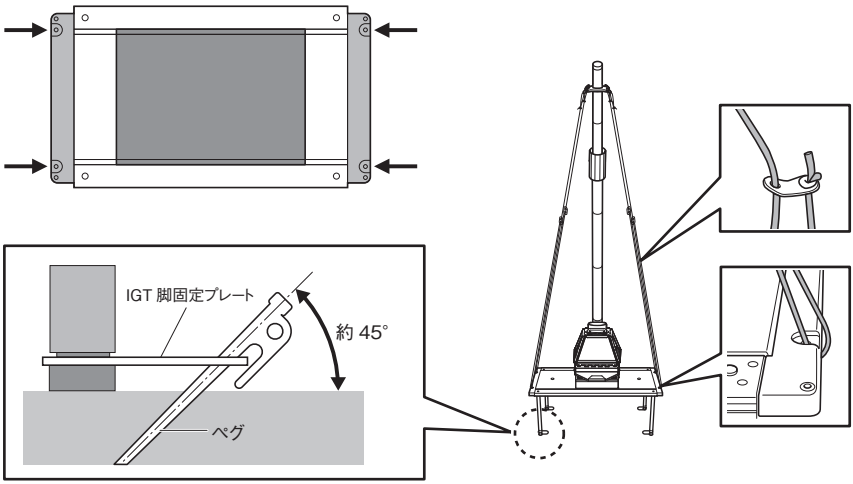


2）ペグダウン後に自在ロープ（3.7m）のテンションを適度にかけます。
※本製品の横ずれを防ぎ、安全に使用するため、ステンレストレーまたはウッドテーブルを左右に設置してください。

● ガーデンユニットテーブル ウッドトップセットに組込む場合

テーブルの脚に自在付ロープ（3.7m） を図のように固定し、自在でテンションをかけます。（4箇所）

※ステンレストレーまたはウッドテーブル、ウッドトップを左右に設置してください。


※IGT脚固定プレートは使用しません。

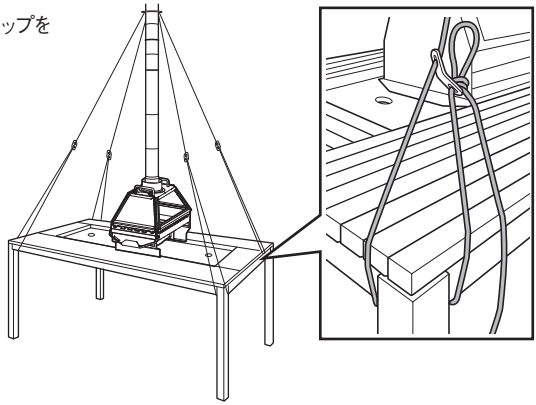

● 指定幕体内で使用する場合

1）指定された幕体内で設置する場合は、幕体外側に自在付ロープ（3.7m）のカラビナを取り付け、適度にテンションをかけてください。（4箇所）


※ロープの取り付け位置は、幕体に付属の取扱説明書または当社Webサイト上の「薪ストーブ指定製品・幕体一覧」をご確認ください。

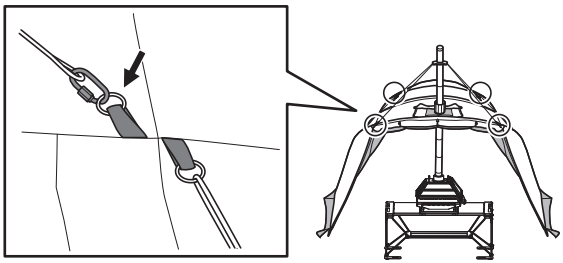

※幕体のイラストはイメージです。幕体ごとに固定の場所が異なります。

2）煙突の確認後、本製品を組み込んだ指定製品をIGT脚固定プレートでペグダウンし、しっかりと地面に固定します。

※ペグは30cm以上の鍛造ペグを使用してください。

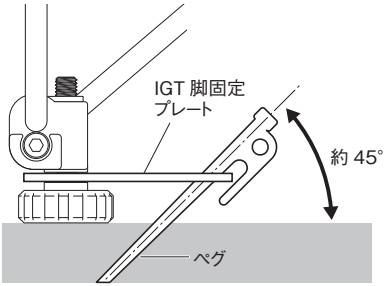

薪ストーブに着火をおこなう前に、次ページの「使用前のチェックリスト（ストーブに着火をおこなう前の確認）」に従って、薪ストーブ（併用する指定幕体・一酸化炭素チェッカー）の状態確認を必ずおこなってください。

使用前チェックリスト（ストーブに着火をおこなう前の確認）

薪ストーブに着火をおこなう前には、以下のチェックリストを使用し、薪ストーブ（併用する指定幕体・一酸化炭素チェッカー）の状態確認を必ずおこなってください。

☑	本製品を組み込んだ指定製品の脚部が、地面にしっかり接地しているか。固定部品を取り付けているか。
☑	煙突が取扱説明書の記載どおりに組み付けられているか。適切に組み付けられない場合は、設置場所を変更したか。
☑	避難経路の妨げになる荷物がないか。指定幕体内で使用する場合、出入口周辺に荷物が置かれていないか。
☑	指定幕体内で使用する場合、指定された換気窓またはベンチレーションは開いているか。
☑	指定幕体内で使用する場合、一酸化炭素チェッカーの電源が入っているか。
☑	水の入った消火用バケツの用意はしているか。
☑	ペグが正しく打ち込まれているか。
☑	ロープにテンションがかかっているか。
☑	薪ストーブ周辺に電子機器や樹脂製品、その他熱の影響を受けやすいものがないか。


操作方法

■ ドアの開閉手順


ドアハンドルを上に持ち上げ、ゆっくりと上方向に開いてください。ドアを閉める際は逆の手順でおこない、ハンドルを最後まで下げて、ロックしてください。

注意　薪を入れる際はドアが落ちてこないように片手で支えたまま薪を入れてください。
ドアが落ちて勢いよく閉まった場合ガラスが割れたり、本体が破損するおそれがあります。

開く時

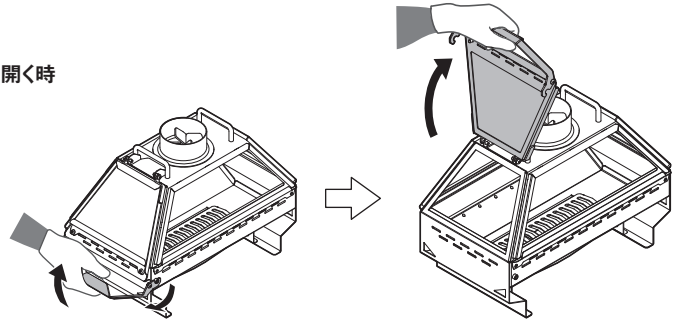


閉める時

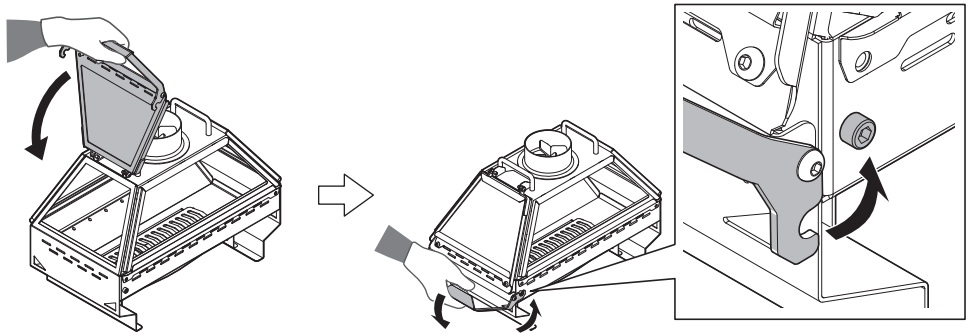

注意　ドアを閉めた後、ハンドルを最後まで下げ、ハンドルが本体側面の突起に確実に掛かり、ドアがロックされていることを確認してください。

■ 灰受けの開閉手順

開け方：灰かきを灰受けの穴に差し込み、灰がこぼれないようにゆっくりと手前に引っ張り出してください。
閉め方：開け方の逆の手順で灰受けを奥まで差し込み、確実に取り付けられていることを確認してください。
※灰受けを取りはずした状態や、正しく取り付けられていない状態で本製品を使用しないでください。
※灰受けが奥まで入らない場合は一度本体奥の灰を灰かきでかき出してから再度灰受けを入れてください。

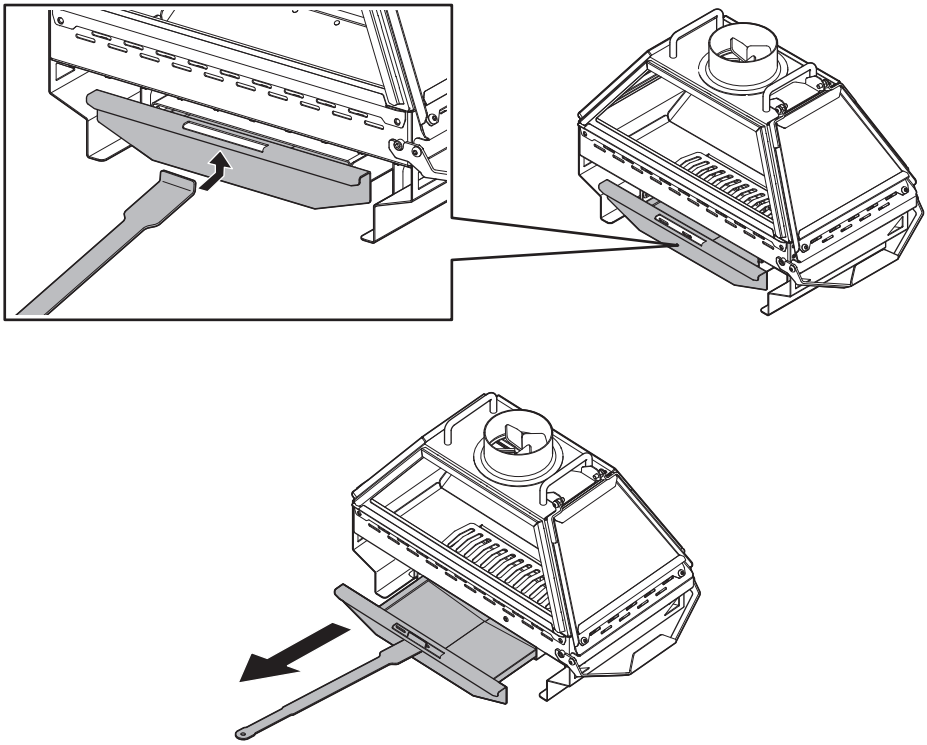

使用方法

危険 ●指定幕体内で使用する場合は、薪に着火する前に、必ず一酸化炭素チェッカーの電源を入れてください。
●指定幕体内で使用する場合は、換気を定期的に必ずおこなってください。思わぬ事故の原因となります。
●使用中および使用後しばらくはとても高温になるため、本製品を素手で触れないでください。ヤケドをするおそれがあります。

警告 ●着火をする前に、水の入ったバケツ、耐熱性のあるグローブ、火ばさみを必ず準備してください。

■ 初めて使用するとき

① 初回使用時は、本体に付着した油を焼き切る必要があります。油の焼き切りは、風通しのよい屋外でおこなうことを推奨します。指定幕体内でおこなう場合は、シェルターの両側の出入口パネルを全開にし、指定された換気窓またはベンチレーションをすべて開けて、十分に換気してください。また、出入口周辺の荷物を移動し、避難経路を確保してください。

② 次ページの手順2以降に従って薪に着火し、約3時間燃焼させてください。
※指定幕体内でおこなう場合は、薪に着火する前に一酸化炭素チェッカーの電源を入れ、正常に作動することを確認してください。


③ 油の焼き切り中は煙と匂いが発生します。屋外・指定幕体内のいずれの場合も、煙を吸い込まない位置から燃焼状態を確認し、本製品から目を離さないでください。また、使用者以外の人を近づけないでください。煙を吸い込むと、体調を崩すおそれがあります。

注意 薪の量が少ないと本体温度が上がらず油を焼き切ることができなくなります。常にエアカーテン排気口のラインまで薪をくべてください。


■ 着火方法

注意 乾燥した薪を使用してください。
薪が湿っている場合は着火しにくい場合があります。
着火を続けると一酸化炭素が大量に発生してしまう可能性がありますので一度着火を止め、新たに乾燥している薪をご準備ください。

① ストーブ内に着火剤を設置してください。

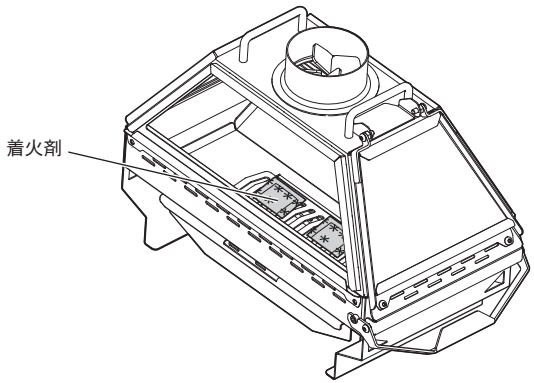


② 薪（針葉樹）を数本（目安:4～5本）設置してください。このときに、薪を入れすぎるとうまく空気が入らず着火しないおそれがあります。また、エアカーテン排気口より高い位置まで薪は入れないでください。

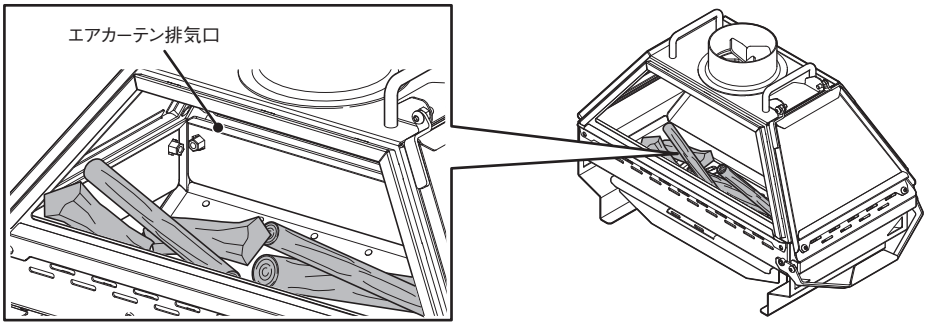

③ 着火剤にマッチなどで着火してください。
着火しにくい場合は灰受けから空気をうまく取り入れるために灰受けを1cmほど引き出してください。

※ストーブ内のすべての薪にしっかりと着火したら、灰受けを完全に閉めてください。

注意 エアカーテン排気口から炎が出始めたら本燃焼が始まっています。2次燃焼が始まった後は、エアカーテン排気口より高く薪を入れても大丈夫ですが、エアカーテン排気口と煙突の入口は塞がないように薪の入れ方や量を調整してください。

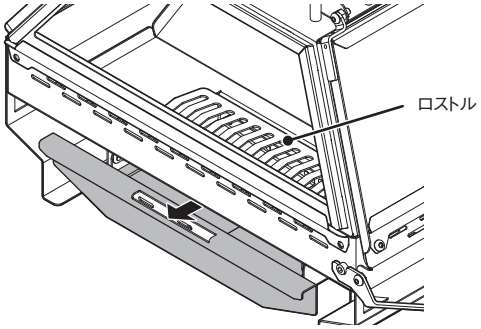

エアカーテン排気口を塞がないように火ばさみを使用して薪（広葉樹）を入れてください。

■ 火力調整

火力調整は薪の量でおこなってください。新しい薪を足しても火力が強くならない場合は灰がロストルの穴を塞いでいる可能性があります。灰かきを使用し灰をどかして灰受けを少し開けてください。しっかりと薪が燃え始めたら再度灰受けは完全に閉めてください。

撤収方法


危険 ●消火をおこなう際は最後に薪を投入したときから、「最低3時間」経過した後におこなってください。また、薪ストーブ本体および煙突の取扱いや取りはずしは、十分に冷めたことを確認してからおこなってください。ヤケドの原因になります。
●燃焼中の薪ストーブ本体および煙突に直接水をかけて消火しないでください。急激に水蒸気が発生し、ヤケドをするおそれがあります。

① 周囲に水の入ったバケツを用意してください。鎮火する際、煙や火の粉が飛ぶおそれがあります。バケツの設置はシェルターや周囲の人やものに被害が出ない位置にしてください。


② 本製品および灰が十分に冷えていることを確認してからドアを開け、ロストルをゆっくり取り出してください。灰が残っている場合は、風で舞い上がるおそれがあるため、風の強い場所では作業しないでください。

③ 灰かきを使用して、本体内部に残った灰や炭を灰受けに落としてください。

④ 灰受けを取り出し、水の入ったバケツまで慎重に運んで、灰や炭を完全に消火してください。灰受けを運ぶ際は、灰かきを両手でしっかり持ってください。

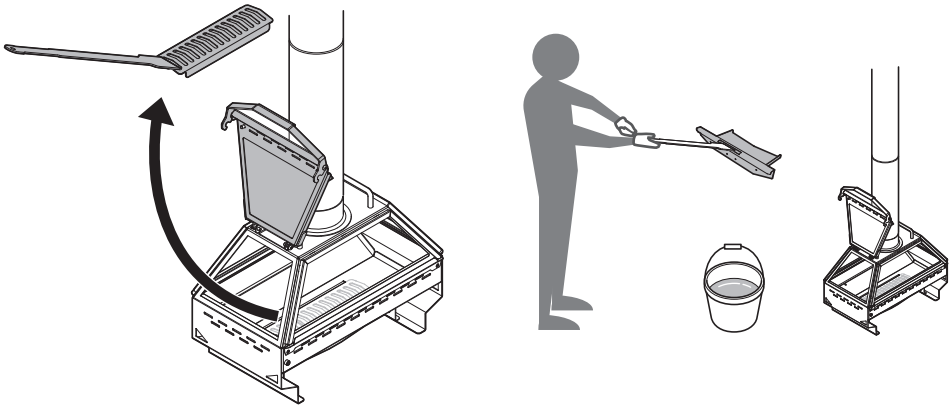

⑤ 購入時に本製品の梱包に使用されているケースを保管ケースとして再利用し、各部を収納してください。
本体を保管ケースに収納した後、その上に保護マットを敷いてください。煙突はφ9をφ10の中に入れて重ね、ウォールも重ねて3組にまとめ、図のように保護マットの上に収納してください。
※運搬・保管時は、保管ケースの上に重いものを載せないでください。保管ケースや収納物が変形・破損するおそれがあります。

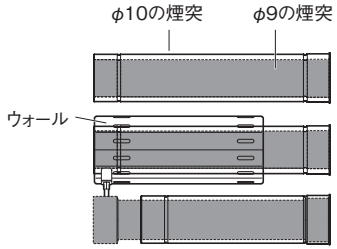

非常時の対応について

以下の現象が起こった際は身の安全確保を最優先し、直ちに薪ストーブから離れ、安全な場所へ避難してください。鎮火するまでお待ちください。**必要に応じて消防署へご連絡ください。**

●燃焼中何らかの衝撃などにより煙突がはずれてしまった場合。
●燃焼中、薪ストーブのドアを閉めているにもかかわらず、異常な煙や異臭が発生した場合。
●炎が逆流した場合。
●薪ストーブ外に炎が燃え移った場合。
※水で消そうとしてもすぐに消火できません。

メンテナンス方法

●薪ストーブ、煙突を洗浄する場合は、硬い素材のたわしなどを使用すると傷の原因となります。
●本製品をメンテナンス及び清掃する際は必ず手袋などの保護具を使用してください。
●軽い汚れや水分が付着した場合は、速やかに乾いた布で拭き取り、十分に乾燥させてください。
●塩分（調味料等）や、その他の薬品が付着した場合は、固く絞った布でよく拭き取り、十分に乾燥させてください。
●保管をする場合は、直射日光の当たらない、風通しの良く湿気の少ない場所に保管してください。
●雪中や雨中での放置など、長時間水分に触れる状態や、海辺など潮風が当たる場所に放置すると、サビが発生する場合があります。
●薪ストーブと煙突は濡れた状態で放置するとサビの原因となりますのでしっかりと乾かしてから保管してください。
●薪ストーブ内は、刷毛ブラシを使用し掃除してください。このとき、本体に傷が入るほどの硬いブラシは使用しないでください。
●煙突一式は煙突の径にあった煙突用のブラシを使用し1シーズンに1回を目安に掃除をおこなってください。煙突内に詰まるすすやタール（黒い付着物）は、不完全燃焼や煙道火災の原因になります。
●ガラスおよびガラス固定ロープは、使用頻度や使用状況に応じて交換が必要になります。交換については弊社ユーザーサービスまでお問い合わせください。

品質保証について

お買い求めいただきました製品は万全を期してますが万一不備な点がございましたら、お買い求めの販売店または弊社までご連絡ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない場合もありますので、あらかじめご了承ください。

1.取扱説明書に従わなかったと判断した場合。
2.素材の経年劣化による製品の寿命。
3.改造及び粗雑な扱いによる製品の故障。
4.不測の事故による製品の故障。
5.その他製造上の欠陥以外による製品の故障。
6.ゴミやサビによる故障。
7.分解したことによる不具合の発生または破損。
8.落下やその他の衝撃による部品の変形や破損による不具合。
9.消耗品の劣化、破損、故障及び付随する不具合。
10.他社製品との組合せによる故障。


修理について

●本格的な修理が必要な場合は、お買い求めになった販売店または弊社ユーザーサービスまでお問い合わせください。
●修理を依頼される場合は、製品に付着したすすや汚れなどを極力拭き取ってください。
●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
●修理品の運賃並びに修理費については以下のように規定させていただきます。
　1.保証対象の場合：往復運賃並びに修理費は弊社にて負担いたします。
　2.保証対象以外の場合：往復運賃並びに修理費は、お客様のご負担とさせていただきます。

スペック

●セット内容：ストーブ本体、ロストル、カラビナ（×8）、自在付ロープ（3.7m×4）、煙突ホルダー、煙突セット、IGT 脚固定プレート（×4）、灰かき
●材質：ストーブ本体／ステンレス鋼、窓ガラス／耐熱ガラス、ガラス固定ロープ／セラミックロープ、煙突セット／ステンレス鋼、ハンドル／ステンレス鋼、灰かき／ステンレス鋼、IGT 脚固定プレート／ステンレス鋼
●収納サイズ（保管ケース）：565×345×545（h）mm
●重量：ストーブ本体（付属パーツ／煙突セット含む）：19.6kg

全長2958（煙突含む）

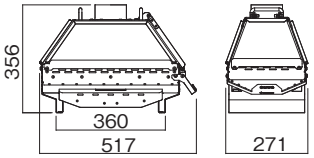

（単位：mm）

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピーク ユーザーサービス
0120-010-660（9:00～17:00）
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

snow peak
outdoor lifestyle creator since1958

Instruction Manual Ver. 1.00

ST-210

Alma Stove



To our customers

- This product is a wood stove designed to be installed in specific products designated by Snow Peak, such as the Alma Stand and the Iron Grill Table (IGT) frame. Do not use this product on its own by placing it directly on the ground or other surfaces.
- When using this product inside a shelter, install it in accordance with the relevant instructions in this Instruction Manual. Before use, be sure to check the Snow Peak website for the latest information on approved uses and installation procedures. Never use it in any combination other than those specified.

Thank you for purchasing a Snow Peak product. This product is a wood stove designed for camping. Incorrect use of this product may result in a serious, potentially fatal accident. Before use, make sure you have the necessary knowledge about carbon monoxide and the safe operation of wood stoves. Be sure to read this Instruction Manual thoroughly and fully understand its contents before using the product. If you have any questions about the instructions or discover any defects in the product, discontinue use immediately and contact the retailer you purchased the product from or Snow Peak Customer Service. Also, please keep the Instruction Manual in a safe place so that you can refer to it at any time in order to use the product smoothly and safely.

Checking the "List of Designated Wood Stove Products and Shelters"

Before using this product, check this Instruction Manual to confirm which products and shelters can be used with it, which combinations are permitted, and how they should be installed. Also, check the "List of Designated Wood Stove Products and Shelters" on the Snow Peak website for the latest information. Do not use this product with any products, shelters, or combinations that are not designated. Doing so may result in serious accidents, such as fire, carbon monoxide poisoning, or the stove tipping over. The products and shelters that can be used with this product, as well as their combinations and installation methods, may change as products are added or specifications are revised. Always check the "List of Designated Wood Stove Products and Shelters" for the latest information before use.

You can access the latest version using the 2D barcode or URL shown on the right.

[List of Designated Wood Stove Products and Shelters]
URL:
https://www.snowpeak.co.jp/pdf/products/ST-210/ST-210_compatibility.pdf

* When using the wood stove at a campsite or other location where the network connection is unstable, check the latest version of the list beforehand in an environment where a connection is available, and print it out or save it to your device if necessary. The "List of Designated Wood Stove Products and Shelters" that you previously printed or saved to your device may not contain the latest information.
* If it is not possible to access the Internet or it is difficult to check the website, please contact Snow Peak Customer Service before use.

Hazards of carbon monoxide poisoning

Burning firewood produces carbon monoxide and carbon dioxide. When there is a lot of oxygen, a lot of carbon dioxide will be produced, and when there is a lack of oxygen, a lot of carbon monoxide will be produced. Particularly in enclosed spaces where oxygen levels tend to be low, the concentration of carbon monoxide increases, which makes poisoning more likely. Carbon monoxide is a very dangerous toxic gas that has an adverse effect on the human body, and can lead to death depending on the degree of inhalation. Carbon monoxide is colorless, transparent, and odorless, making it difficult to detect. Therefore, when using the wood stove, you must ensure that carbon monoxide does not accumulate.

●Effects of carbon monoxide on the human body

Carbon Monoxide Concentration in Air	Inhalation Time and Symptoms
0.02% (200 ppm)	Mild frontal headache within 2–3 hours
0.04% (400 ppm)	Frontal headache and nausea within 1–2 hours; occipital headache within 2.5–3.5 hours
0.08% (800 ppm)	Headache, dizziness, nausea, and convulsions within 45 minutes; unconsciousness within 2 hours
0.16% (1600 ppm)	Headache, dizziness, and nausea within 20 minutes; death within 2 hours
0.32% (3200 ppm)	Headache and dizziness within 5–10 minutes; death within 30 minutes
0.64% (6400 ppm)	Headache and dizziness within 1–2 minutes; death within 15–30 minutes
1.28% (12800 ppm)	Death within 1–3 minutes

Source: “CO Poisoning Accident Prevention Technology,” 8th Edition, FY2023, commissioned by the Ministry of Economy, Trade and Industry (edited by the High Pressure Gas Safety Institute of Japan), p.10, Table 1.1 “Carbon Monoxide Inhalation Time and Symptoms.”

* There are also reports stating that infants may die at lower concentration levels.

Disclaimer

This product is a wood stove designed for camping. Before using this product, please be sure to read and understand this Instruction Manual carefully, and use the product with due consideration for safety.
We will not be liable for any damage arising from the use of this product under the circumstances listed below or where we are otherwise exempted from liability under applicable law.

●Damage caused by incorrect use, assembly, or failure to follow instructions
- Fire, explosion, burns, poisoning, other personal injury, property damage (including, but not limited to, houses, tents, camping equipment, and other property in the vicinity), and any other damage, including loss of profits, arising from incorrect or incomplete assembly of this product or any failure to comply with the methods of use, warnings, and instructions described in this Instruction Manual.
- Any damage caused by the use of fuel other than commercially available firewood that is not specified in the Instruction Manual.

●Damage caused by use with non-designated shelters or inadequate fire safety management
- When using this product inside a shelter, use it only with a shelter designated by Snow Peak for use with the ST-210 Alma Stove (hereinafter referred to as a "designated shelter"). Use of this product with any shelter other than a designated shelter is strictly prohibited.
  * For information on designated shelters and the conditions for use, refer to this Instruction Manual and check the "List of Designated Wood Stove Products and Shelters" on the Snow Peak website for the latest information.
- Snow Peak will not be liable for any fire, spread of fire, property damage, personal injury, or any other loss or damage resulting from the use of this product with any shelter other than a designated shelter.
- Even when this product is used in combination with a designated shelter, Snow Peak will not be liable for any damage resulting from a fire caused by the user's negligence, including incorrect handling of fire, incorrect installation (including inadequate installation, securing, or insulation of the chimney, etc.), or weather conditions such as strong winds, where such fire causes personal injury to the user or third parties (people in the vicinity), or damage to houses, property, or other belongings.

●Damage caused by the use of products other than the designated products or of combinations other than those specified
- This product must be installed in and used as part of a product for which Snow Peak has specified a combination with the ST-210 Alma Stove (hereinafter referred to as the "designated product"), in the specified combination. Snow Peak strictly prohibits installing this product in any product other than a designated product or using it in any combination other than those specified.
  * For information on the designated products and combinations, refer to this Instruction Manual and check the "List of Designated Wood Stove Products and Shelters" on the Snow Peak website for the latest information.
- Tipping over, breakage, fire, personal injury, or other damage resulting from the use of products other than the designated products or combinations other than those specified.

●Damage caused by product modification and combined use
- Any damage caused by modification, disassembly, or repair of this product by the user or any third party, or from use of this product for purposes other than its intended use.
- Under no circumstances may this product be used in combination with wood stove–related components (including chimneys, insulation materials, extension parts, etc.) manufactured by other companies. We will not be liable for any performance degradation, breakage, fire, carbon monoxide poisoning, or any other losses or damage arising from the use of this product in combination with third-party products.
- Any damage caused by the use of this product in combination with older or newer versions of our products with different specifications.

●Damage resulting from transportation, assembly, or storage
- Physical damage to property and other objects owned by the user or third parties in the vicinity arising from the transportation, assembly, disassembly, or storage of this product.

●Damage caused by carbon monoxide poisoning and similar hazards
- Any personal injury or property damage caused by carbon monoxide poisoning or similar toxic gases resulting from failure to use a carbon monoxide monitor, incorrect ventilation, or use in an inappropriate environment (such as use inside a tent or enclosure other than those specified, use in an enclosed space, etc.).

●Damage arising from use by persons other than the user, transfer of the product, or damage to others
- Any damage arising from the user's failure to adequately explain the contents of this Instruction Manual to other persons (including companions and family members) using this product, or failure to ensure that such persons comply with the instructions in this Instruction Manual.
- Any damage resulting from a fire spreading to the surrounding area due to improper handling of fire, or from sparks or embers causing damage to the surrounding area, whether outdoors or inside a fabric structure.
- Any damage suffered by a third party or any other person arising from the transfer, resale, lending, or other provision of this product to a third party.

●Others
- Any damage caused by natural disasters, war, riots, the enactment, amendment, or repeal of laws or regulations, or other force majeure events.

[Important Notice] Changes to Product Specifications
We may change the product specifications without prior notice for reasons such as quality improvement.
Do not use a product for which the specifications have been revised together with an old product.
The above provisions also apply the provisions of the above items to accidents or damage resulting from changes in specifications.

■ Safety precautions

⚠ DANGER Misuse could easily result in a serious accident or death.

- Do not use this product in combination with any shelter other than a designated one. For the designated shelters, refer to page 31. For installation instructions, refer to the relevant pages of this Instruction Manual. Before use, check the Snow Peak website for the latest information in the "List of Designated Wood Stove Products and Shelters".
- Read the Instruction Manuals for each item you are using in combination with this product.
- When the product is used for the first time, smoke may be emitted from the oil that adhered to the stove during the manufacturing process. When using this wood stove inside a shelter, fully open the entrance. When using it outdoors, operate it in a well-ventilated location, load sufficient firewood, and burn it for approximately three hours to burn off residual oils.
- When using this product inside a shelter or other confined space, there is a risk of carbon monoxide poisoning. Never use it in an enclosed space. Also,to help ensure safety, always use a carbon monoxide monitor. Install the carbon monoxide monitor correctly in the location specified by the Instruction Manual for the carbon monoxide monitor or the designated shelter.
- If you feel that the weather may pose a danger, promptly pack up and evacuate to a safe location. Be sure you fully understand the relevant weather conditions before going out. Do not use the product if bad weather is expected, and stop using it if wind, rain, or snow becomes heavy while using the product.
- When setting up on snow, clear the snow from the area where the product will be installed, make sure that the legs of the designated product into which this product is incorporated are firmly in contact with the ground, and check that the chimney can be assembled as specified in the Instruction Manual. If it is not possible to carry out assembly, change the setup location.
- While this stove is in use, do not use gas canisters or other fuel-powered combustion appliances or lanterns nearby.* However, lighters and matches used to start a fire can be used.
- Do not burn anything other than commercially available natural wood firewood. In the worst case scenario, burning something that has the potential to explode or that emits harmful gases can lead to death. Also, do not burn fuel that may scatter sparks, such as paper. Sparks may fly out of the chimney, which may cause a fire or damage the shelter.
- Only use firewood that has been well dried. Otherwise, the wood may not ignite properly, which may result in incomplete combustion and generate carbon monoxide.
- When burning, do not add a fire starter. Otherwise, the flames will spread, which is very dangerous.
- Do not use a petroleum-based fire starter. Carbon monoxide may be generated under certain conditions.
- Do not use any fuel other than firewood, such as coal, briquettes, or charcoal, for fuel in a wood-burning stove. Doing so may cause carbon monoxide poisoning, product damage, and a fire.
- Do not use gasoline, kerosene, gas, alcohol, or other combustible liquids for ignition or as fuel.
- If you spray water at open flames, water vapor will be generated, which is dangerous. It may also lead to burns caused by splashed hot water.
- Do not hang or place flammable items such as clothing around the wood stove. If they fall due to shaking, they may catch fire, causing a fire.
- Make sure that children and pets do not approach the wood stove. The stove should be closely monitored to prevent burns and other hazards.
- Do not move the wood stove when it is assembled. Before moving the stove, check that it is cool, then disassemble it completely before moving it.
- When extinguishing the fire, wait at least three hours after the last time firewood was added. The wood stove remains hot and is extremely dangerous.

⚠ WARNING Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If you discover any abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- When using it in a public place such as parks, riverbeds, or campgrounds, check with the local government or administrator in advance.
- Do not use the product in areas in which you have not received permission from the landowner (private or public).
- Never use in places where the use of open fires or firearms is prohibited.
- Avoid placing the stove on a slope or unstable location. Otherwise, it may fall over.
- Refer to page 31 for the designated products in which this product can be installed for use. The designated products and their specified combinations are subject to change due to the addition of products, specification changes, or other reasons. Before use, always check the Snow Peak website for the latest version of the "List of Designated Wood Stove Products and Shelters".
- When setting up the wood stove, exercise care to avoid injury, and observe the following instructions.
  - Although the edges of each part have been finished, wear work gloves to help ensure safety.
  - When assembling parts, do not place your hands near the joints.
- When using this product installed in the designated product such as the Alma stand and the Iron Grill Table (hereinafter referred to as IGT*) frame, be sure to observe the following precautions.
  - Before use, make sure that the designated product incorporating the stove is stable and does not wobble. Periodically check the installation status during use. If you notice any abnormalities, stop using the product immediately. Otherwise, it may result in the product tipping over, causing a fire or burns.
  - Refer to page 31 for the permissible leg lengths.
  - Attach the designated fixing parts and be sure to secure the product using pegs. The product may tip over.
  - The designated product into which this stove is installed and the area around the wood stove become extremely hot. There is a risk of burns.
- Ensure there is a safe distance (distance that is not affected by heat) from combustible materials. Sparks may fly out, causing a fire. The wood stove generates a lot of heat, and lighters and other objects placed in pockets can be heated by far infrared rays, which may cause an explosion or a fire.
- Keep heat-sensitive items away from the wood stove.
- Do not use this wood stove if the inside of the designated shelter is so crowded with people and luggage that it is difficult to move around. You may trip or fall, come into contact with the wood stove or chimney, and suffer burns.

⚠ CAUTION Misuse could result in injury to the user and/or damage to property.

- Please note that this product is made of stainless steel that may rust due to usage conditions or the effects of heat.
- Do not use the stove if you notice any abnormalities such as abnormal combustion or damage to the main body.
- Pay close attention to the fire and surrounding environment during use. Keep a close eye on children and pets to ensure they do not touch the wood stove or chimney.
- Prepare a bucket of water for unexpected emergencies.
- Always wear heat-resistant gloves when loading firewood into the stove. This is because the main body and chimney get very hot, which may result in burns.
- Ensure there is sufficient space at the installation location.
- Do not put your feet on or sit on the Alma stand, IGT frame, or wood stove. Do not hang fire tongs or other items on this product, the IGT frame, or any parts of the Alma stand other than the tool hanging holes. Doing so will interfere with handling the stove, which may lead to an accident.
- Do not place electronic devices or heat-sensitive items near the wood stove.
- Please note that it may become deformed due to heat, but this will not affect the use of the main body.
- Fingerprints and oil stains on the chimney and wood stove may appear as burn marks when heated.

* "IGT" is a trademark or registered trademark of Snow Peak, Inc.

Designated Products, Designated Shelters, and Their Combinations

The information on this page is current as of the date this Instruction Manual was issued. The designated products and their combinations may be modified due to product additions or specification changes. Before use, always check the Snow Peak website for the latest version of the "List of Designated Wood Stove Products and Shelters".

* Check here for the latest information.

■ List of designated shelters

Designated shelter		Product to be used in combination	
TP-672	Landlock X	**TP-672-2**	Landlock X Fly Cover TC
TP-940	Merak Pro.	**TP-940TCF**	Merak Pro. Fly Cover TC

■ List of designated products

* This product must be installed in and used as part of one of the designated products listed below, regardless of whether it is used inside or outside the shelter.

LV-200	Alma Stand
CK-149	IGT 3 Unit Frame
CK-150	IGT 4 Unit Frame

CK-903	Collapsible IGT Three Unit Frame
CK-904	Collapsible IGT Four Unit Frame
GF-015	Garden Unit Table wood top set * This product cannot be used inside the shelter.

■ List of designated multi-function tables

CAUTION ●Bamboo tops on products may warp, split, or become discolored if exposed to heat from the stove. Please be careful when using such products.

CK-116TR	Bamboo Table Extension, Small
CK-117TR	Bamboo Table Extension, Large
CK-116TL	Regular IGT Extension Light Bamboo
CK-117TL	Long IGT Extension Light Bamboo

■ List of designated trays

CK-026	Lid Tray Half Unit
CK-085	Stainless Single Unit Tray


CK-125TR	IGT Bamboo Single Insert
CK-126TR	IGT Bamboo Wide Insert

■ List of designated IGT legs


* Never use the IGT Sitting Height 660mm Leg or IGT Sitting Height 830mm Leg inside the shelter. Using either leg inside the shelter reduces the clearance between this product and the shelter ceiling, potentially causing heat damage to the shelter.

Product code	Product name	Inside the shelter	Outside the shelter (single item use)
CK-109	IGT Ground Height 300mm Leg Set	○	○
CK-112	IGT Ground Height 400mm Leg Set	○	○
CK-113	IGT Sitting Height 660mm Leg Set	×	○
CK-114	IGT Sitting Height 830mm Leg Set	×	○


Set Contents * Before use, please check that all set contents and accessories are included.

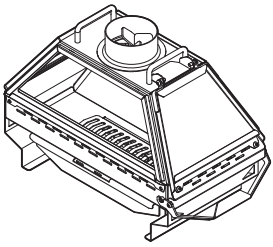

Stove body

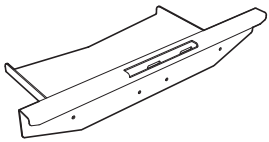

Ash catcher (pre-installed)

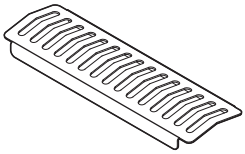


Fire grate




Carabiner×8



Rope with tensioner
(3.7m / 12.1')× 4




IGT leg fixing plate×4



Ash scraper

Chimney

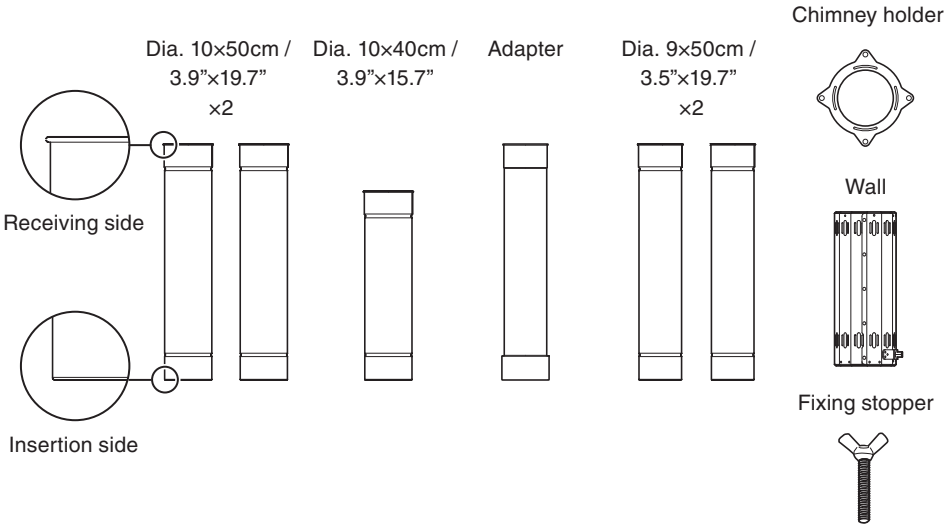

[Please prepare the items below separately before use.]

A designated product (sold separately) is required to use this product. Be sure to obtain it before use.

* For the designated product, refer to "List of Designated Products" on page 31.


●Anchoring pegs

Pegs for securing the product into which this product is installed are not included. Prepare four forged pegs that are at least 30cm / 11.8" long.

●Carbon Monoxide Monitor

When using this product inside a designated shelter, a carbon monoxide monitor is required. It is not included with this product, so please prepare one separately before use.

Names of Parts

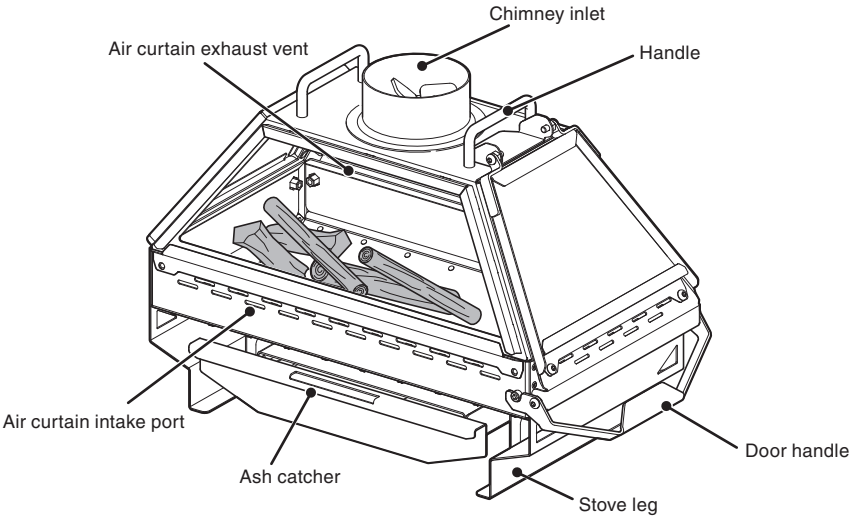

Before Using This Product for the First Time

- Although we take every precaution to ensure product quality, be sure to perform a trial assembly with the designated product before use and check that all accessories and tools required for assembly are included. If you find any problems or any accessories are missing, please contact the dealer you purchased the product from or Snow Peak Customer Service.
- The case used to package this product at the time of purchase can be reused as a protective case for transporting and storing the product. Keep the case and do not discard it. Do not place heavy objects on top of the protective case, as this may cause deformation or damage to the case or the stove body.

■ Checking the relevant Instruction Manuals and latest information

Install and use this product as part of a designated product, such as the Alma stand and IGT frame. Before use, be sure to consult the instruction manuals listed below and check the Snow Peak website for the latest version of the "List of Designated Wood Stove Products and Shelters".

* Check here for the latest information.

- ●Instruction manual included with the designated product into which this stove is installed
- ●When using the stove inside a shelter: Instruction Manual supplied with the designated shelter

■ Checking and preparing the setup site

- ●Before use, assemble the designated product into which this product will be installed and place it at the intended installation location.
- ●When installing and using the product in an IGT frame inside a shelter, use the 300mm Leg Set or 400mm Leg Set. Never use the 660mm Leg Set and 830mm Leg Set.
- ●Fully open the specified doorway panel according to the relevant information in the Instruction Manual included with the shelter.

DANGER

- ●Place this product on flat, solid ground. Placing the stove on angled surfaces may lead to unexpected accidents.
- ●When using the product in snowy conditions, clear the snow from the area where the designated product will be installed, make sure that the legs of the designated product into which this product is incorporated are firmly in contact with the ground, and check that the chimney is assembled as specified in the Instruction Manual. If it is not possible to correctly install the product, change the installation location, including the designated shelter.

■ Pre-setup checklist


Before setup, please use the checklist below to check for missing items, defects in each product, and the environment before installation.


☑	Are all the products and accessories required for use available? When using the product inside a shelter, are the designated shelter, the Fly Cover TC to be attached to it, a carbon monoxide monitor, and all accessories for each product available? (Refer to the Instruction Manual for each product.)
☑	Are four forged pegs at least 30cm / 11.8” long available to secure the designated product into which this product is installed, such as the Alma stand and IGT frame? When using the wood stove inside the designated shelter, check that you have all the pegs required to set up the shelter.
☑	Are all accessories included with the product you are using free of damage and wear?
☑	When using the wood stove inside the designated shelter, check that the carbon monoxide monitor has batteries installed and that spare batteries are available. Does the carbon monoxide monitor turn on? (Instruction manual that comes with your carbon monoxide monitor)
☑	Check that the intended setup locations for the shelter and this product are flat and on firm ground.
☑	When using the product in snowy conditions, check that the snow at the planned setup location of the designated shelter has been packed down and that the snow has been cleared from the planned installation location of this product.

■ Preparations of chimney holder

① Attach carabiners to both ends of the rope with tensioner (3.7m / 12.1'). (Four ropes)

② Attach the carabiner on the loop side to the chimney holder. (4 locations)

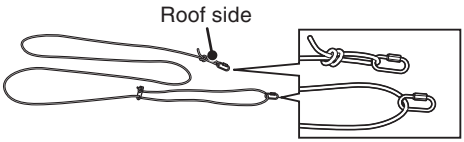


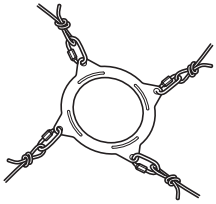

■ Preparation of the Wall

Turn the Fixing stopper clockwise to attach it to the threaded hole on the Wall.

* Do not overtighten the Fixing stopper, as this may prevent the chimney from passing through the Wall. Tighten it only enough to prevent it from falling out.

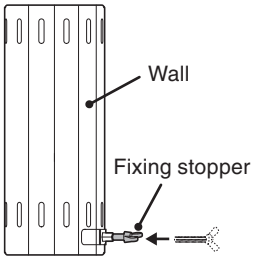

Wood stove assembly procedure


Follow the instructions below to practice setting up and packing up the product repeatedly in preparation for actual camping.
Also, check in advance that all accessories are included. Incorrect setup or disassembly may damage the product and/or cause an accident.

WARNING
- Be sure to have two or more people install the wood stove.
- Be sure to wear work gloves when installing the wood stove.

① Attach the fire grate to the position shown in the figure.


Install the fire grate in the position shown in the figure.

WARNING When removing the fire grate, wait at least three hours after the last time firewood was added and make sure that this product and its components, such as the fire grate, have cooled sufficiently before removing it. Even after three hours have elapsed, some parts may still be hot depending on the conditions of use. Touching the product while it is hot may result in burns.

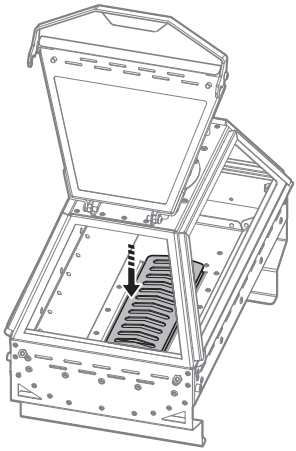

② Installing the Alma Stove


1) Attach the IGT Leg Fixing Plate to the adjuster on each leg of the Alma stand or IGT frame. (4 locations)

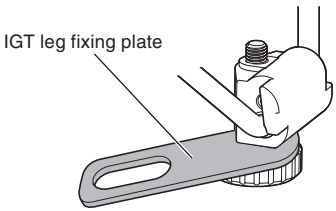

2) Place the Alma stand or IGT frame with the legs attached at the intended setup location.

3) With two people holding the stove by its handles, install it in the designated product to be used.


* When using the stove inside a shelter, position it so that the chimney inlet is directly beneath the stove jack (the chimney opening in the shelter).

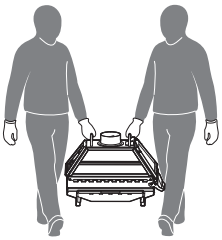


●When installing the stove, position it as shown below.

* Set the ash catcher in any desired orientation.
* To prevent this product from shifting sideways and ensure safe use, place the trays in the adjacent spaces.

[For Alma stand]

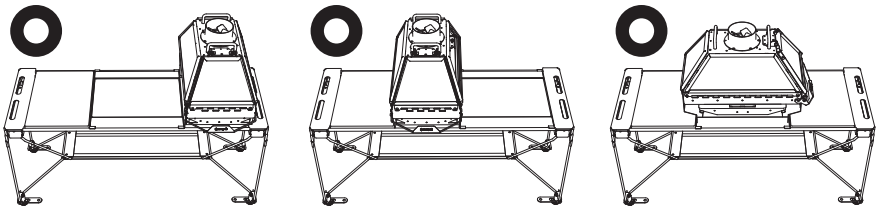

[For IGT frame]

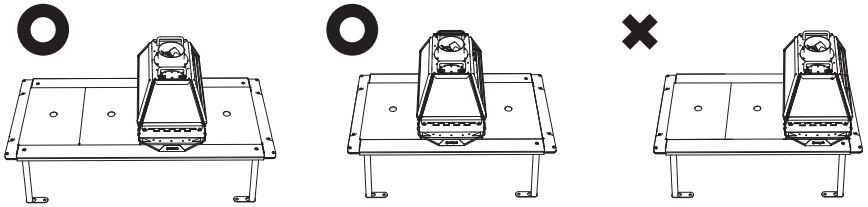

③ Attach the chimney.


Have two people hold the chimney and install it while adjusting its angle.

* The following instructions describe how to install the chimney on the Land Lock X and Merak Pro.
  For the latest information on designated shelters and installation methods, scan the QR code to access the "List of Designated Wood Stove Products and Shelters".

* Check here for the latest information.


WARNING
- Make sure that no people or nearby objects hit the product. Otherwise, it may cause an injury or damage.

CAUTION
- Insert the chimney fully and securely.
- Do not force the chimney into place by twisting it or applying excessive force. Doing so may cause the chimney to become deformed.
- If it is difficult to insert the chimney because the insertion end is slightly deformed, gently reshape the end by hand.

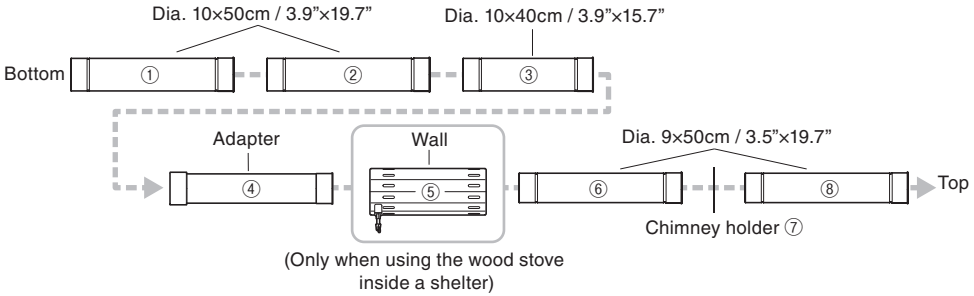

1) Refer to the figure above and insert the chimney sections in the order shown, from ① to ④.


* Before inserting the chimney sections, check their vertical orientation against the figure below.

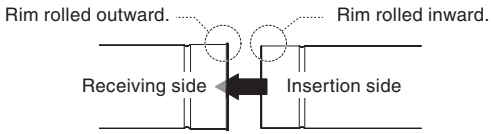

2) When using the stove inside a shelter, slide the wall ⑤ over the tip of the adapter ④.

* When using the stove outside the shelter, the wall does not need to be installed. Proceed to step 3.
* Before inserting the Wall, make sure the Fixing stopper is loosened. Inserting the Wall with the Fixing stopper tightened may damage the chimney.

WARNING
- When using the product inside the shelter, be sure to attach the wall. If the wood stove is used without the wall attached and the chimney comes into contact with the shelter, the heat from the chimney may cause the shelter to melt or burn, potentially leading to a fire.

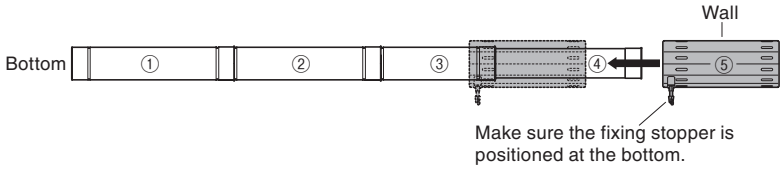

●Wall attachment procedure

The method of attaching the wall varies depending on the designated product into which this product is installed and the height of the legs used. Follow the applicable procedure.

[For the Alma Stand / IGT Frame with the 400mm Leg Set]

Lower the wall ⑤ until it rests against the upper rim of the dia. 10×40cm / 3.9”×15.7” chimney ③. This completes the installation.
At this time, do not tighten the fixing stopper.

[For the IGT Frame with the 300mm Leg Set]


Move the fixing stopper on the wall ⑤ to the recessed area at the top of the dia. 10×40cm / 3.9”×15.7” chimney ③, then tighten it clockwise to secure it.

* After tightening, check that the wall does not move up or down.


WARNING ●Be sure to tighten the fixing stopper securely. If the fixing stopper is not tightened sufficiently, the wall may shift or come loose during use, potentially causing the shelter to melt or burn and cause a fire.

* Always secure the fixing stopper in the recessed area at the top of the chimney. If it is secured to a flat section of the chimney, the chimney may become deformed.
* Even when the fixing stopper is securely tightened in the correct position, the area where it is secured may become deformed due to the expansion and contraction of the chimney caused by combustion. This does not affect the use of the product. If significant deformation is observed, discontinue use and contact Snow Peak Customer Service.


[For the Alma Stand or IGT Frame + 400mm Leg Set]

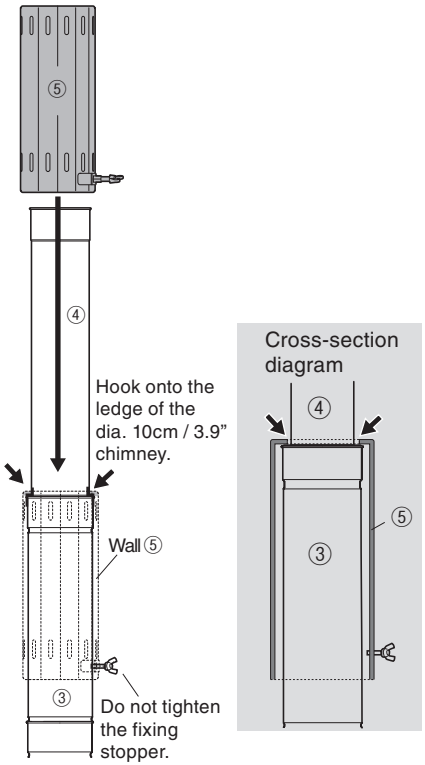

[For the IGT Frame with the 300mm Leg Set]

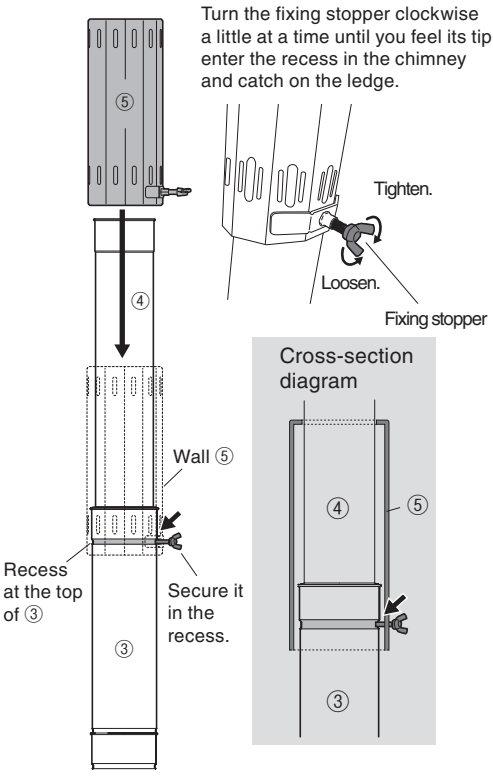


3) Insert the dia. 9×50cm / 3.5”×19.7” chimney section ⑥ into the top of the adapter ④. Pass the chimney holder ⑦ through the uppermost dia. 9×50cm / 3.5”×19.7” chimney section ⑧, then connect all the chimney sections together.

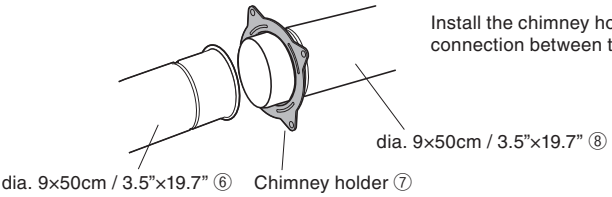

④ Insert the chimney into the stove.

Hold the chimney vertically and insert it into the Alma Stove body until it stops completely at the bottom.




[When installing inside the shelter]

CAUTION When installing it in a shelter, always ensure that two people carry it in order to prevent stress on the chimney.

1) Insert the upper section of the chimney into the stove jack, and then insert the lower section of the chimney into the wood stove.
   * For some shelters, the chimney cannot be inserted through the doorway panel on the chimney hole side. Check the Instruction Manual included with the shelter.


2) One person holds the lower section of the chimney and tilts it at an angle. After the chimney holder has come out through the stove jack, have the other person thread the rope out through the gap between the stove jack.

3) Hold the chimney vertically and insert it into the wood stove until it stops completely at the bottom.

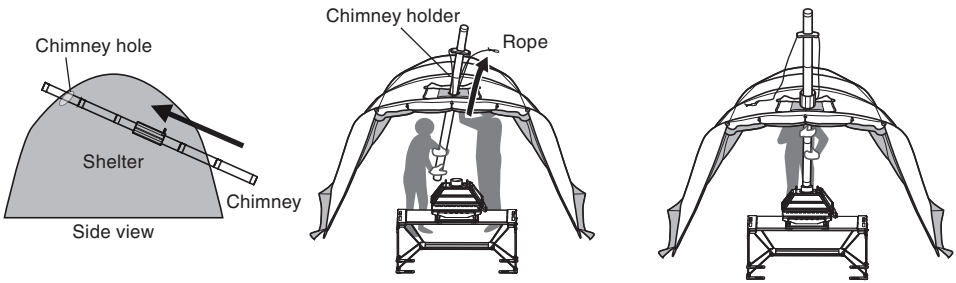

4) Check that the chimney is installed perpendicular to the wood stove in all directions. If the wood stove is misaligned, make necessary fine adjustments.

5) Check that the wall is in the correct position.
After securing the chimney by tensioning the rope with tensioner (3.7m / 12.1') in Step ⑤, check that the wall is correctly fitted to the stove jack. Ensure that the hole at the top of the wall is outside the tent fabric, the hole at the bottom is inside the tent fabric, and that the chimney is not in direct contact with the stove jack (see the figure below).
* Do not change the wall's position from that set in Step ③ 2).
* If the wall is not in the correct position, adjust it by pulling the stove jack on the Fly Cover TC downward.

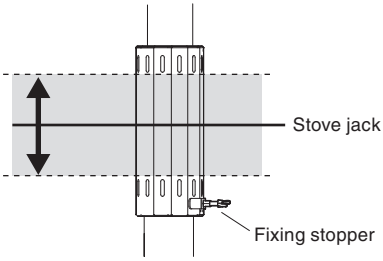


WARNING
- Always adjust the wall to the correct position shown in the figure. If the chimney comes into direct contact with the stove jack during use, the heat from the chimney may melt or burn the tent fabric, potentially causing a fire.
- If the wall shifts or comes off during use, immediately stop using the wood stove. Allow the wall and chimney to cool completely before reinstalling the wall in the correct position.

⑤ Secure the chimney using a rope.


Secure the chimney in a fixed position using a rope with tensioner (3.7m / 12.1') according to how you plan to use it. When securing the chimney, check the following points and rotate the chimney to adjust its position.
- Are the rope and carabiner properly secured in the correct position?
- Does the rope directly come into contact with the chimney?
- Is the carabiner misaligned?

●Adjust the chimney holder.


OK

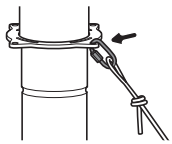

NG

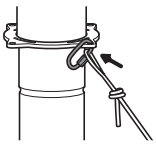


NG

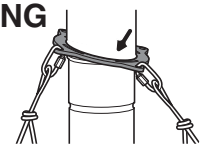


If the chimney holder is at an angle, adjust it so that it is parallel to the ground.


OK

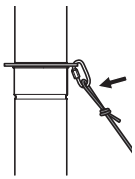

NG

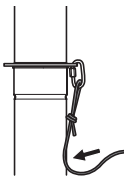



NG



●When using the stove installed in the Alma stand outdoors

1) Peg down the rope with tensioner (3.7m / 12.1') at least 1 m / 3.3' away from the wood stove using a forged peg that is at least 30cm / 11.8" long. (4 locations) When doing so, the carabiner is not required on the side the pegs are inserted into the ground.

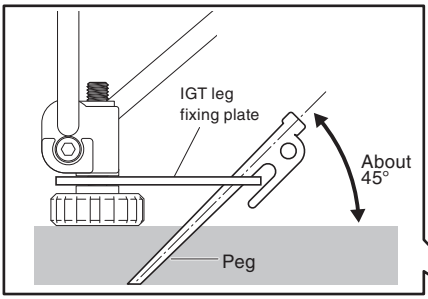


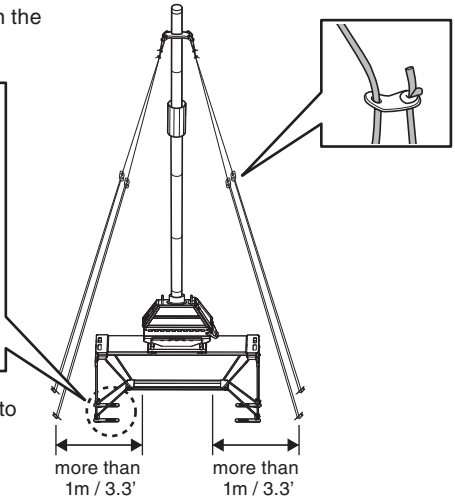



2) After pegging down, apply appropriate tension to the ropes with tensioners (3.7 m / 12.1').
* To prevent the product from shifting sideways and ensure safe use, place the trays in the adjacent spaces.

●When using the wood stove installed in the IGT frame outdoors

1) Pass the rope with tensioner (3.7m / 12.1') through the hole on the short side of the IGT frame and secure the chimney. (4 locations)

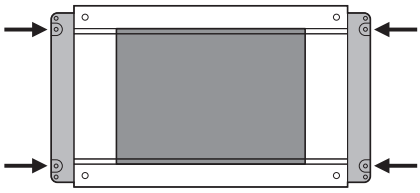

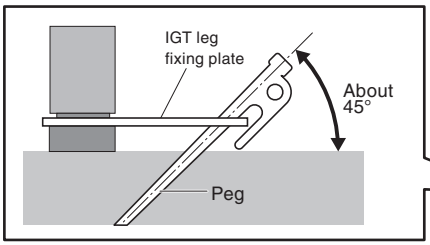

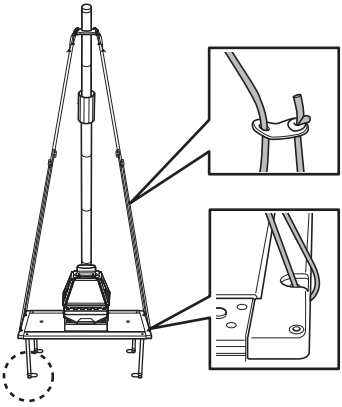


2) After pegging down, apply an appropriate amount of tension to the rope with tensioner (3.7m / 12.1').
* To prevent this product from shifting sideways and ensure safe use, install the stainless steel trays or Bamboo Insert on the left and right sides.

●When installing in the Garden Unit Table Wood Top Set


Attach the rope with tensioner (3.7m / 12.1') to the table legs as shown in the figure, and apply tension using the rope tensioner. (4 locations)

* Install the stainless steel trays, Bamboo Inserts, or wood tops on the left and right sides.
* Do not use the IGT leg fixing plate.

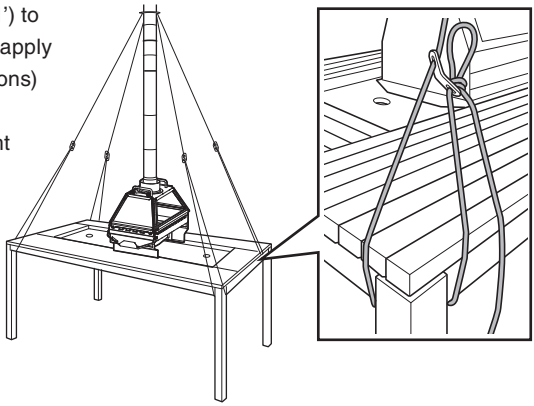


●When using the wood stove inside the designated shelter

1) When installing the stove inside the designated shelter, attach the carabiners of the ropes with tensioners (3.7m / 12.1') to the outside of the shelter and apply an appropriate amount of tension. (4 locations)
   * For information on where to attach the rope, refer to the instruction manual included with the shelter or the "List of Designated Wood Stove Products and Shelters" on the Snow Peak website.

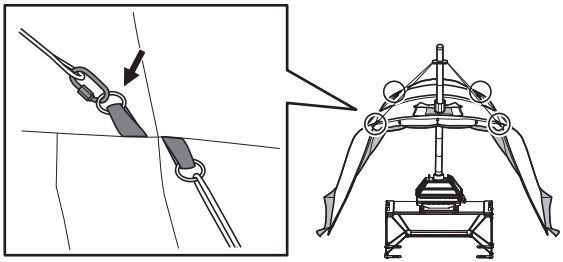

* The illustration of the shelter is for illustrative purposes only. The anchoring points differ for each shelter.

2) After checking the chimney, secure the designated product incorporating this product firmly to the ground by pegging down the IGT leg fixing plates.
   * Use forged pegs that are 30cm / 11.8" or longer.

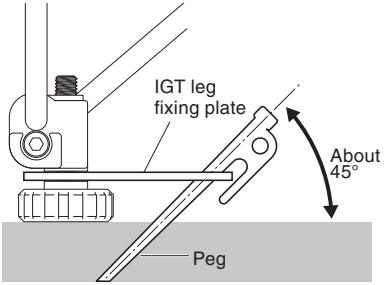

Before lighting the wood stove, be sure to check the condition of the wood stove and any designated shelter and carbon monoxide monitor used with it, following the "Pre-use Checklist (Check Before Lighting the Wood Stove)" on the following page.

Pre-use checklist (Check before lighting the wood stove)

Before lighting the wood stove, be sure to check the condition of the wood stove, including the designated shelter and carbon monoxide monitor used with it, using the checklist below.


☑	Make sure that the legs of the designated product into which this product is installed are in firm contact with the ground. Check that the fixing parts are installed.
☑	Check that the chimney is assembled as specified in the Instruction Manual. If it is not possible to correctly assemble the product, change the installation location.
☑	Check that there are no items obstructing the evacuation route. When using the wood stove inside the designated shelter, check that there are no items around the doorway.
☑	When using the wood stove inside a designated shelter, check that the specified ventilation opening is open.
☑	When using the wood stove inside the designated shelter, check that the carbon monoxide monitor is turned on.
☑	Have you prepared a fire extinguishing bucket filled with water?
☑	Are the pegs set correctly?
☑	Is the appropriate tension applied to the ropes?
☑	Are there any electronic devices, plastic products, or other items that are easily affected by heat around the wood stove?

■ Door opening and closing procedure


Lift the door handle and slowly lift the door upward. To close the door, reverse the procedure. Lower the handle fully to lock the door.

CAUTION When loading firewood, support the door with one hand to prevent it from falling.
If the door falls and slams shut, the glass may shatter or the stove body may be damaged.

When opening

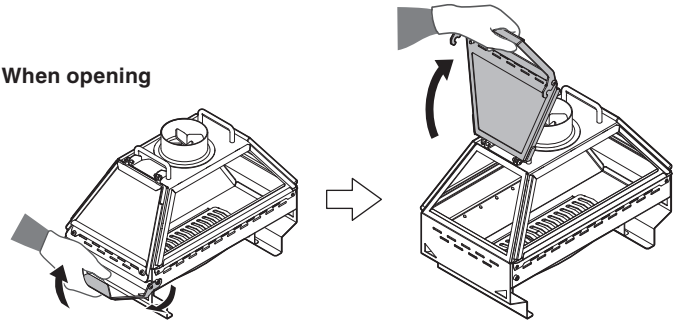

When closing

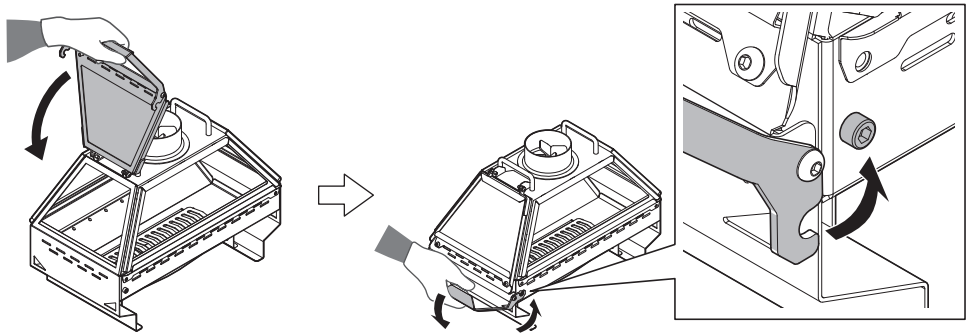


CAUTION After closing the door, lower the handle all the way down and check that the handle is securely engaged with the protrusion on the side of the stove and that the door is locked.

■ Ash catcher opening and closing procedure

To open: Insert the ash scraper into the hole in the ash catcher and slowly pull it toward you, being careful not to spill any ash.
To close: Reverse the opening procedure to insert the ash catcher all the way in, and check that it is securely in place.

* Do not use this product with the ash catcher removed or incorrectly installed.
* If the ash catcher does not slide all the way in, use the ash scraper to clear out any ash from the back of the stove before reinserting the ash catcher.

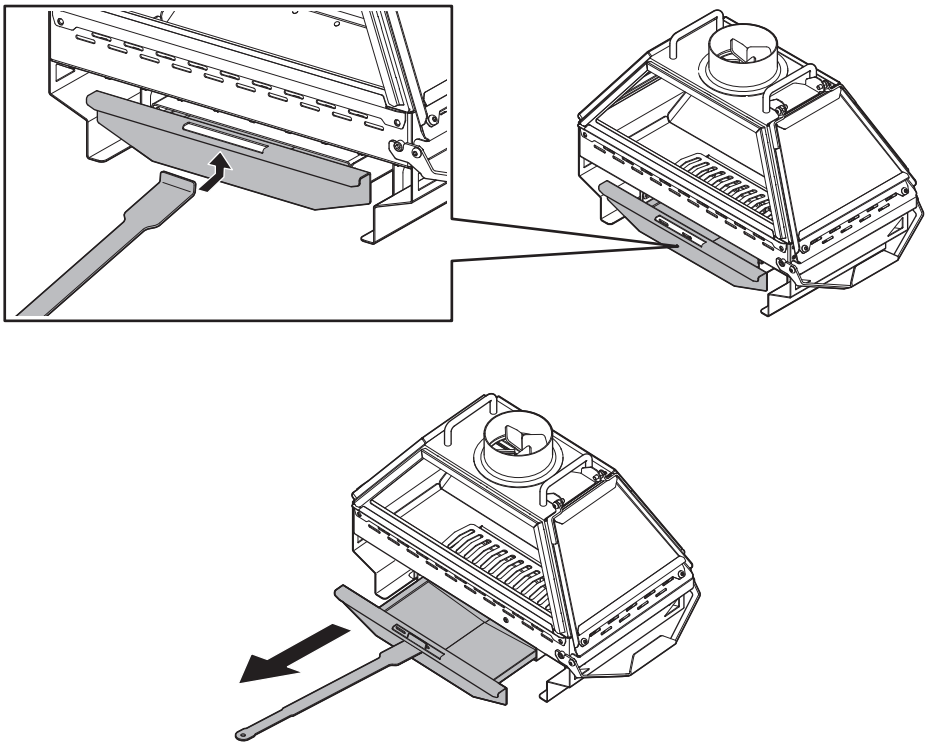

DANGER
- ●When using the wood stove inside the designated shelter, be sure to turn on the carbon monoxide monitor before lighting the stove.
- ●When using the product inside the designated shelter, be sure to ventilate the area regularly. Otherwise, an accident may result.
- ●Do not touch this product with bare hands while it is in use or for some time after use, as it becomes extremely hot. Doing so may result in burns.

WARNING
- ●Before lighting the fire, be sure to have a bucket of water, heat-resistant gloves, and fire tongs ready.

■ When using the stove for the first time

① The first time you use the stove, you will need to burn off the oil on the stove body. It is recommended to perform this burn-off process outdoors in a well-ventilated area. When performing this process inside the designated shelter, fully open the doorway panels on both sides of the shelter and open all the designated ventilation windows or ventilation openings to ensure adequate ventilation. Also, move any items away from the area around the doorways to keep the evacuation routes clear.

② Follow the steps starting with step 2 on the next page to light the wood stove and let it burn for approximately three hours.
* When performing this process inside the designated shelter, turn on the carbon monoxide monitor and check that it is operating properly before lighting the wood stove.


③ Smoke and odors will be produced during the burn-off process. Whether using the wood stove outdoors or inside the designated shelter, check the combustion from a position where you will not inhale the smoke, and do not leave the product unattended. Keep everyone other than the user away from the area. Inhaling the smoke may make you feel unwell.

CAUTION If only a small amount of firewood is being used, the temperature of the body will not rise, and the oil will not be burned. Always add firewood up to the level of the air curtain exhaust vent.


■ Ignition method

CAUTION Use firewood that has been sufficiently dried.
If the firewood is damp, it may be difficult to ignite.
If you continue to try to light a fire, it may cause a large amount of carbon monoxide to be released, so stop and prepare some dry firewood.

① Place the fire starter in the stove.

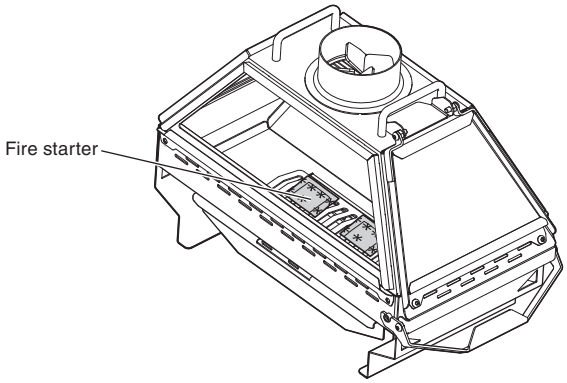


② Place several pieces of firewood (softwood) (standard: four to five pieces). When doing this, if you place too much firewood inside, air will not be able to flow through sufficiently, which may prevent ignition. Also, do not add firewood above the air curtain exhaust vent.

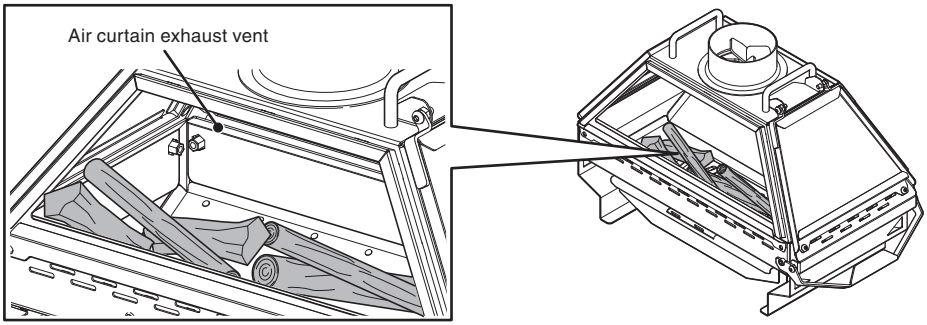

③ Use a match or similar item to ignite the fire starter.
If it is difficult to ignite, pull out the ash catcher about one cm / 0.4” to allow more air to enter through it.

* After igniting all the firewood in the stove, completely close the ash catcher.

CAUTION Main combustion has begun when flames start to come out of the air curtain exhaust vent. Once secondary combustion has begun, firewood can be added above the Air Curtain Exhaust Vent; however, adjust the amount and arrangement of the firewood so that the Air Curtain Exhaust Vent and the chimney inlet are not blocked.

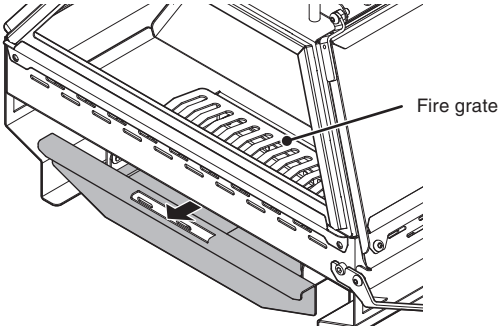

Use the fire tongs to add firewood (hardwood), being careful not to block the air curtain exhaust vent.

■ Firepower adjustment


Adjust the firepower by varying the amount of firewood. If the fire does not get stronger even after adding new firewood, ash may be blocking the holes in the fire grate. Use the ash scraper to remove the ash and open the ash catcher slightly. Once the firewood is burning well, close the ash catcher completely again.

How to disassemble


DANGER

- When extinguishing the fire, wait at least three hours after the last time firewood was added. Before handling or removing the wood stove body or chimney, make sure they have cooled down completely. Failure to do so may result in burns.
- Do not pour water directly in to a burning wood stove or chimney to extinguish it. This may cause a sudden release of steam, which may cause burns.

1. Prepare a bucket containing water nearby. When extinguishing fire, smoke may be emitted or sparks may fly. Place a bucket in a location where it will not cause damage to the shelter or property, or injure people around it.
2. Make sure that both the product and the ash have cooled sufficiently before opening the door, then slowly remove the fire grate. Do not perform this task in a windy location, as any remaining ash could be blown into the air.
3. Use the ash scraper to sweep any ash or charcoal remaining inside the stove body into the ash catcher.
4. Remove the ash catcher and carefully carry it to a bucket of water, then completely extinguish the ash and charcoal. Hold the ash scraper firmly with both hands when carrying the ash catcher.

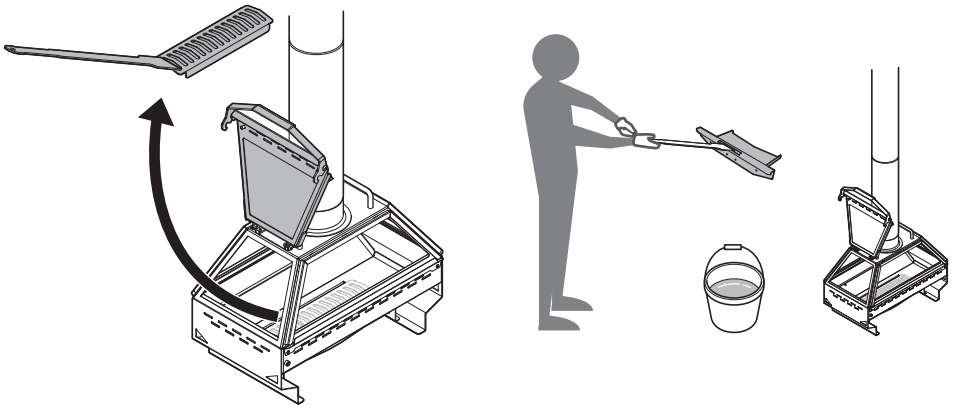

5. Reuse the case used to package this product at the time of purchase as a protective case to store the stove and its components. After placing the stove body in the protective case, lay the protective mat over it. Insert the dia. 9cm / 3.5” chimney section into the dia. 10cm / 3.9” chimney section, and stack the chimney sections and walls into three sets. Place them on the protective mat as shown in the illustration.
   * Do not place heavy objects on top of the storage case during transport or storage. Doing so may cause the storage case or its contents to become deformed or damaged.

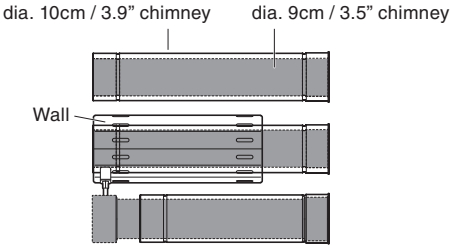

Emergency Response

If any of the following situations occur, prioritize your personal safety, immediately move away from the wood stove, and evacuate to a safe location. Please wait until the fire is extinguished. **Contact the fire department if necessary.**

- If the chimney becomes detached due to an impact or other cause during combustion.
- If abnormal smoke or an unusual odor is produced even though the wood stove door is closed during combustion.
- If the flames flow backward.
- The flames have spread outside the wood stove.

* The fire cannot be extinguished immediately even if you try to put it out with water.

Maintenance instructions

- When cleaning the wood stove or chimney, do not use a hard-bristled scrub brush or similar tool, as this may cause scratches.
- When maintaining or cleaning this product, be sure to wear protective equipment such as gloves.
- If light grime or water gets on this product, promptly wipe with a dry cloth and allow it to dry sufficiently.
- If salt (seasoning, etc.) or other chemicals get on this product, wipe thoroughly with a well wrung cloth and allow it to dry sufficiently.
- Store out of direct sunlight in a well-ventilated area with little humidity.
- Rust may form if the product is left exposed to moisture for extended periods, such as when left out in snow or rain, or in locations exposed to salt air, such as coastal areas.
- Leaving the wood stove and chimney wet may cause them to rust. Be sure to dry them thoroughly before storing them.
- Clean the inside of the wood stove using a brush. When doing this, do not use a hard brush because it may scratch the body.
- Clean the chimney assembly approximately once per season using a chimney brush appropriate for the chimney diameter. Soot and tar (black deposits) that accumulate in the chimney may cause incomplete combustion or a chimney fire.
- The glass and the glass-securing rope may need to be replaced depending on the frequency and conditions of use. For information regarding replacement, contact Snow Peak Customer Service.

Repair

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:


1. Failure due to improper handling described in this Instruction Manual.
2. Material deterioration caused by age
3. Failure due to modification or careless handling.
4. Damage caused by unexpected accidents
5. Any damage other than defects in the manufacturing process
6. Damage caused by dust or rust
7. Damage and defects caused by dismantling the product
8. Damage and defects caused by dropping, jolting, or other shocks
9. Defects due to deterioration, damage, or failure of consumable parts.
10. Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When requesting repairs, wipe off as much soot and dirt from the product as possible.
- Be sure to attach a note or tag to the item being sent for repair, clearly indicating the area to be repaired. Also, include a memo describing the circumstances surrounding the damage in as much detail as possible.
- Transportation and repair costs are determined as follows.
  1. Products covered by the warranty: Snow Peak will cover the shipping charges both ways and the repair costs.
  2. Products not covered by the warranty: The customer will be responsible for the shipping charges both ways and the repair costs.

Specifications

- Set Contents: Stove Body, Fire Grate, Carabiners (×8), Rope with Tensioner (3.7m / 12.1'×4), Chimney Holder, Chimney Set, IGT Leg Fixing Plate (×4), Ash Scraper
- Material: Stove Body / Stainless Steel, Window Glass / Heat-Resistant Glass, Glass Sealing Rope / Ceramic Rope, Chimney Set / Stainless Steel, Handle / Stainless Steel, Ash Scraper / Stainless Steel, IGT Leg Fixing Plate / Stainless Steel
- Storage Size (Protective Case): 565×345×545 (h) mm / 22.2"×13.6"×21.5"(h)
- Weight (Stove Body, Including Accessories and Chimney Set): 19.6kg / 43.2lbs

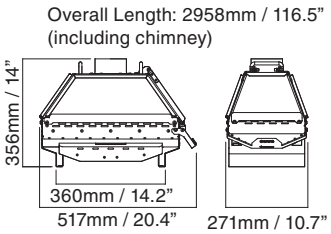

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (888) 424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA