
snow peak
outdoor lifestyle creator since1958

取扱説明書：Ver 1.00

TP-672-5
ランドロック X フロントクリアパネル

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はランドロックX（TP-672）専用のドアパネルです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解できない点および製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容（各部の名称）

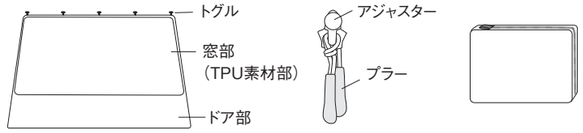

フロントクリアパネル　ジップスライダー（×4）　収納ケース

スペック

- 材質：フロントクリアパネル／75Dシリコンポリエステル・遮光ピグメントPUコーティング耐水圧3,000mmミニマム・撥水加工・UVカット加工、TPU、ジップスライダー／亜鉛合金
- 収納サイズ：34×24×8（h）cm
- 重量：約1.6kg

安全上の注意事項　ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠危険　明らかに生命に関わる重大な事故が予測される行為を示します。

- 本製品の素材は難燃性ではありません。火や高熱源の近くで使用したり置かないでください。

⚠警告　取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用の前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。

⚠注意　ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

- 本製品は常設用ではありません。長時間日光にさらされると、退色や生地の劣化により強度が低下します。
- 日差しにより本製品の表面が高温になり、低温ヤケドのおそれがあります。
- 焚火や花火などの火気の近くでは、設営・使用・撤収をしないでください。火の粉により生地に穴があくおそれがあります。
- 設営・撤収時は、本体が風で飛ばされないようしっかり支えてください。強風時は作業を中止してください。
- 薄い生地を使用しているため、強く引っ張ると破損するおそれがあります。
- 十分に乾燥させてから収納してください。濡れたまま保管すると、色移りするおそれがあります。
- 低温下では窓部が硬化し、折り曲げると亀裂が入る場合があります。強い折りジワを避け、安定した室温で保管してください。
- 窓部は、紫外線や温湿度の影響により黄変、白濁などが生じます。素材特性による経年変化であり、機能上の異常ではありません。また、紫外線による劣化は修理できない場合があります。
- 窓部は傷つきやすいため、硬いものや砂粒などでこすらないでください。
- 結露は使用環境により発生します。こまめに換気し、濡れて困るものを近くに置かないでください。
- ドア部の撥水性能は、使用や経年により低下します。撥水スプレーを使用する際は説明書をよく読み、窓部にかからないよう注意してください。窓部には撥水加工を施していません。
- 地面の水たまりなどに長時間接触すると、浸水する場合があります。
- 農薬などによりPUコーティングが劣化し、耐水圧が著しく低下する場合があります。この場合は保証対象外です。
- ドア部にはUVカット加工を施していますが、人体への影響や素材の劣化を完全に防ぐものではありません。窓部にはUVカット加工を施していません。
- 生産上、ジップレールの長さにわずかな個体差があり、取り付け時に余りや張りが生じる場合がありますが、使用上の問題はありません。
- 分解・改造しないでください。ジップ部やアジャスターが正常に機能しなくなるおそれがあります。

保管・メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 窓部にアルコール、有機溶剤、油分を含むクリーナーを使用しないでください。お手入れの際は、薄めた中性洗剤を含ませて固く絞った柔らかい布で軽く拭き、水を含ませた布で仕上げ拭きしてください。
- 本製品はポリエステル生地とTPUパネルを使用しております。素材の性質上、生地からTPUへの色移り（移染）を防ぐことはできません。あらかじめご了承ください。
- 色移りや素材劣化の原因となりますので、「濡れたままの放置」「高温多湿下での保管」「製品を圧縮・圧迫した状態での長期保管」は避けてください。
- 濡れたまま保管すると、カビや悪臭、生地の劣化などのトラブルの原因になりますので、使用後は風通しの良い日陰で十分に乾燥し、柔らかいブラシなどで泥汚れを落としてから保管してください。
- 折りたたみ保管の際は、強い折りジワを避けてください。シェルター本体に取り付けたまま保管すると、強く圧縮されてしまいますので、取りはずしての保管を推奨します。
- 高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。
- 小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。
- ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。
- シームテープはPUコーティングが傷まない程度の温度設定で圧着されていますが、使用を重ねるにしたがい剥離してしまう場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみを再度圧着してください。熱をかけ過ぎた場合、生地が変色したり劣化が促進されますのでご注意ください。
- シームテープは無理やり剥離させないでください。PUコーティングが一緒に剥離された場合、修理できなくなる可能性があります。
- 樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の下を避けて設営してください。溶剤などにより無理に除去すると生地やコーティングを傷めます。
- 次回のキャンプに備え、上記の通り十分に保守、点検をしてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

1. 素材の経年劣化による損害など商品の寿命
2. 改造および粗雑な取扱いによる故障
3. 取扱説明書で禁止されている取扱いによる故障
4. 不測の事故による商品の故障
5. その他製造上の欠陥以外による製品の故障
6. ゴミやサビによる故障
7. 分解したことによる不具合の発生または破損
8. 落下やその他の衝撃による部品の変形や破損による不具合
9. 摩擦によるパーツの変化及びそれによる故障
10. 他社製品との組み合わせによる故障


修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。

1. 保証対象の場合：往復運賃並びに修理費は弊社にて負担いたします。
2. 保証対象以外の場合：往復運賃並びに修理費は、お客様のご負担とさせていただきます。

使用方法

［参考動画］
詳しい取り付け方法は、右の二次元コードから動画をご確認ください。

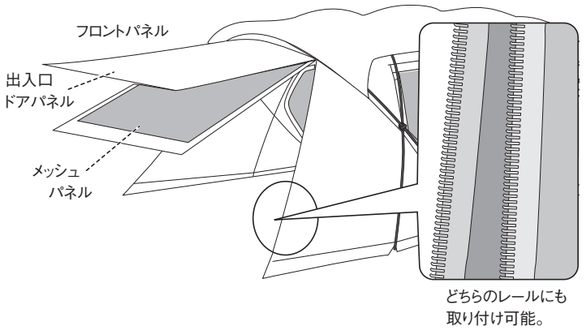


どちらのレールにも取り付け可能。

［取り付け前の準備］

- ジップスライダーは、幕体およびフロントクリアパネル本体にテンションがかかっていない状態で取り付けてください。テンションがかかった状態では、取り付けにくい場合があります。
- 出入口ドアパネルまたはメッシュパネルのどちらのレールに取り付けるかを決め、取り付ける側のパネルをあらかじめ巻き上げるか張り出してください。
  ※ジップスライダーは、出入口ドアパネルとメッシュパネルのどちらのレールにも取り付けられます。

［取り付け方］

（1）シェルターの内側から、フロントクリアパネル上部のトグルを出入口パネル上部に掛けてください。
※品番タグがシェルターの室内側になるように取り付けてください。

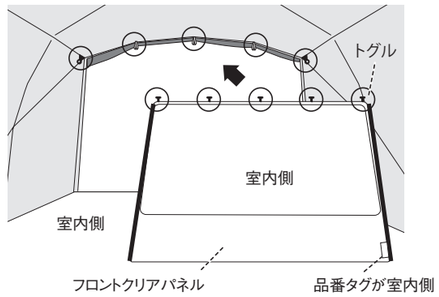


（2）ジップスライダーを2個1組で仮取り付けします。
※レール上の任意の位置に仮取り付けしてください。




①下図を参照し、アジャスターの位置からジップスライダーの向きを確認してください。


〈正面図〉　〈側面図〉

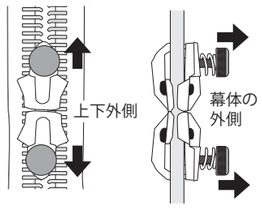

②アジャスターを回し、ジップスライダーの隙間を広げてください。

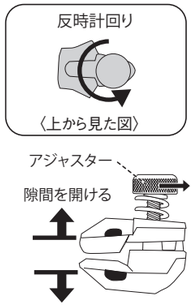


③ 幕体側のレールとフロントクリアパネル側のレールをジップスライダーに差し込んでください。

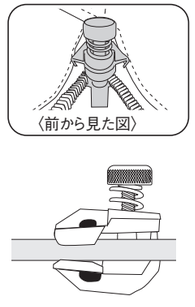

④レールが抜けない程度までアジャスターを締めてください。もう一方のジップスライダーも②～④同様に取り付けてください。




（3）1組のジップスライダーをレール端まで移動させ、本製品と幕体側のレール端を揃えてください。レール端が揃っていないと、正しく取り付けられないおそれがあります。

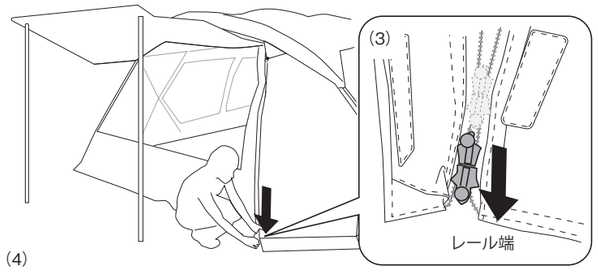

（4）アジャスターを動かなくなるまで締め込み、そこから約1/4回転程度緩めます。ファスナーを試しに開閉し、スムーズに動くことを確認してください。

※ファスナーの開閉ができない場合、次の方法をお試しください。
- アジャスターの締め具合を調整する。
- ジップスライダーをレール端まで移動させる際の開始位置（上側または下側）を変更する。
- プラーを引かず、ジップスライダー本体を指でつまみ、レールを挟むように押さえながら動かして、ファスナーを閉める。

(4)

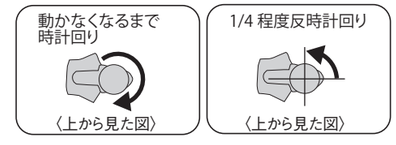

（5）反対側も同様に、（2）～（4）の手順で取り付けてください。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
0120-010-660（9:00～17:00）
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA


snow peak
outdoor lifestyle creator since1958

Instruction Manual: Ver 1.00

TP-672-5
Landlock X Front Clear Panel

Thank you for purchasing a Snow Peak product. This product is a dedicated door panel for the Landlock X (TP-672) for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Set Contents (Part Names)

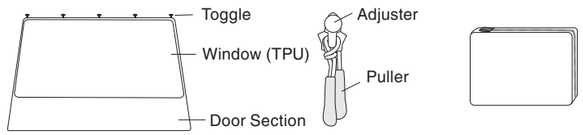

Front Clear Panel | Zip Slider (×4) | Storage Case

Specifications

- Materials: Front Clear Panel / 75D Silicone Polyester, Pigment PU Coating Waterproof Rating: 3,000mm minimum, Water Repellent Finish, UV Protection Treatment, TPU, Zip Slider / Zinc alloy
- Storage Size: 34×24×8(h)cm / 13.4”×9.5”×3.1”(h)
- Weight: Approx 1.6kg / 3.5lbs

Safety Precautions:Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

- The materials of this product are not flame-retardant. Do not use or place this product near open fire or other heat source.

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- This product is not intended for permanent use. Prolonged exposure to sunlight may cause fading or deterioration of the fabric, resulting in reduced strength.
- Sunlight can cause the surface of this product to heat up, potentially causing low-temperature burns.
- Do not set up, use, or take down this product near a campfire, fireworks, or other sources of fire. Flying sparks may create holes in the fabric.
- When setting up or taking down this product, hold it firmly so that it is not blown away by the wind. Stop working in strong winds.
- As this product is made of thin fabric, pulling it with excessive force may cause damage.
- Dry the product thoroughly before storing it. Storing it while wet may cause color migration.
- Under low-temperature conditions, the window material may harden and crack when folded. Avoid sharp creases and store the product at a stable room temperature.
- Exposure to ultraviolet rays and changes in temperature and humidity may cause the windows to yellow or become cloudy. These are natural effects of material aging and are not functional defects. Deterioration caused by ultraviolet rays may not be repairable.
- The windows are easily scratched. Do not rub them with hard objects, sand grains, or similar materials.
- Condensation may occur depending on the environment of use. Ventilate the shelter frequently, and do not place items that you do not want to get wet near this product.
- The water-repellent performance of the door material will degrade with use and over time. When using a water-repellent spray, read the instructions carefully and ensure that it does not get on the windows. The windows are not treated with a water-repellent finish.
- Water may soak into the fabric if it remains in contact with puddles on the ground for long periods of time.
- Agricultural chemicals and other substances may cause the PU coating to deteriorate, significantly reducing the product's ability to withstand water pressure. Such damage is not covered by warranty.
- The door material is treated with a UV protection finish, but it does not completely prevent the effects of ultraviolet rays on the human body or material deterioration. The windows are not treated with a UV protection finish.
- Due to manufacturing characteristics, slight variations in the length of the zip rails may occur. As a result, a small amount of excess or tension may be noticed during installation; however, this does not affect normal use.
- Do not disassemble or modify this product. Doing so may prevent the zipper components or adjusters from functioning properly.

Storage and Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are any abnormalities, stop using the product immediately and take it to the retailer or contact Snow Peak Customer Service for inspection or repair.
- Do not use cleaners containing alcohol, organic solvents, or oil on the windows. When cleaning, gently wipe them with a soft cloth soaked in diluted mild detergent and wrung out thoroughly, then finish by wiping them with a cloth dampened with water.
- This product is made of polyester fabric and TPU panels. Due to the characteristics of these materials, color migration from the fabric to the TPU cannot be prevented. Please note this beforehand.
- To prevent color migration and material deterioration, avoid leaving the product wet, storing it in hot and humid conditions, or storing it under compression or pressure for long periods of time.
- Storing the product while it is still wet can result in issues such as mold buildup, bad odors, and material deterioration. After use, dry it thoroughly in a well-ventilated and shaded area, and remove mud and dirt with a soft brush before storing.
- When folding this product for storage, avoid sharp creases. Storing this product without removing it from the shelter will over-compress it. Storage after removal is recommended.
- Store the product in a well-ventilated area out of direct sunlight and away from heat and moisture.
- Slight damage to the fabric can be repaired with commercially available repair tape. When making repairs, be sure to read the repair tape instructions carefully.
- The material may deteriorate over a wide area with use. Products that have deteriorated beyond their durability limit may not be repairable.
- Seam tape has been pressure-bonded at a temperature set to avoid damaging the PU coating. However, it may begin to peel with continued use. If peeling occurs, set an iron to a low temperature and pressure-bond only the peeling section again. Applying too much heat may cause discoloration or accelerate deterioration of the fabric. Do not forcibly peel off the seam tape. If the PU coating is also pulled off, the product may become irreparable.
- Sap cannot be completely removed once it adheres to the product. Avoid setting up the product under trees that may drip sap. Attempting to remove sap with solvents or similar substances may damage the fabric or coating.
- Carefully maintain and inspect the product as instructed above in preparation for your next camping trip.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:

1. Material deterioration caused by age
2. Damage caused by modifications or rough handling
3. Damage caused by inappropriate use not mentioned in the instruction manual
4. Damage caused by unexpected accidents
5. Any damage other than defects in the manufacturing process
6. Damage caused by dust or rust
7. Damage and defects caused by dismantling the product
8. Damage and defects caused by dropping, jolting or other shocks
9. Deterioration or failure of parts due to friction
10. Damage caused by the use of the product in combination with another manufacturer's products


Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.

1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Instructions for Use

[Reference Video]
For detailed installation instructions, scan the 2D code on the right to watch the video.

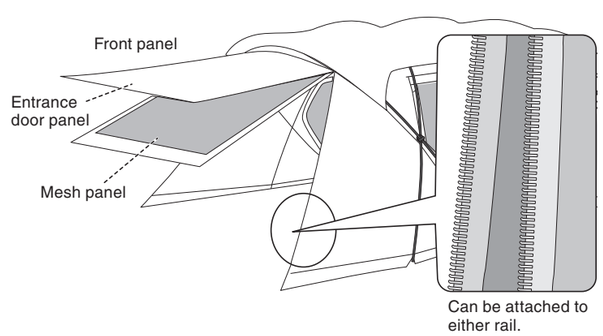


Can be attached to either rail.

[Preparation before Installation]
- Install the zip sliders while there is no tension on the tent or front clear panel. They may be difficult to install if the fabric is under tension.
- Decide which rail to install the zip sliders on - the entrance door panel rail or the mesh panel rail - and roll up or prop out the corresponding panel.

* The zip sliders can be installed on the rails of either the entrance door panel or the mesh panel.


[How to Attach]

(1) From inside the shelter, hook the toggles at the top of the front clear panel onto the top of the entrance panel.
* Attach so that the part number tag faces the inside of the shelter.

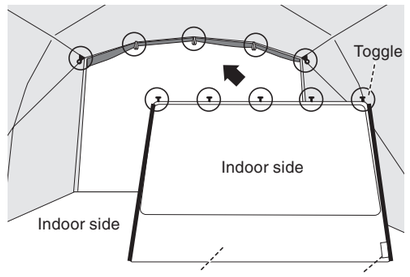


Front Clear Panel | Part number tag facing inside


(2) Temporarily install the two zip sliders as a pair.
* Temporarily install them at any position along the rail.

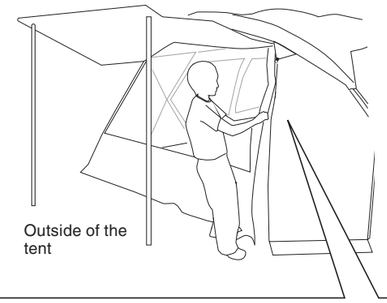


① Refer to the figure below to check the orientation of the zip sliders from the adjuster position.

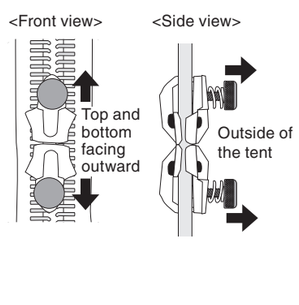


② Turn the adjuster to widen the gap in the zip slider.

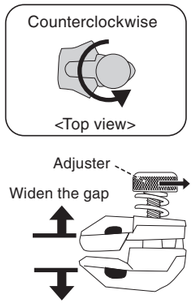



③ Insert the rail on the tent side and the rail on the front clear panel side into the zip slider.

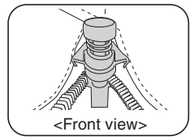

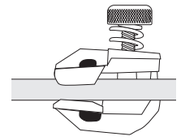


④ Tighten the adjuster until the rails are secure.
Repeat steps ②–④ to attach the other zip slider.

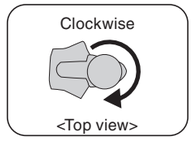

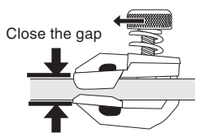


(3) Move the pair of zip sliders to the end of the rail, and align the ends of the front clear panel rail and the tent side rail. If these rail ends are not aligned, you may not be able to install the panel correctly.

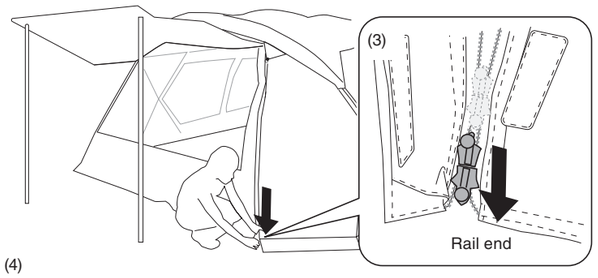

(4) Tighten the adjuster until it stops, then loosen it by approximately a quarter turn.
Try opening and closing the zipper to ensure that it moves smoothly.

* If the zipper cannot be opened or closed, try the following:
- Adjust the tightness of the adjuster.
- Change the starting position (top or bottom) when moving the zip sliders to the end of the rail.
- Instead of pulling the pull tab, pinch the zip slider body with your fingers and move it while holding the rails between your fingers to close the zipper.

(4)

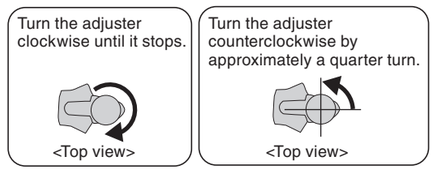

(5) Follow steps (2) through (4) to install the zip sliders on the other side in the same way.

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (888) 424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA