


TW-351 / TW-501 / TW-501R ステンレス真空ボトル タイプM 350 / 500

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、ステンレス製携帯用まほうびんです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

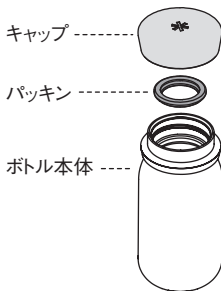

パッキンは消耗品です。汚れが目立ってきたり、ゆるくなってきたら交換をしてください。交換部品については弊社オンラインストアよりお買い求めください。

※パッキンの取り付け方法についてはP6を参照してください。

交換用パッキン

XTW-350-03 パッキン2pcsセット

※TW-351 / TW-501 / TW-501Rで共通で使用できます。

スペック (品質表示)

品名		ステンレス製携帯用まほうびん		
材質		ボトル本体／ステンレス(外側アクリル樹脂塗装)、 キャップ／ポリプロピレン、パッキン／シリコーンゴム		
品番		TW-351	TW-501	TW-501R
サイズ		φ74×155(h)mm	φ74×200(h)mm	
重量	ボトル本体	166g	210g	180g
	キャップ	37g		
容量		350ml	500ml	
保温効力		68度以上(6時間)	74度以上(6時間)	
保冷効力		8度以下(6時間)		

※保温効力とは、室温20度±2度において製品に熱湯を取扱説明書に記載の位置まで満たし、縦置きにした状態で湯温が95度±1度のときから6時間放置した場合におけるその湯の温度。

※保冷効力とは、室温20度±2度において製品に冷水を取扱説明書に記載の位置まで満たし、縦置きにした状態で水温が4度±1度のときから6時間放置した場合におけるその水の温度。

安全上の注意事項


ご使用前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- 乳幼児の手の届く場所に置かないでください。またいたずらには十分注意してください。(ヤケドやケガの原因となります)
- ボトル本体やキャップを直接火にかけたり湯煎するなど、加熱しないでください。爆発や溶解のおそれがあります。(ヤケドやケガの原因となります)

⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 本製品を飲み物の保温、保冷以外に使用しないでください。
- 熱い飲み物を入れて使用する場合は本体を傾けながらキャップを開けたり、顔を近づけてキャップを開閉しないでください。(飲み物が吹き出したり飛び散ってヤケドやケガの原因になります)
- ストーブや直火などで高温になる場所へは近づけないでください。(ヤケドや変形、変色の原因となります)
- 熱い飲み物を注ぎ、キャップを閉めた直後は、ボトルを移動させる、勢いよく傾けるなどの衝撃を与えないでください。商品の構造上、衝撃により飲み物が勢いよく飛び出し、ヤケドやケガなどの重大な事故に至るおそれがあります。
- 飲み物を入れた状態で長く放置しないでください。(飲み物が変質、腐敗するとガスが発生し、内圧が上がり、キャップが開かなくなる、飲み物が吹き出る、部品が破損してケガや周囲を汚す原因となります)
- 熱い飲み物を入れて使用するときは、本体を急に傾けないように注意して、ゆっくりとお飲みください。
- キャップのパッキンが正しく取り付けられていることを確認してください。またキャップが確実に閉まっていることを確認してください。(内容物が漏れて、ヤケドやものを汚す原因となります)
- 飲み物の量は図の位置までにしてください。(入れすぎるとキャップを閉めるときに飲み物があふれてヤケドをしたり、周囲を汚す原因となります)
- 自動車走行中は使わないでください。(ヤケド・車内や衣服を汚す原因となります。また運転者の場合、運転への注意が散漫となり、非常に危険です)

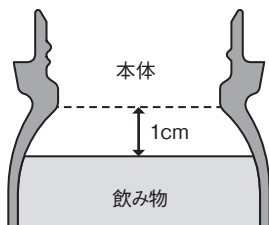


- 以下のものは絶対に入れないでください。(内圧が上がり、キャップが開かなくなる、飲み物が吹き出る、部品が破損してケガや周囲を汚す原因となります)
 - ・ドライアイス・炭酸飲料。
 - ・牛乳・乳飲料・果汁など腐敗しやすい飲み物。
- 電子レンジで加熱しないでください。(火花が飛んで、ケガ・故障の原因となります)
- ボトル本体・キャップを煮沸したり、食器洗浄機・食器乾燥機を使用しないでください。(熱によりボトル本体やキャップが変形し飲み物が漏れてヤケドや周囲を汚す原因となります)
- 飲み口にヤカンなどの注ぐ容器を当てないでください。(転倒してヤケド・ケガ・傷や変形の原因となります)

⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

- かばんや袋に入れたまま放置しないでください。
(周囲の環境などにより、サビ・においの原因となります)
- 本体外側が濡れている状態でカバンなどに入れないでください。
(サビ・におい・汚れの原因となります)
- かばんなどに入れるときは、万一の漏れを防ぐために、本体を立てて入れてください。
(横に入れると漏れの原因となります)
- みそ汁・スープなど塩分を含んだものは入れないでください。
(腐敗・変質・サビの原因となります)
- 倒したり、落したり、ぶつけたりする等の強い衝撃を与えないでください。
(破損・保温効果の低下・サビ・塗装剥がれ・内容物の漏れの原因となります)
- 本体外側の底に貼ってある保護シートは、絶対にはがさないでください。
(保温効果が低下するおそれがあります)
- 分解・修理はしないでください。(故障や事故の原因となります)
- 大きな氷を入れる時は、押し込まず小さくしてから入れてください。
- お茶の葉・果肉などは入れないでください。(漏れる原因となります)
- スポーツ飲料を入れた場合は、使用後すぐお手入れをしてください。
(外出時など十分なお手入れができない時でも、すぐ本体内側をよく水ですすいでください。カビやサビ、穴があくなどの原因となります)
- 冷凍庫に入れないでください。(内容物の漏れや、破損の原因になります)
- 塩素系漂白剤は使わないでください。(サビ・塗装はがれ・穴があく原因となります)
- 逆さにして置かないでください。

ご使用方法


ご使用前には必ず本体を十分に洗ってください。

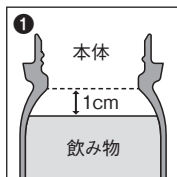

①飲み物を入れる


飲み物の量は図①の位置までにしてください。入れすぎるとキャップを閉めるときに飲み物があふれる原因となります。

予め容器の図①の位置まで熱湯を注ぎ30秒程度待った後、熱湯を捨ててから飲み物を入れると保温効果が高まります。予めボトル本体を冷蔵庫に30分程度入れて冷しておき、その後飲み物を入れると保冷効果が高まります。

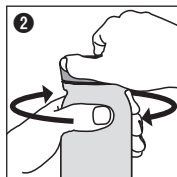

②キャップを閉める


ボトル本体を垂直に立てた状態でキャップを乗せ、時計方向に回して確実に閉めます。

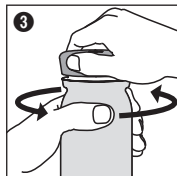

③キャップを開く

キャップを開く時は本体を垂直に立てた状態で本体の上下を握りながら、半時計方向に回しボトル本体から取り外します。


キャップを取り外すときは本体を傾けたり揺らしたりしないでください。飲み物が溢れる原因になります。

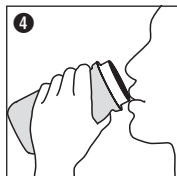

④飲み物を飲む

熱い飲み物を入れて使用するときは、本体を急に傾けないように注意して、ゆっくりとお飲みください。

キャップをはずす時は熱い蒸気が出ますのでご注意ください。

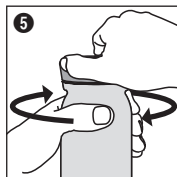

⑤キャップを閉める

ボトル本体を垂直に立てた状態でキャップを乗せ、時計方向に回して確実に閉めます。


メンテナンス方法

- 使用後は、必ずその日のうちにお手入れをしてください。
- 洗剤は、食器用中性洗剤をぬるま湯で薄めて使用してください。
- スポンジ・布はやわらかいものを使ってください。
- パッキンは必ずキャップから外して洗浄してください。
- 保管の際はきれいに汚れを落とし、十分に乾燥させてから風通しの良い涼しい場所にキャップを外して保管してください。

⚠ 食器洗浄機・食器乾燥機を使用しないでください。

洗い方	ボトル本体		キャップ	パッキン
	内側	外側		
流水洗い	○	×	○	○
酸素系漂白剤 (つけ置き洗い)	○ キャップは閉じない ようにしてください。	×	○ 必ず本体から取り外し た状態で洗浄してくだ さい。	○ 必ずキャップから取り 外した状態で洗浄し てください。
塩素系漂白剤	×	×	×	×
洗浄時の お手入れ方法	やわらかいスポンジ で洗い流水でよく すすいだ後に、十 分に乾燥させます。	薄めた食器用洗 剤をやわらかい布 に含ませてよく絞 り、汚れを拭き取 ります。	パッキンを外してキャ ップ本体をやわらかい スポンジで丁寧に洗 い、十分に乾燥させ ます。汚れがひどい 時はつけ置き洗いま す。	キャップから外してや わらかいスポンジで 丁寧に洗い、十分に 乾燥させてからキャ ップの下記の正しい 位置に取り付けま す。汚れがひどい 時はつけ置き洗いま す。

パッキンの取り付け方

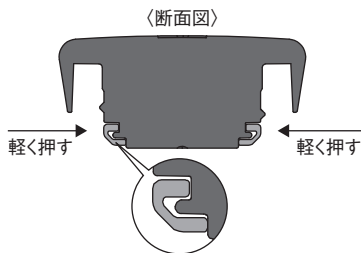

〈下からみた図〉



ゆがみのない、同心円になるように取り付けます。



ゆがみがあると飲み物が漏れる原因になります。

消耗品のお買い求めについて

キャップ・パッキンは消耗品です。(熱や蒸気にふれるためご使用にともない傷んでくる場合があります。)1年を目安にご確認ください。汚れが目立ってきたり、ゆるくなってきたら交換してください。交換部品についてはスノーピークユーザーサービスにお問い合わせもしくは、弊社オンラインストアよりお買い求めください。



交換用パッキン

XTW-350-03 パッキン2pcsセット

※TW-351 / TW-501 / TW-501Rで共通で使用できます。

こんな時は…

トラブル	原因	対処方法
飲み物が漏れる	キャップが確実に閉まっていない	キャップはボトル本体に垂直に立てた状態で時計方向に確実に閉めてください。
	飲み物の入れすぎ	飲み物は決まった量までにしてください。(詳細はP4)
	パッキンの取り付けが正しくない	ゆがみなく正しく取り付けください。(詳細はP6)
	パッキン破損、消耗	弊社ユーザーサービスにお問い合わせもしくは、弊社オンラインストアよりお買い求めください。(詳細はP6)
キャップを閉じた直後にキャップが開かない	飲み物から発生した蒸気で内圧が上がる	数時間待って飲み物の温度が下がってから開栓してください。
保温・保冷力が低い	飲み物の量が極端に少ない	飲み物の量を増やしてご使用ください。 ※決まった量までにしてください。
	飲み物の温度が十分に熱く(冷たく)ない	十分に熱した(冷した)飲み物を入れてください。ボトル本体内側を予熱(予冷)しておくことより効果的です。
ボトル本体内側が変色した	ボトル内部の洗浄が不十分	柄のついたスポンジで内部を洗い、酸素系漂白剤をボトルの中に注ぎ時間をおき、きれいに洗い流してください。このとき酸素系漂白剤がボトル外側に触れないようにしてください。
	食器洗浄機を使用した	食器洗浄機・食器乾燥機は使用せず、決まった洗い方で洗浄してください。(詳細はP5)
異臭がする(カビ臭い)	ボトル内側・キャップの洗浄が不十分	柄のついたスポンジで内部を洗い、酸素系漂白剤をボトルの中に注ぎ時間をおき、きれいに洗い流してください。キャップはパッキンを外し、柔らかいスポンジで洗浄した後に酸素系漂白剤でつけ置き洗いしてください。
緑茶が赤茶色に変色した	長時間保存による成分の変質	緑茶は短時間の保存でも変質することがあります。飲用にあって害はありませんが、早めに飲み切ることをお勧めいたします。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

1. 素材の経年劣化による損害など商品の寿命 / 2. 改造および粗雑な取扱いによる故障 / 3. 取扱説明書で禁止されている取扱いによる故障 / 4. 不測の事故による商品の故障 / 5. その他製造上の欠陥以外による製品の故障 / 6. ゴミやさびによる故障 / 7. 分解したことによる不具合の発生または破損 / 8. 落下やその他の衝撃による部品の変形や破損による不具合 / 9. 摩擦によるパーツの変化及びそれによる故障 / 10. 他社製品との組み合わせによる故障

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。
 1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。
 2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様の負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピーク  **0120-010-660** (9:00~17:00)
ユーザーサービス Email: userservice@snowpeak.co.jp

株式会社スノーピーク

〒955-0147 新潟県三条市中野原456

Tel. 0256-46-5858 / Fax. 0256-46-5860


www.snowpeak.co.jp

MADE IN JAPAN

TW-351 / TW-501 / TW-501R Stainless Vacuum Bottle Type 350 / 500

Thank you for purchasing a Snow Peak product. This product is a stainless thermos bottle. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Set Contents (Name of Part)

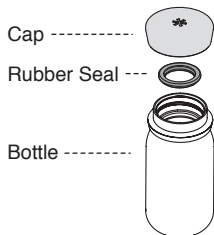

- * The rubber seal is a consumable part. Replace it when it gets dirty or loose. Replacement parts are available at Snow Peak's online store.
- * See page 6 for instructions on how to attach the rubber seal.

Replacement rubber seal

XTW-350-03 Set of 2 rubber seals

- * Replacement rubber seals are the same for TW-351, TW-501, and TW-501R.

Specifications (Quality Indication)

Item Name		Stainless Steel Portable Vacuum Bottle		
Material		Bottle/ Stainless Steel, Lid/ Acrylic Resin Coating, Polypropylene, Rubber Seal/ Silicone Rubber		
Item No.		TW-351	TW-501	TW-501R
Size		φ74×155(h)mm / 2.9"×6.1"(h)	φ74×200(h)mm / 2.9"×7.9"(h)	
Weight	Bottle	166g / 5.9 oz	210g / 7.4 oz	180g / 6.4 oz
	Lid	37g / 1.3 oz		
Capacity		350ml / 11.8 fl oz	500ml / 16.9 fl oz	
Heat Retention Effect		68°C / 154°F or higher (6 hours)	74°C / 165°F or higher (6 hours)	
Cold Retention Effect		8°C / 46°F or lower (6 hours)		

※Heat retention effect refers to the temperature of hot water that fills this product up to the level indicated in the instruction manual, after leaving the product in upright position for 6 hours in room temperature (20°C / 68°F ±2°C / 35.6°F), starting at a water temperature of 95°C / 203°F ±1°C / 33.8°F.

※Cold retention effect refers to the temperature of cold water that fills this product up to the level indicated in the instruction manual, after leaving the product in upright position for 6 hours in room temperature (20°C / 68°F ±2°C / 35.6°F), starting at a water temperature of 4°C / 39.2°F ±1°C / 33.8°F.

Safety Precautions


Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

- Keep out of reach of infants and children. Use due caution to prevent playing with this product. (It may result in burns or other injuries.)
- Do not put the bottle or cap over open fire or otherwise heat them such as by putting them in heated water. It may cause explosion or melting. (It may result in burns or other injuries.)

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not use this product for any purpose other than keeping drinks warm or cold.
- When using this product with a warm drink, do not open the cap while tilting the bottle or open and close the cap near your face. (Drinks may shoot out or spill, resulting in burns or other injuries.)
- Do not put this product near any place that may become hot from a stove, open fire, or other heat source. (It may cause burns, deformation, or discoloration.)
- Do not move or abruptly tilt the bottle immediately after pouring in a warm drink and closing the cap. By nature of design, drinks may shoot out when the bottle receives an impact, which may result in serious accidents that involve burns or other injuries.
- Do not leave drinks inside the bottle for a prolonged period of time. (When drinks go bad, they can generate gas, which increases the pressure inside the bottle. This can prevent the cap from opening or cause drinks to shoot out or parts to break, which may result in injuries or dirtying the surroundings.)
- When using this product with a warm drink, enjoy the drink slowly while using caution not to tilt the bottle too abruptly.
- Make sure that the rubber seal is correctly attached to the cap. Also, make sure that the cap is firmly closed. (A problem with the use of the cap may cause drinks to leak, resulting in burns or dirtying things.)
- Only fill the bottle up to the level indicated in the illustration. (Overfilling the bottle can cause the drink to overflow when capping, which may result in burns or dirtying the surroundings.)
- Do not use this product in a moving vehicle. (There is a risk of burns or dirtying inside the vehicle and/or clothes. In the case of a driver, the distraction from driving can cause a very dangerous situation.)
- Do not put any of the following items. (It increases the pressure inside the bottle, which can prevent the cap from opening or cause drinks to shoot out or parts to break, resulting in injuries or dirtying the surroundings.)
- Dry ice and carbonated drinks
- Drinks that go bad easily, such as milk, dairy beverage, and fruit juice
- Do not heat this product in a microwave. (It

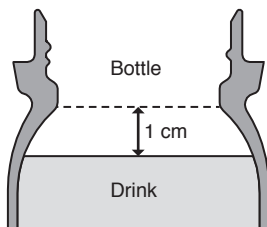


may cause sparks and result in injuries and/or malfunction.) ●Do not boil the bottle or cap, or use a dish washer or dish dryer to clean this product. (The heat can distort the bottle and/or the cap, which can cause drinks to leak, resulting in burns or dirtying the surroundings.) ●Do not put the spout of a kettle or any other pouring container on the opening. (It may cause the bottle to tip over, which can result in burns or other injuries, or scratches and/or distortion.)

** CAUTION / Misuse could result in injury to the user and/or damage to property.**

●Do not leave this product inside a bag or other carrying item. (It may result in rusting or unpleasant odor depending on the surrounding environmental conditions.) ●Do not put this product inside a bag or other carrying item while the outside is wet. (It may result in rusting, unpleasant odor, or staining.) ●When putting this product inside a bag or other carrying item, place it upright in case it leaks. (Placing the product sideways may cause leakage.) ●Do not put anything that contains salt, such as soups. (It may cause spoiling, alteration, or rusting.) ●Keep this product protected from hard impacts, such as tipping over, dropping, or hitting. (It may cause damage, deterioration in thermal effect, rusting, peeling of coating, and/or leakage.) ●Do not remove the protective sheet affixed to the exterior bottom of the bottle. (It may deteriorate thermal effect.) ●Do not attempt to disassemble or repair this product. (It may result in malfunction or accidents.) ●When putting in large chunks of ice, break them into smaller pieces first rather than trying to force them in. ●Do not put tea leaves or fruit pulp. (It may cause leakage.) ●Clean this product immediately after using it to carry sports drinks. (Even when you cannot thoroughly wash the product due to being outdoors, rinse the inside well with water immediately after use. Otherwise, mold growth, rusting, and/or holes may occur.) ●Do not put this product in a freezer. (Liquid inside may leak, or the product may get damaged.) ●Do not use chlorine bleach. (It may cause rusting, peeling of coating, and/or holes.) ●Do not place this product upside-down.

How to Use


Wash the bottle well before use.

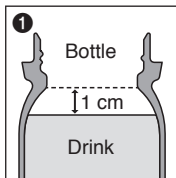

1 Put drink in the bottle.


The amount of drink should not exceed the level indicated in Figure 1. Overfilling the bottle can cause the drink to overflow when capping.

To improve heat retention effect, first pour in hot water up to the level in the container as shown in Figure 1 and wait for about 30 seconds before pouring out the water, and then pour in your drink. To improve cold retention effect, first put the bottle in a refrigerator for about 30 minutes and then pour in your drink.

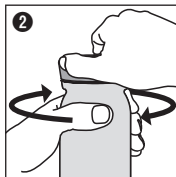

2 Close the cap.


Put the cap on the bottle while keeping it upright and turn the cap clockwise to close it completely.

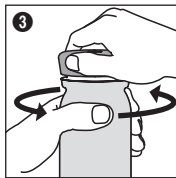

3 Open the cap.

While keeping the bottle upright, hold the upper part of the bottle and turn the cap counter-clockwise to remove it from the bottle.


Do not tilt or shake the bottle when removing the cap. It may cause the drink to spill.

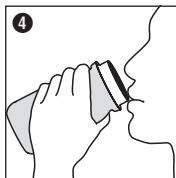

4 Enjoy your drink.

When using this product with a warm drink, enjoy the drink slowly while using caution not to tilt the bottle too abruptly.

Watch for hot steam that may rise from the bottle when the cap is removed.

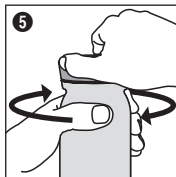

5 Close the cap.

While keeping the bottle upright, turn the cap clockwise to close it completely.


Maintenance

- Be sure to clean this product on the same day after use.
- Use mild dish-washing detergent diluted with lukewarm water.
- Use soft sponge and cloth.
- Always remove the rubber seal from the cap when washing it.
- Clean and dry well before storing this product in a well-ventilated place with the cap removed.

 Do not clean this product using a dish washer or dish dryer.

Cleaning method	Bottle		Cap	Rubber Seal
	Inside	Outside		
Rinsing under running water	○	✕	○	○
Oxygen bleach (Soaking)	○ Do not close the cap.	✕ Avoid contact with detergent.	○ Remove it from the bottle when cleaning.	○ Remove the rubber seal from the cap when cleaning.
Chlorine bleach	✕	✕	✕	✕
Cleaning instructions	Scrub with a soft sponge and rinse well under running water. Dry well.	Wipe off any dirt with a soft cloth soaked in diluted dish-washing detergent and well-wrung.	Remove the rubber seal and carefully wash the cap with a soft sponge and dry well. Soak in bleach when still dirty.	Remove it from the cap and carefully wash it with a soft sponge and dry well before re-attaching it to the correct position on the cap as shown below. Soak in bleach when still dirty.

Attaching the Rubber Seal

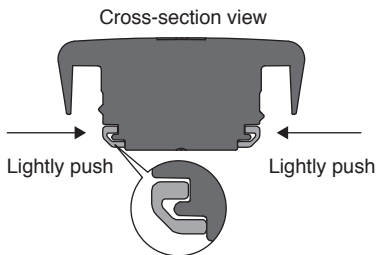

<View from the bottom>



Attach the rubber seal concentrically so that it is seated flat and evenly.



Uneven seating may cause drinks to leak.

Purchase of Consumables

The cap and rubber seal are consumable parts. (They can be damaged with use due to being exposed to heat and steam.) Check them once a year for damage. Replace them whenever they get dirty or loose. Contact the following Snow Peak user service for replacement parts or purchase them at Snow Peak's online store.



Replacement rubber seal

XTW-350-03 Set of 2 rubber seals

* Replacement rubber seals are the same for TW-351, TW-501, and TW-501R.

Troubleshooting

Problem	Cause	Action
Drink leaks	Cap is not completely closed	While keeping the bottle upright, turn the cap clockwise to close it completely.
	Too much liquid	Only fill the bottle up to the specified level. (See p.4)
	Rubber Seal is not attached correctly	Install correctly without distortion.(See p.6)
	Rubber Seal is damaged or worn	Please contact our customer service or purchase it from our online store.(See p.6)
Cap does not open after closing	Pressure inside the bottle has risen due to steam from the drink	Open the cap after waiting a few hours for the drink to cool down a little.
Weak thermal effect	Amount of drink is very little	Use this product with an increased amount of drink. * Only fill the bottle up to the specified level.
	Drink is not warm/cold enough	Put in sufficiently warm/cold drink. Pre-heat or pre-cool the inside of the bottle for better thermal effect.
Discoloration inside the bottle	Bottle is not cleaned properly inside	Scrub inside the bottle using a sponge with a handle. Pour in oxygen bleach inside the bottle and soak a while before rinsing thoroughly. When doing so, prevent the oxygen bleach from coming into contact with the outside of the bottle.
	Used a dish washer	Do not clean this product using a dish washer or dish dryer. Use the specified methods for cleaning. (See p.5)
Unpleasant odor (moldy smell)	Cap or inside of the bottle is not cleaned properly	Scrub inside the bottle using a sponge with a handle. Pour in oxygen bleach inside the bottle and soak a while before rinsing thoroughly. Remove the rubber seal from the cap. After scrubbing with a soft sponge, soak the cap in oxygen bleach.
Green tea turns reddish brown	Drink deteriorated due to being kept in the bottle too long	Green tea may deteriorate even when only kept in the bottle for a short period of time. While it can be safely drunk, early consumption is recommended.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

● If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. ● When you request repairs, please make sure that the product is dry and clean. ● Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. ● Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (888) 424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN JAPAN