


TW-471

サーモタンブラー用スライドリッド

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はTW-360サーモタンブラー360、TW-470サーモタンブラー470専用のフタです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

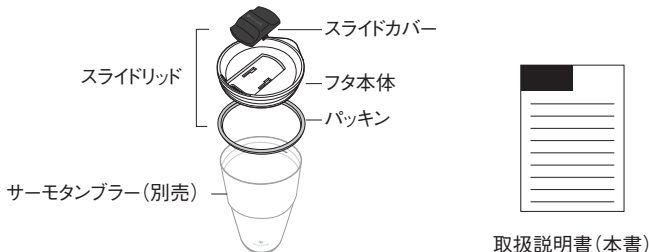

スペック

- 材質:フタ本体／飽和ポリエステル樹脂(トライタン)、スライドカバー／ポリプロピレン、パッキン／シリコンゴム
※トライタン(Tritan™)は、Eastman Chemical Companyの商標です。
- サイズ:93×86×21 (h)mm
- 重量:41g
- 耐熱温度:100℃
- 耐冷温度:-20℃

交換用部品の品番 (名称)

- | |
|-------------------------------|
| XTW-471-01 (TW-471 パッキン 2pcs) |
| XTW-471-02 (TW-471 スライドカバー) |

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

●ご使用前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。●乳幼児の手の届くところには置かないでください。また、イタズラには十分注意してください。ヤケドやケガの原因になります。●熱い飲みものを注ぎ、リッドを閉めた直後は、ボトルを移動させる、勢いよく傾けるなどの衝撃を与えないでください。本製品の構造上、衝撃により飲みものが勢いよく飛び出し、ヤケドやケガなどの重大な事故に至るおそれがあります。●40度以上の熱い飲みものをに入れてリッドをすぐに閉めると、飲みものから発生した蒸気により内圧が上がり、開栓しにくくなることがあります。(無理に開栓すると熱い蒸気や飲みものが噴出したり、キャップが飛んでヤケドやケガの原因になります。)

⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。


●指定のタンブラー以外での使用や、フタ以外の用途で使わないでください。破損や事故の原因となります。●本製品は完全密閉ではありません。中身がこぼれることがあります。●飲みものを入れた状態でカバンなどに入れて持ち運ばないでください。液漏れにより周囲の物品を汚損する原因となります。●次のものは絶対に入れないでください。・ドライアイス、炭酸飲料(内圧が上がり、本製品の破損や飲みものの吹き出しの原因になります)・牛乳、乳飲料、果汁など腐敗しやすい飲みもの(腐敗によるガスで内圧が上がるおそれがあります)・お茶の葉、果肉(詰まりや漏れの原因になります)・柑橘類のジュース(柑橘類の皮に含まれるテルペンによりリッド本体が変質する場合があります)●乗り物の中では使用しないでください。振動により中身が飛び出す原因となります。●本製品はパッキンの圧力で保持されています。ゆるみやはずれが生じることがあります。使用前に確実に装着されていることを確認してください。●パッキンは正しく取り付けてください。取り付け不良は液漏れの原因となります。●パッキンを紛失した場合は使用しないでください。●熱い飲みものをを入れる際は、ヤケドに十分注意してください。●熱が直接当たる場所や火のそばに置かないでください。変形や溶解のおそれがあります。●電子レンジ、冷凍庫、食器洗浄機、食器乾燥機は使用しないでください。変形の原因となります。●硬いものや尖ったものに接触すると傷の原因となります。取扱いにはご注意ください。●初めてお使いになる際は、中性洗剤で丁寧に洗浄し、よくすすいでください。●使用後は、きれいに洗浄し、十分に乾燥させてください。●色やにおいの付きやすい飲料により、色移りやにおいが生じることがあります。あらかじめご了承ください。●タンブラーの内径には個体差があります。取り付け時の操作力にも差が生じます。●使用状況により、本製品に結露が生じることがあります。●手で持ち運ぶ際はリッドを持たずに、タンブラーをしっかり持って運んでください。

使用方法

本製品は完全密閉ではありませんので、カバンの中に入れて持ち歩くなどはいしないでください。

①飲みものを入れる

- ※飲みものは入れすぎないでください。フタを閉めたときに飲みものがあふれ出るおそれがあります。

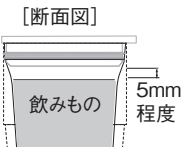

②フタを閉める

- タンブラーを立てた状態で本製品を入れ込んでください。
- ※パッキンは必ず正しく取り付けてください。

③飲みものを飲む

- スライドカバーを図の「開」の矢印の方向にスライドし、飲み口から飲みものを飲みます。


④飲み終わったら

- スライドカバーを図の「閉」の矢印の方向にスライドして、飲み口を閉じます。



●スライドカバーの脱着


- ①スライドカバーを開く
飲み口が開くようにスライドカバーをスライドさせます。
- ②スライドカバーのつめをはずす
スライドリッドを裏返し、中央にある2本のつめを指でしっかり中央側に寄せながら押し込みます。
※スライドカバーを取りはずす際は力を入れすぎると、破損するおそれがありますのでご注意ください。

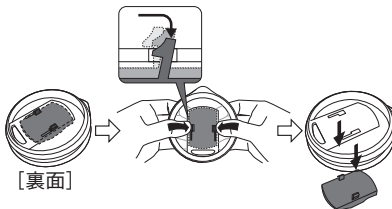

※取り付けは、取りはずしと逆の手順でおこなってください。
※取り付ける際は、ロゴマークが飲み口側から見て読める向きにしてください。

●パッキンの脱着

- ①パッキンをはずす
フタの溝からパッキンをゆっくり引き上げてはずします。
- ②パッキンを取り付ける
パッキンをフタの溝に沿って、全周を均等に押し込んで取り付けます。
※パッキンは正しい位置に取り付けしないと、漏れの原因になります。

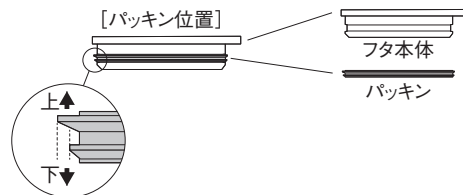

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。●使用後は、パッキンをはずし、フタとパッキンをやさらかいスポンジに中性洗剤をつけていいに洗い、十分に乾燥させてからパッキンを正しい位置に取り付けてください。●水気や汚れが付着したまま放置すると、カビの原因になります。●次のものは使用しないでください。金属製のたわし、磨き粉、クレンザー、シンナー、ベンジン。●汚れのひどいときは「家庭用漂白剤」を薄めてご使用ください。その際「家庭用漂白剤」の取扱注意事項を必ずお守りください。使用後は十分に水洗いしてください。●プラスチック製の部品は、「家庭用漂白剤」に長時間浸け置きますとプラスチックの耐久性が低下しますので、短時間の使用としてください。●煮沸はしないでください。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**
販売店様または弊社ユーザーサービスまで
お問い合わせください。
Email: userservice@snowpeak.co.jp



株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

TW-471 Slide Lid for Thermo Tumbler

Thank you for purchasing a Snow Peak product. This product is a lid designed exclusively for the TW-360 Thermo Tumbler 360 and TW-470 Thermo Tumbler 470 for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

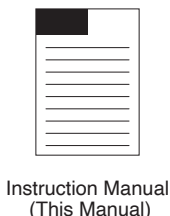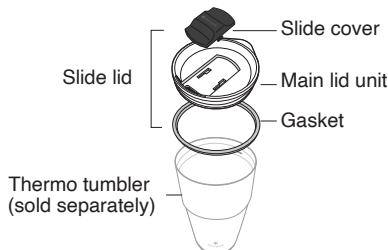

Specifications

- Materials: Main lid unit / Saturated polyester resin (Tritan); Slide cover / Polypropylene; Gasket / Silicone rubber
* Tritan™ is a trademark of Eastman Chemical Company.
- Size: 93×86×21(h)mm / 3.7"×3.4"×0.8"(h)
- Weight: 41 g / 1.4 oz
- Heat resistance: 100°C / 212°F
- Cold resistance: -20°C / -4°F

Replacement Part No. (Name)

XTW-471-01 (TW-471 gasket 2pcs)
XTW-471-02 (TW-471 slide cover)

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ WARNING / Misuse could result in serious injury or death.

●Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. ●Keep out of reach of infants and children. Ensure that children do not play with this product. This may cause injury or burns. ●Do not move or abruptly tilt the tumbler immediately after pouring in a hot drink and closing the lid. Due to the design of this product, drinks may splash out forcefully upon impact, which may result in serious accidents involving burns or other injuries. ●If you fill the tumbler with a hot drink of 40°C or higher and close the lid immediately, steam from the drink can increase the internal pressure, making the lid difficult to open. (Forcing the lid open may cause hot steam or liquid to erupt, or the lid to fly off, resulting in burns or injury.)

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

●Do not use this product with any tumblers other than those specified, and do not use it for any purpose other than as a lid. Failure to do so may cause damage or accidents. ●This product is not completely sealed. Contents may spill. ●Do not carry this product in a bag when filled with a drink. Leakage may stain surrounding items. ●Never put any of the following items inside the tumbler: - Dry ice or carbonated drinks (Internal pressure will rise, which may damage the product or cause the beverage to spray out.) - Perishable beverages such as milk, dairy drinks, and fruit juice (Gas produced from spoilage may increase internal pressure.) - Tea leaves or fruit pulp (May cause clogging or leakage.) - Citrus juice (Terpenes found in citrus peels may cause the lid body to deteriorate.) ●Do not use in vehicles. Vibration may cause contents to spill. ●This product is held in place by gasket pressure. It may loosen or come off. Check that it is securely attached before use. ●Ensure the gasket is properly installed. Improper installation may cause leakage. ●Do not use the product if the gasket is missing. ●Use caution when drinking hot beverages to avoid burns. ●Do not place near heat sources or open flame. High temperatures may cause deformation or melting. ●Do not use in a microwave, freezer, dishwasher, or dish dryer. This may cause deformation. ●Contact with hard or sharp objects may cause scratches. Handle with care. ●Before first use, wash with a neutral detergent. Rinse thoroughly. ●After use, clean and dry thoroughly. ●Color or odor may transfer from certain beverages. ●Tumbler inner diameters may vary. Attachment force may also vary. ●Condensation may form depending on conditions of use. ●When carrying by hand, hold the tumbler securely instead of holding it by the lid.


Instructions for Use

Since this product is not completely leak-proof, do not carry it inside a bag.

① Pour your drink

*Do not overfill the tumbler. Doing so may cause the beverage to overflow when the lid is closed.

[Cross-section view]




② Close the lid

Insert this product into the tumbler while keeping the tumbler upright.

*Always ensure that the gasket is attached correctly.

③ Drink

Slide the slide cover in the direction of the "Open" arrow shown in the diagram, and drink from the mouthpiece.

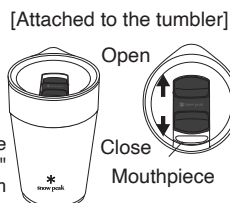

④ After drinking

Slide the slide cover in the direction of the "Close" arrow shown in the diagram to close the mouthpiece.

●Attaching and detaching the slide cover

① Open the slide cover


Slide the slide cover until the mouthpiece is open.



② Release the tabs on the slide cover

Turn the slide lid over, firmly pinch the two tabs in the center inward with your fingers, and then push them through.

*Do not use excessive force when detaching the slide cover, as this may cause damage.

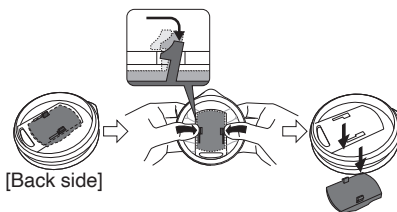

*To reattach, follow the detaching steps in reverse.

*When reattaching, ensure that the logo mark is oriented so that it can be read when looking from the mouthpiece side.

●Attaching and detaching the gasket


① Detach the gasket

Gently pull the gasket up and out of the groove on the lid.

② Attach the gasket

Press the gasket evenly all the way around along the groove of the lid.

*Ensure that the gasket is attached in the correct position, as failure to do so may cause leakage.

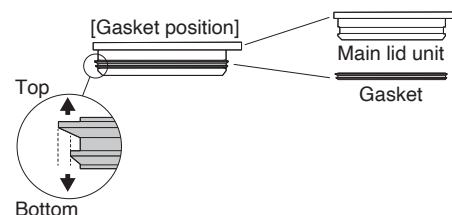

Maintenance

●Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. ●After use, detach the gasket and wash both the lid and gasket carefully using a soft sponge with mild dish soap. Allow them to dry thoroughly before reattaching the gasket in the correct position. ●Do not leave the product with moisture or dirt on it, as this may cause mold. ●Do not use any of the following items: Metal scouring pads, polishing powder, cleansers, paint thinner, or benzene. ●For stubborn stains, use diluted household bleach. Always follow the instructions and precautions for the household bleach. Rinse thoroughly with water after use. ●Do not soak plastic parts in household bleach for extended periods, as this will reduce the durability of the plastic. Only use it for a short time. ●Do not boil.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1(888)424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanojima, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA