


UG-185-GY/BR
タクバコ グレー/ブラウン

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、テーブル機能付きピクニック用バッグです。トバチ2、3を2つまで収納できます。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

各部の名称

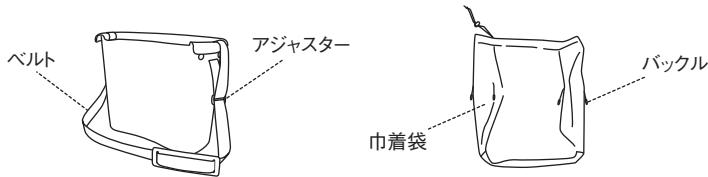

セット内容

- 本体×1
- 巾着袋×1

スペック

- 材質: 本体・肩パッド/フェルト(ポリエステル100%)、巾着袋/ポリエステル、アジャスター/POM、ベルト/ナイロン
- サイズ: 400×180×310(h)mm
- 重量: 630g

ご使用の前に よく読んで予測される事故を回避し安全にご使用ください。

△ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- 本製品をテーブルとして使用する際に、燃焼器やランタンは絶対に使用しないでください。転倒し、火災が起きる恐れがあります。

△ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。


- ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 本製品をテーブルとして使用する際に、鍋敷きなどを併用する場合であっても熱した鍋を置かないでください。製品破損や鍋の転倒の恐れがあります。
- 本製品の上に座ったり、手をついて体重をかけたりしないでください。製品破損やケガの恐れがあります。

△ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

- 本製品は、テーブル機能付きのピクニック用バッグです。それ以外の用途で使用しないでください。
- 摩耗、水漏れ、雨水によって色落ちや色移りすることがあります。
- 銳利な形状の物を入れないでください。破損、破れの恐れがあります。
- 高温物などに近づけたり、高温状態の車内や湿度が高い場所などに放置したりしないでください。
- お子様との使用時には十分周囲に注意し使用してください。保管する場合お子様の手の届かないところに保管してください。


使用方法

【収納して持ち運ぶ場合】

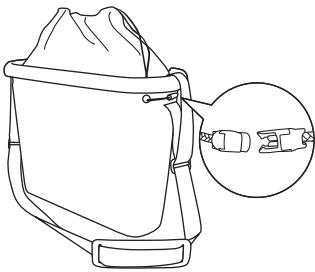

- ① 荷物を巾着袋に入れた後必ず巾着袋の口を締めてからご使用ください。
- ② 巾着袋についている紐を本体横にある穴に通してバックルで留めてご使用ください。

【テーブルとして使用する場合】

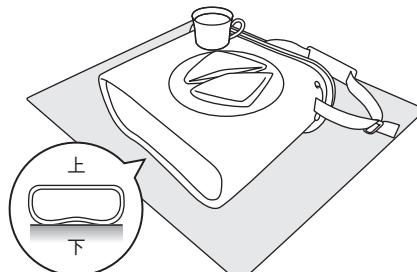

- テーブルとして使用する際は平な場所でレジャー・シートなどの上でご使用ください。
- またベルトが本体の下に入らないようにしてください。
- テーブルとして使用する場合、本体側面の平な面を上にしてください。
- 本製品の仕様上、テーブルは水平にはなりません。あらかじめご了承ください。
- テーブル使用時、バッグ使用時共に積載荷重の制限を守りご使用ください。
- テーブル使用時: 荷重4kgまで
- バッグ使用時: 荷重8kgまで

△ 警告 本製品の上に、鍋敷きなどを併用する場合であっても熱した鍋や素手で持つことができない高温状態のものを置かないでください。製品破損や鍋などの転倒の恐れがあります。

メンテナンスについて

- 汚れが付いた場合には、軽く濡らした布または乾いた布で汚れを拭いてください。(洗剤や漂白剤等は色落ちの原因になりますので使用しないでください。) ※ 酷い汚れの場合は、流水で直接流し、すぐに乾いた布で叩くようにして拭き取り、しっかりと乾燥させることで、汚れを落とすことも可能です。しかし、流水で洗う場合は、強い摩擦などにより繊維の脱落が発生し劣化促進につながります。あらかじめご了承ください。
- 当製品は撥水加工を施しておりますが、防水仕様ではございませんので濡れた場合には早めに拭き取ってください。
- 長期間ご使用しなかった製品を再度お使いになる際は、弊社ユーザーサービスまで点検を依頼してください。
- ご使用後はよく陰干しをし、直射日光を避け、風通しの良い場所で保管してください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

1. 材料の経年劣化による損害など商品の寿命/2. 改造および粗雑な取扱いによる故障/3. 取扱説明書で禁止されている取扱いによる故障/4. 不測の事故による商品の故障/5. その他製造上の欠陥以外による製品の故障/6. ゴミやさびによる故障/7. 分解したことによる不具合の発生または破損/8. 落下やその他の衝撃による部品の変形や破損による不具合/9. 摩擦によるパーツの変化及びそれによる故障/10. 他社製品との組み合わせによる故障

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。

1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。
2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
○○ 0120-010-660
(9:00~17:00)

Email: userservice@snowpeak.co.jp

株式会社スノーピーク


〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 Fax. 0256-46-5860
www.snowpeak.co.jp

UG-185-GY/BR

Takubako Gray/Brown

Thank you for purchasing this Snow Peak Product. This product is a picnic bag with a table function. You can store up to two Tobachi 2 or Tobachi 3 inside. In order to ensure your safety when using this product, please read the below instruction manual carefully before use. Please be sure to keep this document for future reference. If you find anything in the instruction manual that is difficult to understand, or if you find any product defects, stop using it immediately and contact the dealers where you purchased the product or Snow Peak Customer Service.

Name of Each Component

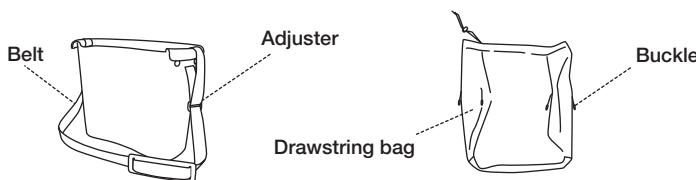

Set Contents

- Bodyx1
- Drawstring bagx1

Specifications

- Material: Body and shoulder pad/felt (100% polyester), Drawstring bag/polyester, Adjuster/POM, Belt/nylon
- Body size: 400x180x310 (h) mm (15.7" x 7.1" x 12.2" (h))
- Weight: 630 g (22.2 oz)

Please read the following thoroughly before use to ensure safety and to prevent accidents.

DANGER: This indicates product handling methods that will most likely result in a serious accident or death.

- Never use a burner or lantern when using this product as a table. Otherwise a fire may be caused if the product tips over.

WARNING: This indicates that inappropriate use may result in death or serious injury.


- Before using the product, check that there are no abnormalities in each part. If you find any abnormalities, stop using the product immediately and contact the retailer where you purchased the product or Snow Peak Customer Service for inspection or repair services.
- When using this product as a table, do not place a heated pot on it even if you are using a pot stand. Otherwise, it may cause damage to the product or cause the pot to tip over.
- Do not sit on this product or apply weight to it with your hands. Otherwise, it may cause damage to the product or you may be injured.

CAUTION: Misuse may result in personal injury or property damage.

- This product is a picnic bag with a table function. Do not use it for any other purposes.
- Color fading or color transfer may occur due to wear, water leakage, or rainwater.
- Do not place objects with sharp edges inside this product. Otherwise, damage or tearing may occur.
- Do not bring this product close to hot objects or leave it in a hot car or in a humid place.
- When using this product with children, pay close attention to the surroundings. When storing this product, keep it out of reach of children.


How to Use

[When storing items and carrying]

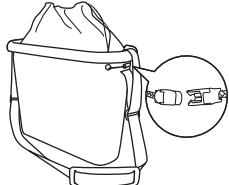

- ① After placing items in the drawstring bag, be sure to pull the drawstring shut before using the bag.
- ② Pass the string attached to the drawstring bag through the hole on the side of the body and fasten it with a buckle.

[When using as a table]

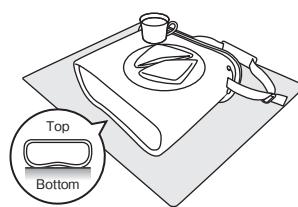

- When using this product as a table, please use it on a flat surface with a leisure sheet, etc.
- In addition, make sure that the belt is not placed under the product.
- When using this product as a table, make sure that the flat side of the product is facing up.

* Please note that when this product is used as a table, it will not sit completely horizontally due to its specifications.

- Please observe the load limit when using the product as a table and when using it as a bag.
- When using as a table: Up to 4 kg load
- When using as a bag: Up to 8 kg load

WARNING: Do not place a hot pot, or anything too hot to hold with bare hands, on top of this product. Even if you use it with a potholder, the heat may damage to the product or cause it to tip over.

Maintenance

- If this product becomes dirty, wipe it using a slightly damp or dry cloth. (Do not use detergents or bleaches as they may cause discoloration.)* If this product gets dirty, please clean it by flushing with running water, dabbing with a dry cloth to wipe off stains, then dry thoroughly. Please note that the fibers may come off during washing due to strong friction, which causes accelerated deterioration.
- This product is water-repellent, however, it is not waterproof. So if it becomes wet, wipe it off as soon as possible.
- If you use the product after it has not been used for a long period of time, contact Snow Peak Customer Service for an inspection.
- After use, dry this product well in the shade, avoid direct sunlight, and store it in a well-ventilated location.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product, Snow Peak, or the contact information provided for each product. If apparent defects in the product's manufacturing are found, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not be able to repair the product or any damage that occurred due to any of the following:

1. Material deterioration caused by age / 2. Damage caused by modifications or rough handling / 3. Damage caused by inappropriate use not mentioned in the instruction manual / 4. Damage caused by unexpected accidents / 5. Damage not caused by defects in the manufacturing process / 6. Damage caused by dust or rust / 7. Damage and defects caused when dismantling the product / 8. Damage and defects caused by dropping or subjecting the product to other shocks / 9. Deterioration or failure of parts due to friction / 10. Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag to clearly indicate the part that requires a repair. In the memo, include details of when and how the damage occurred.
- Shipping cost and repair fee for the repair as follows.

1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak.
2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak, Inc.

456, Nakanobara, Sanjo-shi Niigata 955-0147 Japan
 Tel: +81 256-46-5858 Fax: +81 256-46-5860
www.snowpeak.co.jp

Snow Peak USA, Inc.

404 NW 23rd Ave., Portland, OR 97210, USA
 Tel: +1 (503) 461-0781 IG: @snowpeakusa
www.snowpeak.com