



取扱説明書：Ver 3.00

ES-101
セレス LEDランタン



この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、テントやタープの下で使用するために開発された照明器具です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

セレス本体

リング

上部ライト

充電インジケーター

上部調光ボタン

電源ボタン

下部調光ボタン

下部ライト

TTA規格ネジ

アダプタパーツ

ゴムパーツ

アダプタパーツ裏面

1/4インチ規格ネジ穴

スライダーパーツ

カラビナフック

下部フック

シリコンコネクタカバー

収納ケース

取扱説明書 (本書)

スペック

●セット内容:本体、スライダーパーツ、収納ケース

●材質:本体／ABS樹脂、ポリカーボネート樹脂、シリコンゴム、アルミニウム合金、スチール、ステンレス

スライダーパーツ／亜鉛合金、PC-ABS樹脂、ナイロン、収納ケース／EVA樹脂

●サイズ:本体／φ43×188(h)mm、スライダーパーツ／37×18×90(h)mm、収納ケース／202×80×67(h)mm

●仕様電源:リチウムイオン充電電池

●連続点灯時間(満充電時):8時間(上部ライト+下部ライト | 調光機能4段階目同時使用時)、20時間(上部ライト+下部ライト | 調光機能1段階目同時使用時)※周囲の温度、充電電池の使用期間等の使用状況によって変動する可能性があります。

●充電時間:8時間(USB-C) ※充電器は5V1A以下のものをご利用ください。

●照射角度:上部ライト180度、下部ライト360度

●最大照度:上部ライト720lm(調光機能4段階目使用時)、下部ライト260lm(調光機能4段階目使用時) ※電圧低下にあわせて、明るさが低下します。

●調光:4段階調光

●防滴仕様:IPX4(全方向からの水しぶきに耐える)

●光源色:上部ライトWarm White 3000K、下部ライトWarm White 3000K

●使用温度条件:動作時／0℃～45℃ 充電時／0℃～45℃ 保管時／-20℃～60℃

●重量:450g

安全上の注意事項 ご使用前によく読んで予想される事故を回避し安全にご使用ください。

危険 明らかに生命に関わる重大な事故が予想される行為を示します。

●乳幼児の手の届く場所に置かないでください。また、いたずらには十分注意してください。部品の誤飲やケガの原因になります。

●USB-Cコネクタの端子部にUSB-Cケーブル以外の金属類を絶対に差し込まないでください。発熱や発火、感電の原因になります。

●濡れた手で接点部やUSB-Cコネクタ部を触らないでください。発熱や発火、感電の原因になります。

●分解や改造は絶対にしないでください。故障や感電の原因になります。改造製品のアフターサービスはお受けできません。

●子供が使用する場合は保護者となる大人の監視が必要です。

警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

●ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。

●本製品は防水ではありません。本体に大量の水がかかる所で使用したり、水に浸けたりしないでください。感電や故障の原因になります。

●本体を布などで覆ったまま使用しないでください。感電や発火の原因になります。

●充電電池から液漏れがある場合、直ちに使用を中止してください。感電や発火の原因になります。また液が皮膚や目に付着した場合は、水でよく洗い流した後、医師の診断を受けてください。

●使用温度範囲を超える条件では使用しないでください。電池の故障の原因になります。

●充電時は本体に水滴のかかる所に置かないでください感電や発火の原因になります。

●充電時は指定外の電圧/電流のものを絶対に使用しないでください。感電や発火の原因になります。

(5V1A以下の充電器をご利用ください) ●「使用方法」の項目をよく読み、正しくセッティングされている事を確認して使用してください。正しくセッティングされていない場合、ケガの原因になります。

●燃焼器などの熱源の近く、炎天下の自動車の車内など高温になる場所に放置しないでください。液もれ、発熱、破裂、発火の原因になります。

注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

●落下や衝撃を与えると本体にダメージが蓄積し、通常の使用においても予期せず故障が発生する場合があります。本体にショックを与えないようにしてください。

●光源部を直視しないでください。目を痛めることがあります。

●電源ケーブルをつないだまま吊り下げたり、持ち歩いたりしないでください。落下や故障の原因となります。

●付属のスライダーパーツは

ES-101セレス専用になります。他の用途での使用はしないでください。

●付属のスライダーパーツを操作する際はセレス本体をスライダー下部フックに取り付けてから伸縮操作してください。スライダーのスプリングは類似市販品より強く設定されておりセレス本体が吊り下げられていないと勢よく戻り、指を挟むなどのケガをするおそれがあります。

こんな時は…		
トラブル	原因	対処方法
点灯しない	電池残量がない	USB-CコネクタにUSB-Cをつないでください。その時に充電インジケーターが点滅することを確認してください。
点灯してもすぐ消える	電池残量が少ない	USB-CコネクタにUSB-Cをつないでください。その時に充電インジケーターが点滅することを確認してください。
充電がされない	電源の故障や不具合	USB-Cケーブルが正しく出力されているか確認してください。
	電源が不適當	USB-Cケーブルは5V1A以下に準拠したモノをご使用ください。USB-PDには対応していません。
上記を全て試したが症状が改善しない	故障の可能性があります	直ちに使用を中止し、弊社ユーザーサービス係までご連絡ください。

充電方法

●本体背面にあるUSB-Cコネクタに指定USB規格に準拠した電源を入力することで充電をすることができます。本体背面のコネクタカバーを開き、USB-Cジャックをコネクタに差し込みます。問題なく充電ができている場合、充電インジケーターが点滅します。

USB-Cコネクタ使用時は水滴のかからないところで使用し、使用時はコネクタカバーを閉めてください。

充電インジケーターの充電量目安

100～75%充電

75～55%充電

55～30%充電

30～5%充電

5～0% (オレンジ点灯)

●充電インジケーターで充電残量の確認ができます。

充電残量が5～0%の時、充電インジケーターの光はオレンジになります。

本体操作方法

電源ボタン

●点灯の仕方

消灯状態から電源ボタンを0.5秒以上長押しで上部ライトが点灯します(最低照度)

↓

電源ボタン1度押し(0.5秒以下)

上部ライトが消灯し、下部ライトが点灯します。

↓

電源ボタン1度押し(0.5秒以下)

上部ライトが点灯し、下部ライトも点灯します。

↓

電源ボタン1度押し(0.5秒以下)

繰り返し

●消灯の仕方

点灯状態から電源ボタンを3秒以上長押しで消灯します。

上部調光ボタン

下部調光ボタン

●照度の調整

【上部ライト】上部調光スイッチを押すことで照度を切り替えられます(4段階調光)

各照度/1段階目(80lm)、2段階目(280lm)、3段階目(560lm)、4段階目(720lm)

【下部ライト】下部調光スイッチを押すことで照度を切り替えられます(4段階調光)

各照度/1段階目(30lm)、2段階目(90lm)、3段階目(180lm)、4段階目(260lm)

※各段階の()内の数値は点灯開始時の照度(lm)です。連続点灯時には、電圧低下にあわせて、明るさが低下します。

TTA規格ネジ

TTA連結イメージ

●TTAへの取り付け方法:アダプターパーツを外すとTTAと適合するネジ(TTAネジ)があるので、TTAシリーズのネジ部に取り付けられます(TTAシリーズ以外を取り付けしないでください)。

1/4インチ規格ネジ穴

三脚

●三脚ネジへの取り付け方法:アダプターパーツ下面に三脚用1/4インチ規格ネジ穴があいているので取り付けが可能です。(取り付ける際は三脚ネジの規格が合っているか確認ください。また使用される三脚の取扱い説明書を確認していただき安全に配慮したうえでご使用ください。)

※アダプタパーツは上下逆では取り付けできません。無理に取り付けると故障の原因となります。

スライダーパーツ操作方法

7段階調節

●スライダーパーツ下部のフックを引き出すことでロープが伸びます。ロープは長さを7段階で調節が可能です。

●スライダーパーツを操作する際は必ずセレス本体をスライダー下部フックに確実に取り付けから行ってください。また伸縮操作時は必ずセレス本体から手を放さず伸縮操作をしてください。

●下へ伸ばして少し上に戻すとロックがかかります。任意の7カ所で調節してください。

※ロープを過度に引っ張りすぎないでください。ロープが切れるなど故障の原因になります。

●スライダーパーツ上部のカラビナフックはテント、シェルター内のリングに引っ掛けすることが可能です。

収納ケースの使い方

●セレス本体とスライダーパーツを収納する専用ケースです。

●収納ケースにセレス本体とスライダーパーツを入れたら、マジックテープで固定してください。

●仕切り板は位置の変更が可能です。

●ケーブルなどを一緒に入れて持ち運ぶ場合、本体がキズつくことがあります。

●収納ケースは防水・防滴仕様ではありません。

●安全のためケース収納時は本製品の電源を必ずオフにしてください。

メンテナンスについて

●長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。

●本製品の汚れは水を含ませた布を硬く絞り、ていねいに汚れを拭き取ってください。

●USB-C端子が汚れた時は乾いた綿棒や布で拭き取ってください。

●本体が濡れた時は乾いた柔らかい布で完全に拭き取ってから保管してください。

●ご使用後は付属の収納ケースに入れて保管してください。

●USB-Cコネクタ部や本体内部に水が入った場合はすぐに使用を中止して弊社ユーザーサービス係までご連絡ください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。

●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。

●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。

●修理品の運賃並びに修理費については以下のように規定させていただきます。

1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス

☎0120-010-660 (9:00～17:00)

Email:userservice@snowpeak.co.jp

株式会社スノーピーク

〒955-0147 新潟県三条市中野原456

Tel. 0256-46-5858 / Fax. 0256-46-5860


www.snowpeak.co.jp

MADE IN CHINA

ES-101 Celes LED Lantern



Thank you for purchasing a Snow Peak product. This product is a lighting device developed to be used in a tent or under a tarp. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

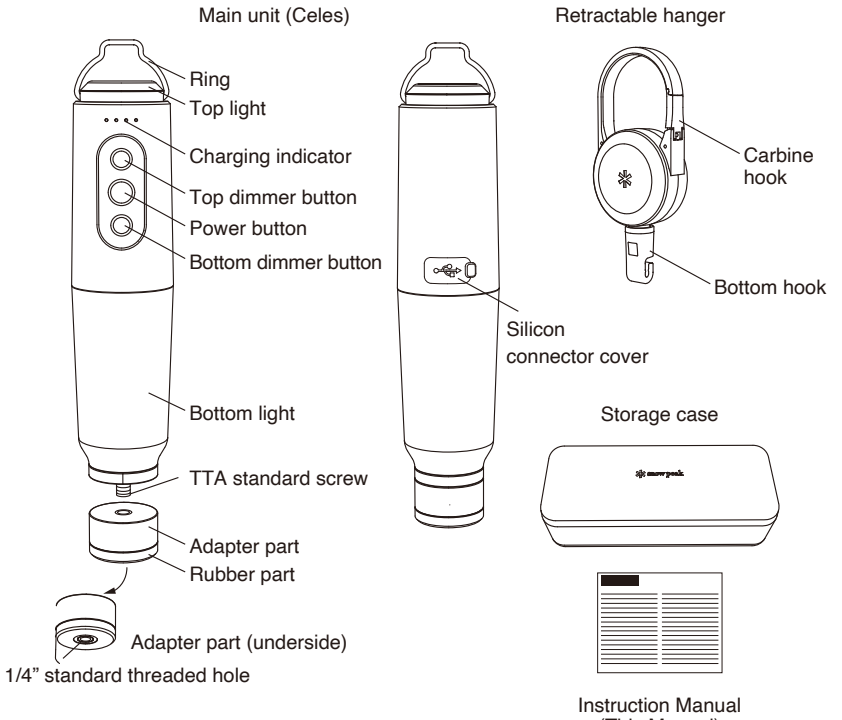Contents (Name of the Parts)	Specification
 Main unit (Celes) - Ring - Top light - Charging indicator - Top dimmer button - Power button - Bottom dimmer button - Bottom light - TTA standard screw - Adapter part - Rubber part - Adapter part (underside) 1/4" standard threaded hole Retractable hanger - Carbine hook - Bottom hook Storage case - Instruction Manual (This Manual)	●Contents: Main unit, Retractable hanger, Storage case ●Materials: Main unit / ABS plastic, polycarbonate plastic, silicone rubber, aluminum alloy, steel, and stainless steel, Retractable hanger / Zinc alloy, PC-ABS, and nylon, Storage case / EVA plastic ●Size: Main unit/ $\phi 43 \times 188$(h)mm(1.7"×7.4"(h)), Retractable hanger/ $37 \times 18 \times 90$(h)mm(1.5"×0.7"×3.5"(h)), Storage case/ $202 \times 80 \times 67$(h)mm(8.0"×3.1"×2.6"(h)) ●Power supply: Rechargeable lithium-ion battery ●Illumination duration(Fully Charged): 8 hours (top and bottom lights at maximum brightness), 20 hours (top and bottom lights at minimum brightness) ※Duration may vary depending on temperature, battery usage period, and other conditions. ●Charging time: 8 hours (USB-C) ※Use a charger that does not exceed 5 V/1 A. ●Illumination angle: Top light 180 degrees, bottom light 360 degrees ●Maximum Brightness: Top Light: 720lm (at brightness level 4), Bottom Light: 260lm (at brightness level 4) ※Brightness may decrease over time due to voltage drop. ●Dimming: 4-level dimming ●Water resistance: IPX4 (protected against splashing water from all directions) ●Light source color: Top light/ Warm White 3000K, Bottom light/ Warm White 3000K ●Operating temperature conditions: During operation: 0°C to 45°C (32°F~113°F), During charging: 0°C to 45°C (32°F~113°F), During storage: -20°C to 60°C (-4°F~140°F) ●Weight: 450g / 16 oz

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

DANGER / Misuse could easily result in a serious accident or death.

- Keep out of reach of infants and children. Use due caution to prevent playing with this product. It may result in accidental swallowing of parts or other injuries.
- Do not insert any metal object other than a USB-C cable into the USB-C connector terminal. It may cause unusual heat build-up, fire, and/or electric shock.
- Do not touch any contact or the USB-C connector with wet hands. It may

- cause unusual heat build-up, fire, and/or electric shock.
- Do not disassemble or alter this product. It may result in malfunctions and/or electric shocks. Altered products are not eligible for after-sales service.
- Children may only use this product under adult supervision of their guardian

WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- This product is not waterproof. Do not use this product in any place where it can be exposed to a large amount of water or be immersed in water. It may cause electric shock and/or malfunction.
- Do not use this product with the main unit covered with a cloth or other covering. It may result in electric shocks and/or fire.
- Immediately stop use if the rechargeable battery is leaking. Otherwise, electric shocks and/or fire may occur. If the leaked acid comes into contact with your skin or enters your eye, wash well with water and seek medical attention.
- Do not use this product under conditions that are outside of the operat-

- ing temperature range. It may cause battery failure.
- While charging, keep this product away from any place where the main unit can be exposed to splashing water. Otherwise, electric shocks and/or fire may occur.
- When charging, do not use any power supply that is not the rated voltage/ampereage for this product. Otherwise, electric shocks and/or fire may occur. (Use a charger with a rated voltage/ampereage of 5 V/1 A or less.)
- Read the "How to Use" section and ensure that the product is correctly setup before use. Failing to correctly set up this product may lead to injuries.
- Do not place this product near a burner or any other heat source, or where it can be exposed to high temperatures such as inside a car in hot weather. It may result in battery leakage, heat build-up, bursting, and/or fire.

CAUTION / Misuse could result in injury to the user and/or damage to property.


- Dropping or impacting this product can accumulate damage in the main unit, which can result in unexpected malfunction even during normal use. Prevent this product from sustaining shocks.
- Do not look directly into the light source. It may hurt your eyes.
- Do not suspend or walk around with this product with the power cable still connected. It may cause falling and/or malfunction.
- The supplied retractable hanger is only for ES-101 Celes. Do not use it for any other

- purpose.
- When operating the supplied retractable hanger, extend the rope only after attaching the main unit (Celes) to the bottom hook of the retractable hanger. The spring of the retractable hanger is stronger than similar commercially-available products. When the main unit (Celes) is not suspended, the rope sharply whirls back, which can create a risk of pinching your fingers or causing other injury.

FAQ

Problem	Cause	Action
Light does not turn on	No battery left	Connect the USB-C cable to the USB-C connector. The charging indicator should blink when the product is being charged.
Light turns off soon after turning on	Low battery	Connect the USB-C cable to the USB-C connector. The charging indicator should blink when the product is being charged.
Cannot be charged	Power supply failure or malfunction	Check whether the USB-C cable is correctly connected.
	Inappropriate power supply	Use a USB-C cable rated 5 V/1 A or lower. This product does not support USB-PD.
Symptom persists after trying all of the above	Product may be broken.	Stop using the product immediately and contact the Snow Peak User Service.

Charging the product

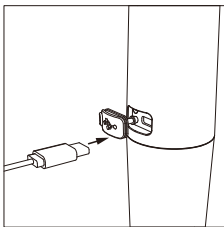


- You can charge this product by inputting a power supply compliant with the specified USB standard to the USB-C connector on the back side of the main unit. Open the connector cover on the back side of the main unit and insert the USB-C jack into the connector. When charging starts with no problem, the charging indicator blinks. While the USB-C connector is in use, place the product in a place protected from water. After use, close the connector cover.


	Charge level indicated by charging indicator 75% to 100% charge remaining
	55% to 75% charge remaining
	30% to 55% charge remaining
	5% to 30% charge remaining
	0% to 5% (orange light)

- The charging indicator shows remaining battery charge. When the remaining battery charge is 0% to 5%, the charging indicator light turns orange.

Operating the product

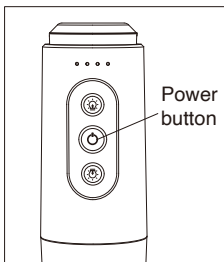


- Turning on the lights
When the lights are off, press and hold the power button for 0.5 seconds or more to turn on the top light. (Minimum brightness)
↓
Push the power button once (less than 0.5 seconds) Top light turns off, and the bottom light turns on.
↓
Push the power button once (less than 0.5 seconds) Top light turns on while the bottom light remains on.
↓
Push the power button once (less than 0.5 seconds)
Repeat
- Turning off the lights
When the lights are on, press and hold the power button for 3 seconds or more to turn off the lights.

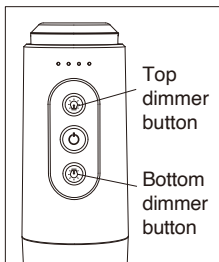


- Adjusting the brightness
[Top light] Push the top dimmer button to switch the brightness (4 levels). Brightness levels/ **Level 1:**(80lm), **Level 2:**(280lm), **Level 3:**(560lm), **Level 4:**(720lm)
[Bottom light] Push the bottom dimmer button to switch the brightness (4 levels). Brightness levels/ **Level 1:**(30 lm), **Level 2:**(90 lm), **Level 3:**(180 lm), **Level 4:**(260 lm)


※The values in parentheses indicate the brightness (lm) at the time of initial activation. Brightness may decrease over time due to voltage drop.

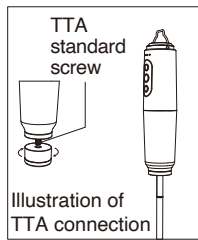

- Attaching to a TTA product: When you remove the adapter part, you will find a TTA-compliant screw (TTA screw), which you can attach to a threaded part of a TTA series product. (Do not attach to any other product.)

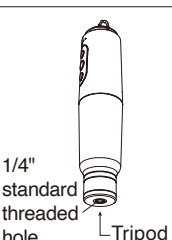


- Attaching to a tripod screw: The underside of the adapter part has a 1/4" standard threaded hole for attaching a tripod. (Check that the tripod screw matches the hole before attaching. Read the instruction manual for the tripod you are using in order to ensure safe use.)
*The adapter part cannot be attached upside-down. Forcing an upside-down attachment may result in product failure.

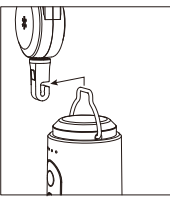

- Attaching to the retractable hanger: Hook the ring on top of the LED main unit to the bottom hook of the retractable hanger. Make sure that the ring on top of the main unit is fully engaged with the groove of the bottom hook.

Operating the retractable hanger

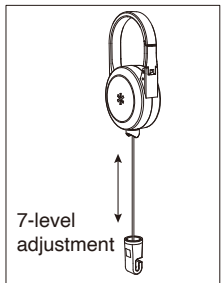

- The rope extends when you pull out the bottom hook of the retractable hanger. The rope can be adjusted to 7 length levels.
- Before operating the retractable hanger, be sure to attach the main unit (Celes) securely to the bottom hook of the retractable hanger. When stretching the rope, always hold the main unit (Celes) while you extend the rope.
- The rope locks when you extend it downward and return it slightly upward. Adjust the rope to the length at any of the 7 levels.
*Do not excessively pull the rope. It may cause the rope to break or a malfunction in the product.
- The carbine hook at the top of the retractable hanger can be hooked onto a ring inside the tent or shelter.

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- Thoroughly wipe off any dirt on the product using a damp, tightly wrung out cloth.
- If the USB-C terminal is dirty, clean it by wiping with a dry cotton swab or cloth.
- If the main unit gets wet, completely wipe off the moisture using a dry, soft cloth before storing.
- After use, store this product in the supplied storage case.
- If water entered the USB-C connector part or inside the main unit, stop using the product immediately and contact the Snow Peak User Service.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:1.Material deterioration caused by age. / 2.Damage caused by modifications or rough handling. / 3.Damage caused by inappropriate use not mentioned in the instruction manual. / 4.Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6.Damage caused by dust or rust. / 7.Damage and defects caused by dismantling the product. / 8.Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1.Reorient or relocate the receiving antenna. / 2.Increase the separation between the equipment and receiver. / 3.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. / 4.Consult the dealer or an experienced radio/TV technician for help.

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp